

Feature name	Active command	Reply	Cancel command	reply
Begin/blank before x10	Begin123456	Begin ok		
Admin number	Admin123456+*#	Admin ok	Nosadmin123456	Nosadmin ok
Sos number	Sos123456+*#	Sos number ok	Nosnos123456+*#	Nosnos number ok
Sosnum	Sosnum123456	Sosnum ok	Nosnum123456	Nosnum ok
Soscall	Soscall123456	Soscall123456 ok	Nosnoscall123456	Nosnoscall ok
Password	Passwrd123456+space+new	Password ok		
Sever ipk/port	Admrrp123456+space+ip+space+port	Admrrp ok		
APN	Apn123456+*# or local apn	Apn ok		
LBS	Addp=1	Open LBS	Addp=0	Close LBS
GPS	Gps123456	Upps ok	Nupps123456	Nupps ok
Time Zone	Timezone123456+space+8	Timezone ok	Timezone123456+space+8	Timezone ok
Language	Language123456+space+english	Switched to english		
Restore factory setting	Format	No reply		
Upload frequency(10-180s)	Upload123456+time	Upload ok		
Sleep working mode	Sleep123456+space+time	Sleep time ok	Wake up by manual press button	
Shock working mode	Sleep123456+space+shock	Sleep shock ok	Wake up by shock, sms, call, power button	
No sleep waiting mode	Nosleep123456	Nosleep ok		
Get location	Where or G123456+monitor	Google map link		
One way communication		Monitor123456	In this mode,you could hear the voice around you after call it	
Shock alarm	Shock123456	Shock ok	Nosshock123456	Nosshock ok

LKGPS Command List

[Home](#) » [LKGPS](#) » LKGPS Command List

For Models: LK209C, LK209, LK209D, LK210, LK208, LK209a

Default Password: 123456

Click to enlarge.

Feature name	Active command	Reply	Cancel command	reply
Begin/Blank before set)	Begin 23456	Begin ok		
Admin number	Admin 23456+space+number	Admin ok	Noadmin 23456+space+number	Noadmin ok
Sos number	Sos 23456+space+number	Sos number ok	Nosos 23456+space+number	Nosos number ok
Sosname	Sosname 23456	Sosname ok	Nososname 23456	Nososname ok
Soscall	Soscall 23456	Soscall 23456 ok	Nososcall 23456	Nososcall ok
Password	Password 23456+space+new	Password ok		
Sever ip&port	Adminip 23456+space+ip+space+port	Adminip ok		
APN	Apn 23456+space+local apn content	Apn ok		
LBS	Addip=1	Open LBS	Addip=0	Close LBS
GPRS	Gprs 23456	Gprs ok	Nogprs 23456	Nogprs ok
Time Zone	Timezone 23456+space+8	Timezone ok	Timezone 23456+space+8	Timezone ok
Language	Lag	Switched to english		
Restore factory setting	format	No reply		
Upload frequency(10-180s)	Upload 23456+time	Upload ok		
Sleep working mode	Sleep 23456+space+time	Sleep time ok	Wake up by sms,call,gprs button	
Shock working mode	Sleep 23456+space+shock	Sleep shock ok	Wake up by shock,sms,call,gprs button	
No sleep working mode	Noasleep 23456	Noasleep ok		
Get location	Where or G 23456#	Google map link		
One way communication	monitor	Monitor 23456	In this mode,you could hear the voice around units after call it	
Shock alarm	Shock 23456	Shock ok	NoShock 23456	NoShock ok

Shock call alarm	vibcall123456	Shock call alarm ok		
Shock alarm sms	vibsms123456	Shock alarm ok sms		
Move alarm(distance: 100-5000m)	Move123456+space+distance	Move ok	Nomove123456	Nomove ok
Overspeed alarm(50-120km/h)	Speed123456+space+max speed	Speed ok	Nospeed123456	Nospeed ok
Set a geo-fence (stockade)	stockade+123456+space+long,lat;long,lat	stockade ok	nostockade123456	Nostockade ok
Check setting of device	Param1	Software version,date,imei,ip&port,apn,web platform	Param2	Admin number,sos number,move distance,speed,etc
Status of device	status	Bat:4,gprs:1,gsm:3,gsm:1,acc:0,oil:0,power:1,s:0		