

Contents [[hide](#)]

- [1 LOFREE Touch100 Triple Mode Connection Mechanical Keyboard](#)
- [2 SPECIFICATIONS](#)
- [3 PRODUCT OVERVIEW](#)
- [4 PRODUCT DESCRIPTION](#)
- [5 Detailed user guide](#)
- [6 Multimedia keys](#)
- [7 Numeric keypad](#)
- [8 FCC Statement](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

LOfree

 
LOFREE Touch100 Triple Mode Connection Mechanical Keyboard



SPECIFICATIONS

- **Number of keys:** 100(hot-swappable Mechanical Switch)
- **Number of Multimedia Keys:** 12
- **Materials:** ABS Body, PBT Keycaps
- **Interface:** Type-C
- **Mode:** 24G & Bluetooth & Wired
- **Device Name:** Touch 100@Cofree
- **Dimensions:** 367mm*129mm*54.5mm

PRODUCT OVERVIEW

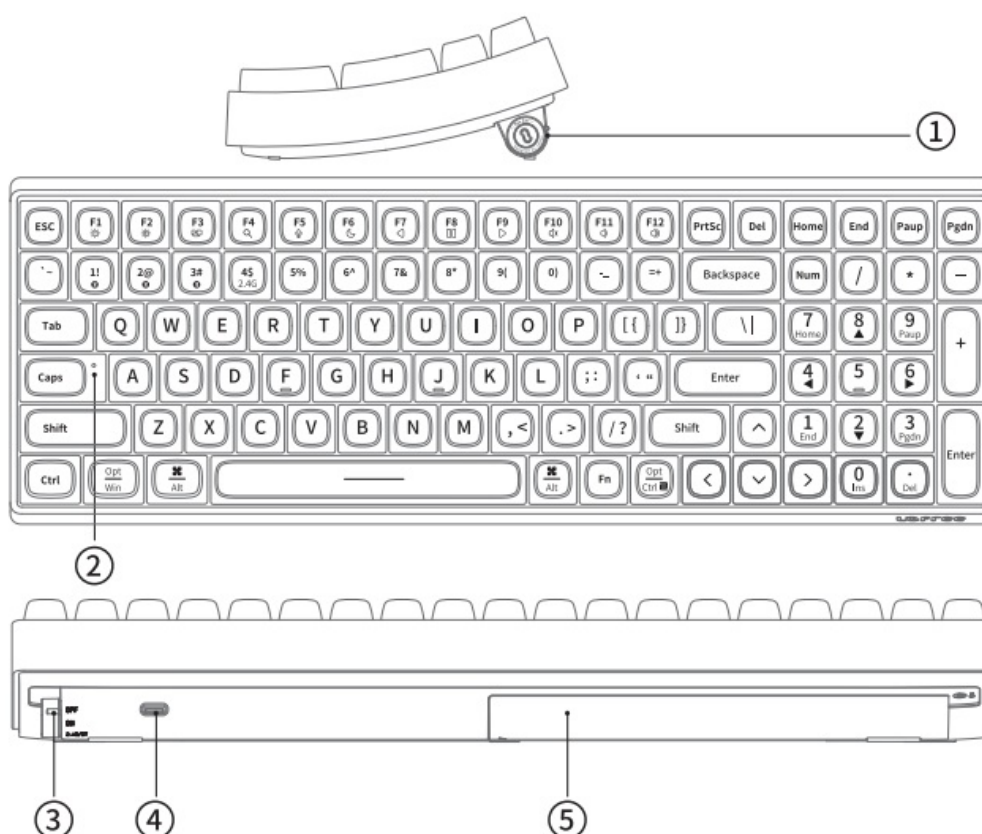

PRODUCT DESCRIPTION

1. Battery Indicator

- Wired Mode the indicator light is steady white.

Bluetooth Mode/2.4G Wireless USB mode.

When the power is lower than 20%, the indicator light flashes slowly in red;

When the power is lower than 3%, the indicator light flashes quickly then automatically turn off;

2. Status indicator (white light)

- Caps Lock Indicator

Solid LED light = The uppercase mode is turned on;

LED light off= The uppercase mode is turned off;

- Bluetooth Pairing Indicator(white light)

Flashing LED light = The device is in Bluetooth pairing mode.

When successfully paired, the Pairing Indicator turns on for 3 seconds, and then turns off again.

During each switch to a new device, the Pairing Indicator flashes quickly for 3 seconds, and then turns off again

- 2.4G Wireless USB Pairing Indicator

When the 2.4G receiver is started for pairing, the Pairing indicator flashes quickly for 3 seconds

When SUCCeSSfU lly paired, the Pairing Indicator turns on for 3 seconds, and then turns off again

3. Status switch

2.4G/BT:

2.4G / Bluetooth mode / ON: Wired mode / OFF: Off

4. Type-C interface

Wired mode interface.

 
5. Battery cover




Detailed user guide

2.4G Wireless USB mode


1. Swipe to the right to remove the battery cover

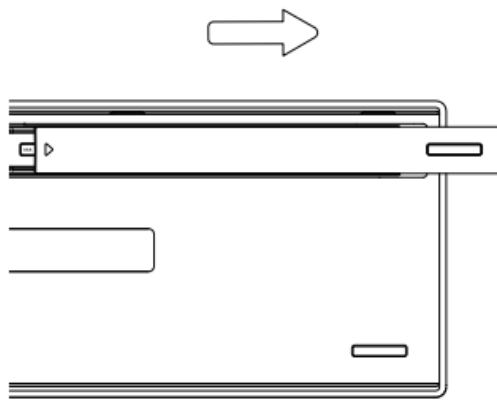

 2. Take out the 2.4G receiver

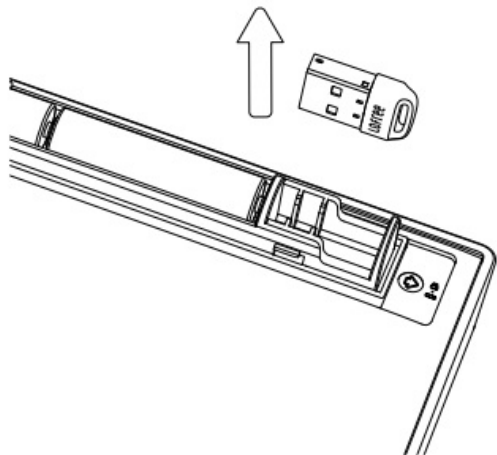

 3. Install the battery cover

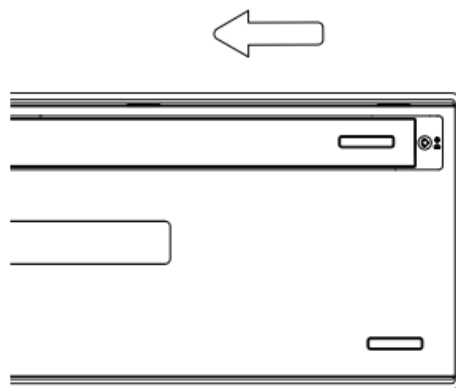


4. Insert the 2.4G receiver into the USB port of the computer




Note: MAC/IOS system devices do not support multimedia functions under 2.4G USB

connection

 
5. Switch the status to 2.4G/BT gear

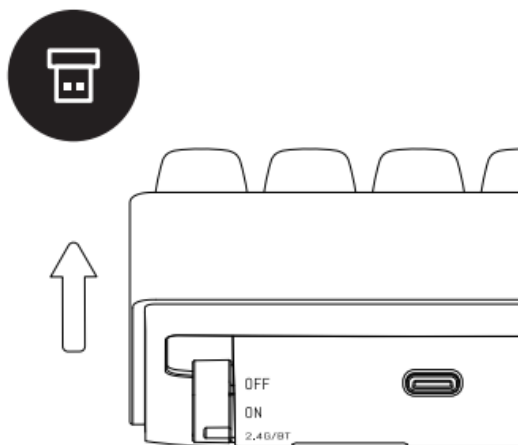

 
6. Press and hold Fn+4 to start 2.4G connection mode

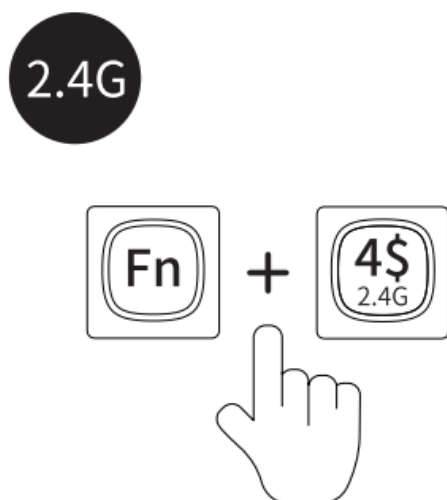

 7. The status indicator flashes quickly for 3 seconds then paired successfully

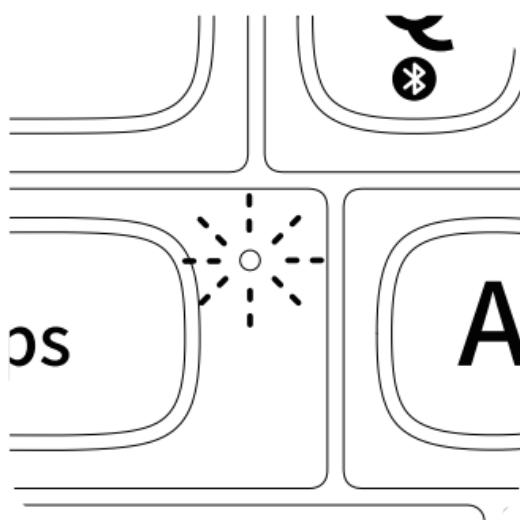


 8. This light turns on for 3 seconds then turns off again

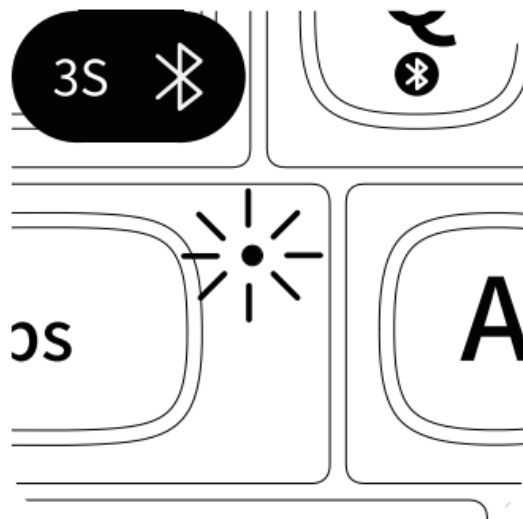


Bluetooth mode:

 1. Switch the status to 2.4G/BT gear

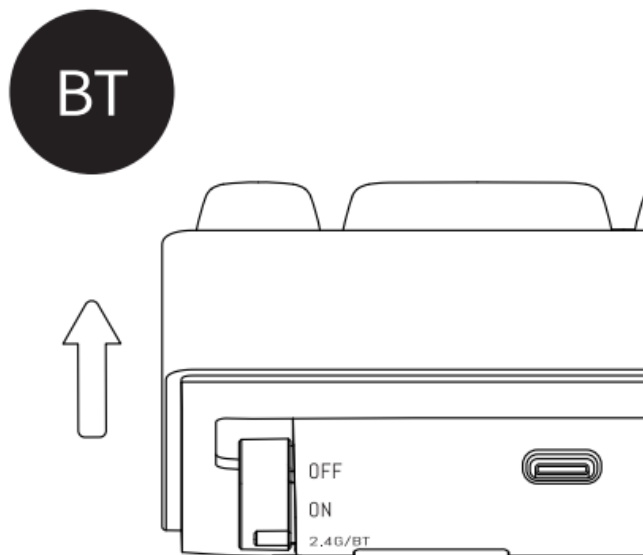

 
2. Long press Fn+1/ Fn+2/Fn+3 until the status indicator flashes slow

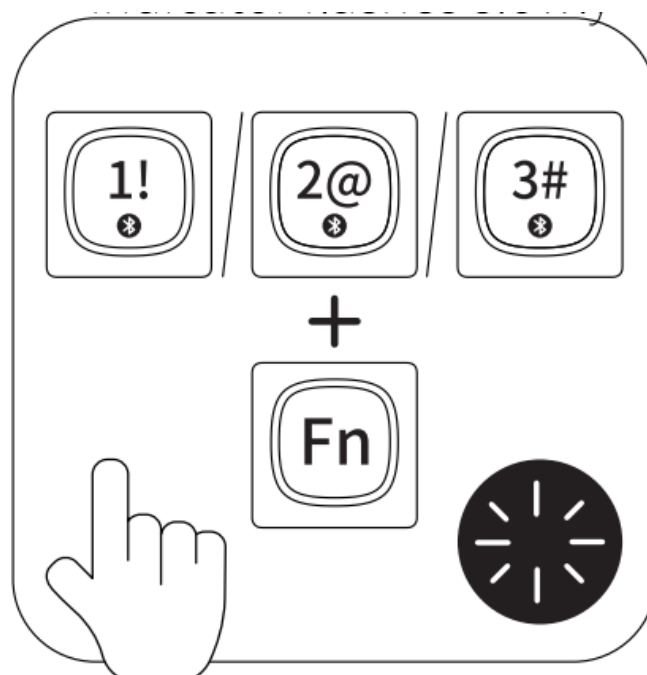


3. Turn on the Bluetooth function of your device, search for “Touch100@Lofree” and connect



 4. When successfully paired, the Pairing Indicator turns on for 3 seconds, and then turns off again

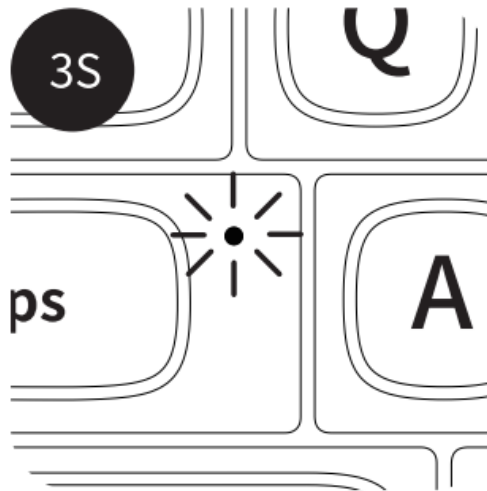


 5. Short press Fn+1/ Fn+2/Fn+3 to switch Bluetooth connected devices

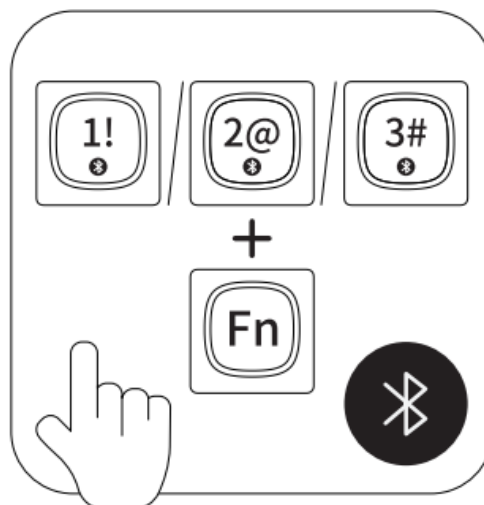


Wired mode

 1. Switch the status to the ON

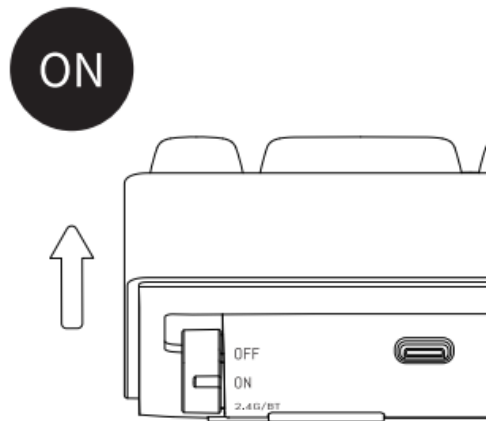

 2. connect the keyboard to computer with Type-C cable to complete the wired connection

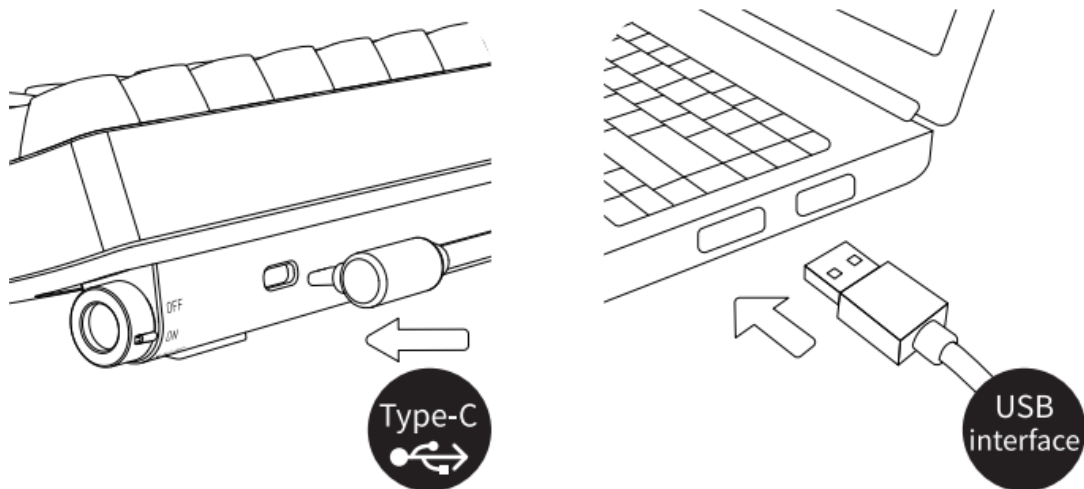


System Switch



Fn+N in the lower right corner is the key to trigger the corresponding system function of windows
Fn+M in the lower right corner is the key to trigger the corresponding system function of Mac

Multimedia keys

Fn+1 in the upper left corner... — the multimedia keys

Multimedia sign		Mac	Windows
FN+F1		Reduce brightness	Reduce brightness
FN+F2		increase Brightness	increase Brightness
FN+F3		Multi Screen	Multi Screen

Multimedia sign		Mac	Windows
FN+F4		Search	Search
FN+F5		/	ON/Cortana
FN+F6		/	Sleep Mode/ON
FN+F7		Previous Track	Previous Track
FN+F8		Play/Pause	Play/Pause
FN+F9		Next Track	Next Track
FN+10		Mute	Mute
FN+11		Volume Down	Volume Down
FN+12		Volume Up	Volume Up
FN+Opt/Ctrl		Menu Button	Menu Button

Multimedia key FN+5%/FN+6A. Some models of Mac

Note: system devices may not support the triggering of this multimedia key due to the problem of matching the connected device model and system version.

Numeric keypad

In Windows system

The numeric keypad function is enabled when NUM light is always on

The numeric keypad function is disabled when NUM light is off

In MAC system

The numeric keypad function is enabled by default, and the NUM key function and indicator light are invalid,

NAME AND CONTENT OF HAZARD-OUS SUBSTANCES IN PRODUCT:

Harmful Elements	Hazardous substances					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr, VI)	Polybrominat-ed Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Plastic Components	O	O	O	O	O	O
Circuit Board Assembly	O	O	O	O	O	O
Silicone Components	O	O	O	O	O	O
Spare Partss	O	O	O	O	O	O

This table is prepared in accordance with the provisions of SJ/T 11364.

The classification and marking of this product was performed in accordance with the EU directive 2011/65/EU and the revised directive 2015/863/EU.

- **O**: Indicates that the said hazardous substance contained in all the homogeneous materials for this component is below the limit requirement in GB/T 26572.
- **X**: Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572,

ENVIRONMENTAL PROTECTION INSTRUCTIONS:

The hazardous substances contained in the electronic parts of this product will not leak or change under normal use conditions fora period often years. Duringthesame period, the electronic components of this product witl not cause serious environmen.tal pollution orserious-damage to human health or property white the products are being used by the consumer.

According to the Chinese electronic industry standard SJ/T 11364-2014 and retated Chinese government regulations, this product and some of its internal or external components may have an environmentally friendly use period mark, depending on the component and component manufacturer, the mark lifespan on the product and its components may vary. The expiration date on the component takes precedence over

any conflicted or different UFUP [abelson the product.

Warning

- If the battery is not replaced properly, there may be leakage or explosion and personal injury hazards
- Do not use the battery when there is leakage, discoloration, deformation, or any other abnormality.
- Do not leave the battery in a discharged or unused state for a long time.
- Do not short-circuit the product
- Battery life varies with usage. Used batteries should be disposed of in accordance with local laws or thrown away in trash cans for recycling electronic devices.
- If any liquid accidentally enters the product, please immediately disconnect the power supply and remove the product. Continue to use the product may cause fire or electric shock. Please contact the agent or the nearest customer service center for inspection and maintenance.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation the and receiver,
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

 
1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation,

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment

Shenzhen Lofree Culture Co.,Ltd.
202-F8, F518 Idea Land, 1065 Bao Yuan Road, Shenzhen
Service 4006002083
www.lofree.com.cn
www.lofree.co

lofree.co
lofreeco Olofree.co

Documents / Resources

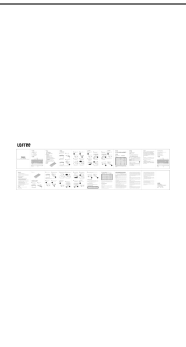	<p>LOFREE Touch100 Triple Mode Connection Mechanical Keyboard [pdf] U ser Guide</p> <p>Touch100, Touch100 Triple Mode Connection Mechanical Keyboard, Touc h100, Triple Mode Connection Mechanical Keyboard, Connection Mechani cal Keyboard, Mechanical Keyboard, Keyboard</p>
---	---

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.