



Contents [[hide](#)]

 
- [1 Logan R329451A00 Remote Control Device](#)
- [2 Key Chart](#)
- [3 Manual Bluetooth Pairing mode](#)
- [4 Volume Lock](#)
- [5 To Unlock Volume](#)
- [6 TV Brand Setup](#)
- [7 Audio Device Brand Setup](#)
- [8 Set Top Box Setup](#)
- [9 Direct Code Entry For TV's](#)
- [10 Direct Code Entry for Audio Devices](#)
- [11 FCC Statement](#)
- [12 Code Lists](#)
- [13 Frequently Asked Questions](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)

Logan

Logan R329451A00 Remote Control Device




Key Chart

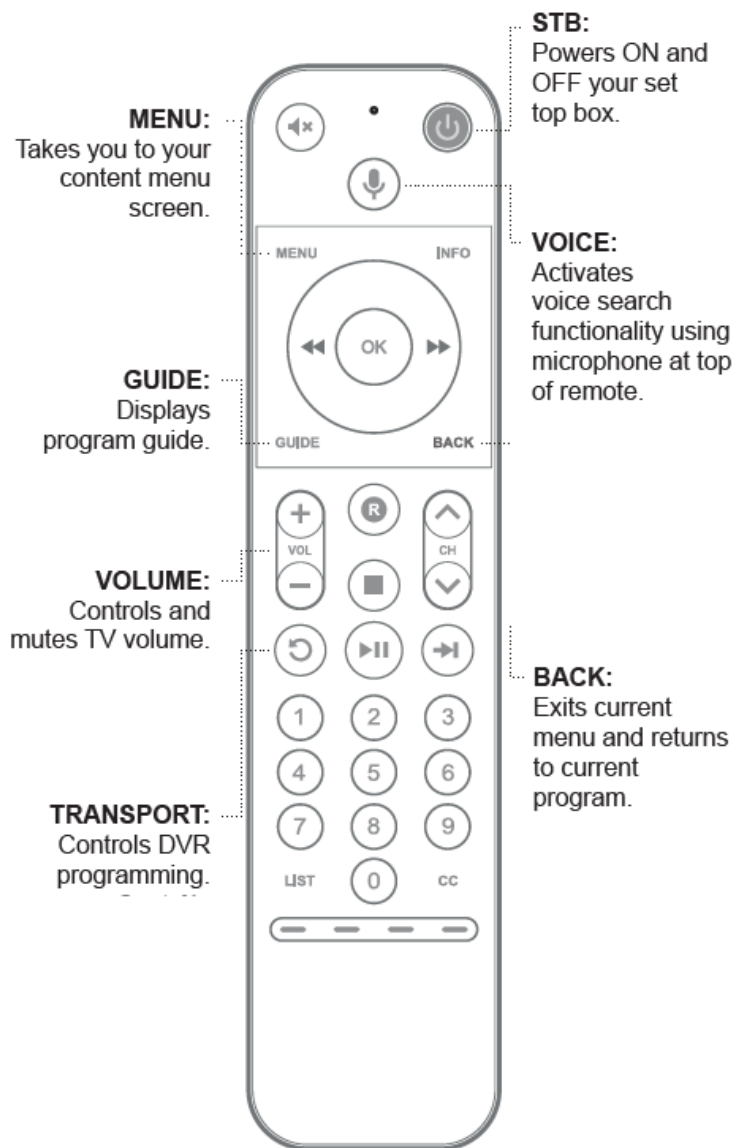


Manual Bluetooth Pairing mode

 Press and hold Play/Pause + OK until Feedback LED starts blinking.

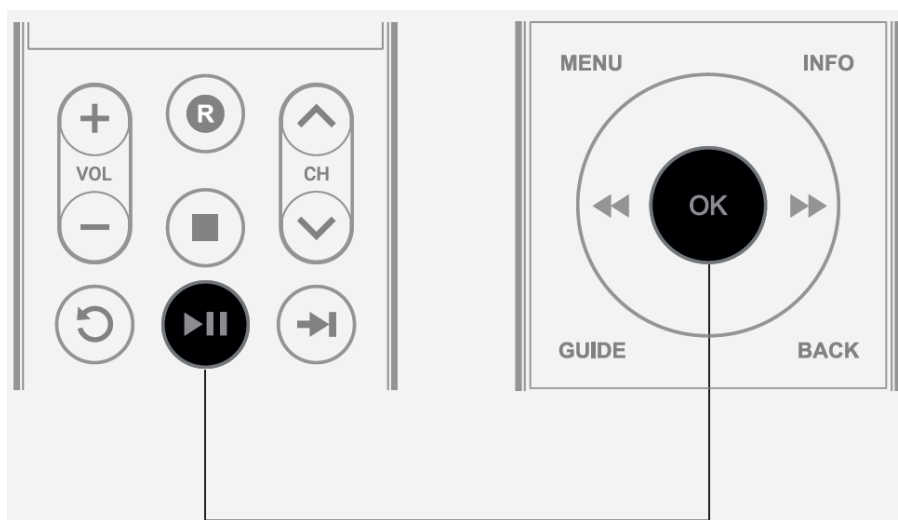

Blinking LED

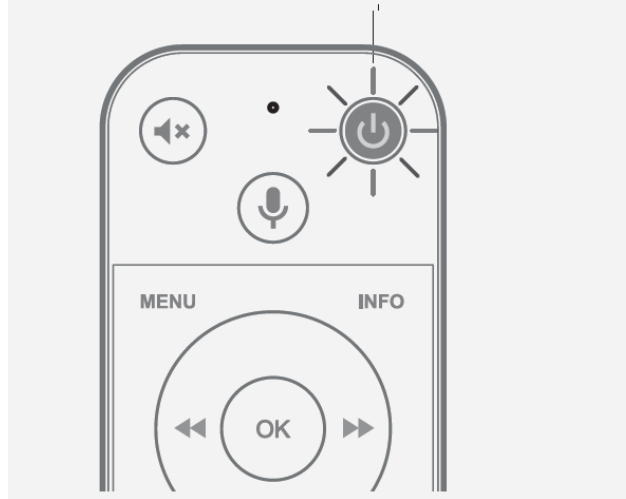 

Feedback LED will stop blinking to confirm pairing.



 
If Pairing is unsuccessful, hold OK + BACK for 3 seconds to clear any previous pairing information and feedback LED blinks twice.



Repeat Steps 1 and 2.

Volume Lock

- Press and hold OK/SELECT and MUTE until the feedback LED blinks twice.

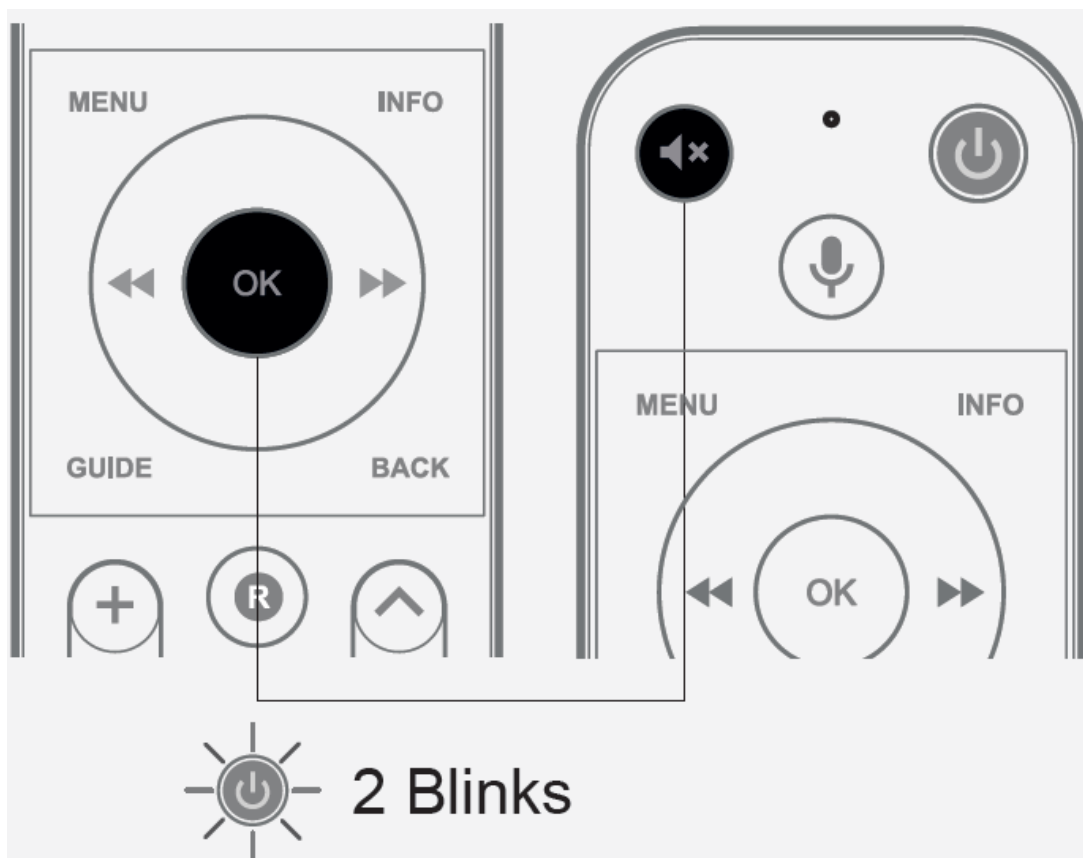

- Press Volume Up key.




- Enter Corresponding Device Digit to lock Volume to.

Device	Digit
STB	0

TV	1
Audio	2

 - The feedback LED will blink twice.

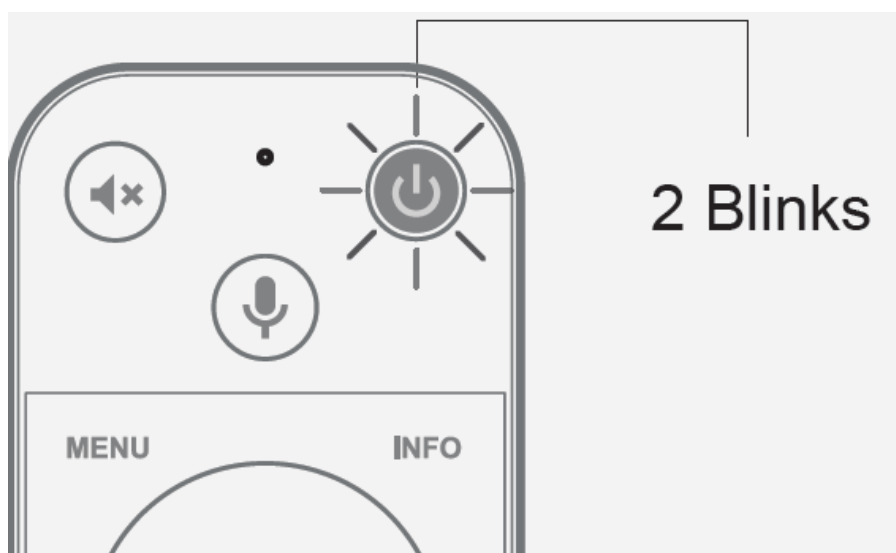

- Complete

To Unlock Volume

1. Press and hold OK/SELECT and MUTE until the feedback LED blinks twice.



2. Press the Mute key.



3. The feedback LED will display four blinks to indicate that the volume has now been unlocked.



4. Complete


TV Brand Setup

1. Turn on the TV that you wish to setup.
2. Find your device brand in the Brand Set / Simple Set table below. Note the number that corresponds to your device brand.

TV Brand	Digit
Insignia	0
LG	1
Panasonic	2
Philips	3
Samsung	4
Sanyo	5

Sharp	6
Sony	7
TCL	8
VIZIO	9

 3. Press and hold OK/SELECT and MUTE until the feedback LED blinks twice.

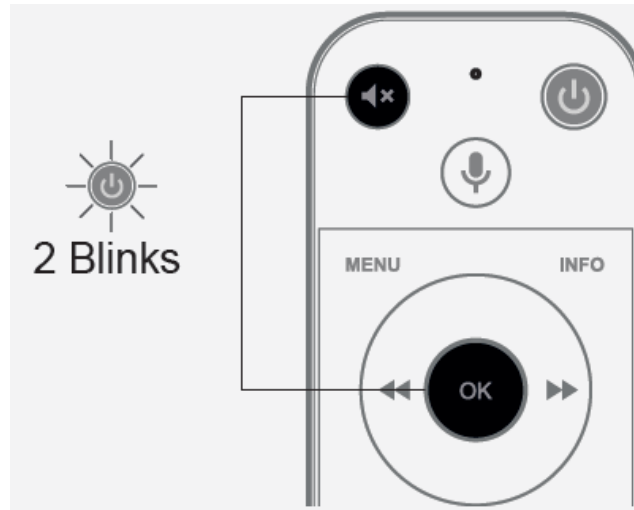


4. Press the OK/SELECT key once feedback LED blinks once.



5. Press digit key 1.

 
6.

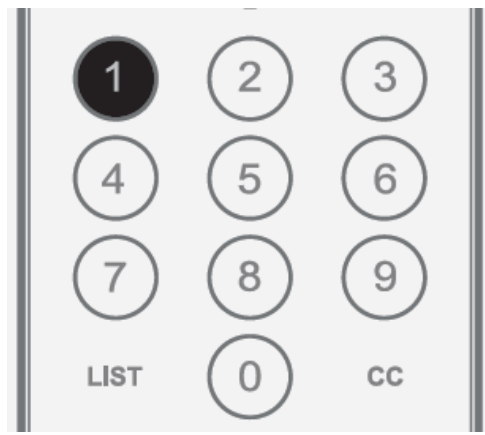

While pointing the remote at the TV, press and hold the number key for your brand that you noted in step 2.

Release the key as soon as the device turns OFF.

 LED will go OFF and will blink (ON-OFF) during every code transmitted.

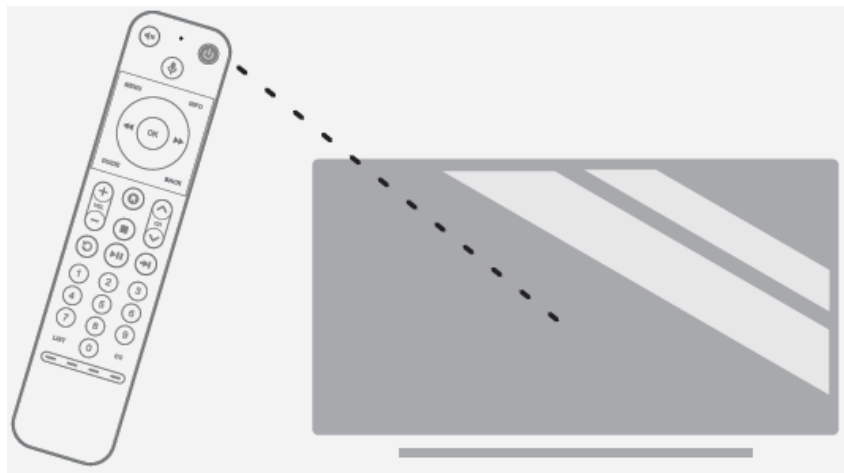

7. Press the Power key on the remote control to turn your device back ON.

If this does not work for your device, proceed to Direct Code Entry steps.




Audio Device Brand Setup

1. Turn on the device that you wish to setup.
2. Find your device brand in the Brand Set / Simple Set table below. Note the number that corresponds to your device brand.

Audio Brand	Digit
Bose	0
Denon	1
LG	2
Onkyo	3
Panasonic	4
Philips	5
Pioneer	6
Samsung	7
Sony	8
Yamaha	9

 3. Press and hold OK/SELECT and MUTE until the feedback LED blinks twice.

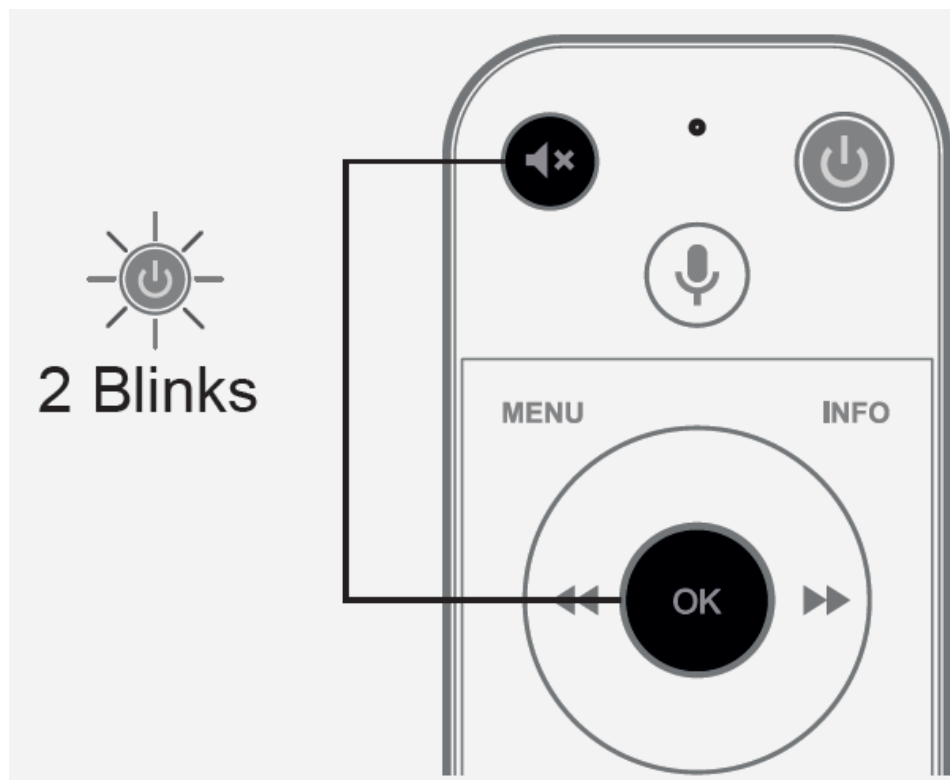


4. Press the OK/SELECT key once feedback LED blinks once.



5. Press digit key 2.

 
6.

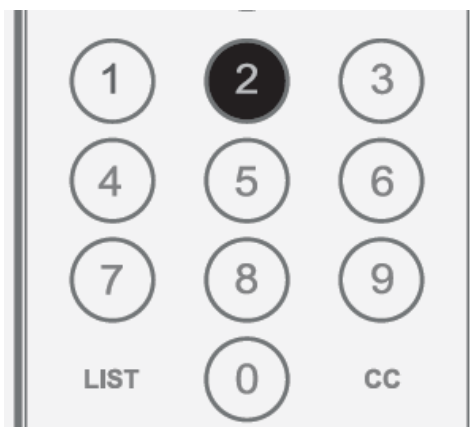

While pointing the remote at the audio device, press and hold the number key for your brand that you noted in step 2.

Release the key as soon as the device turns OFF.

 LED will go OFF and will blink (ON-OFF) during every code transmitted.

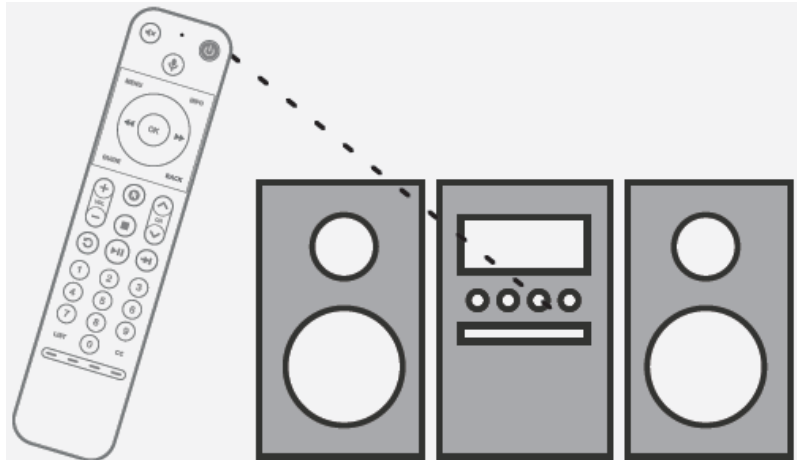

7. Press the Power key on the remote control to turn your device back ON.

If this does not work for your device, proceed to Direct Code Entry steps.



Set Top Box Setup


1. Turn ON the TV and STB.
2. Find your STB brand in the Quick Swap table below.
3. Press and hold the OK + Action Key that corresponds to your device brand until the LED blinks once confirming the selection.

Press the CH^ button to see if STB changes. If it does, setup is complete.


ACTION KEY	MANUFACTURER FABRICANT
1	Motorola
2	Entone
3	Amino
4	ADB

Direct Code Entry For TV's

 1. Turn ON the TV.
2. Refer to Code List for the brand setup code for the device you would like to control
(SEE REVERSE SIDE OF THIS MANUAL).
3. Press and hold OK/SELECT and MUTE until the feedback LED blinks twice.
- 4.

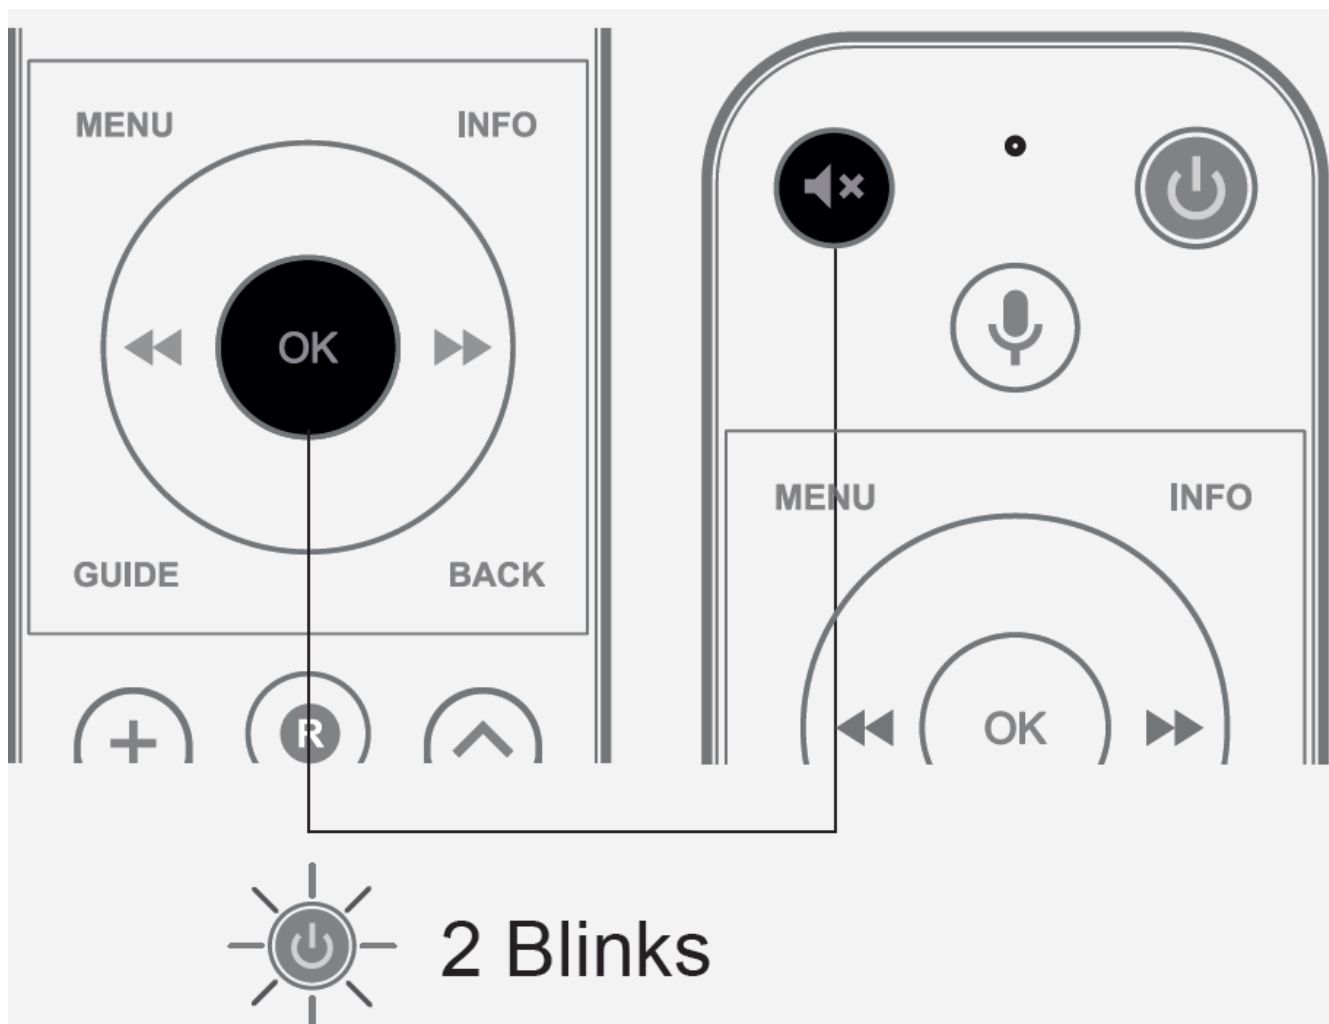

 Enter the 5 digit device code. The feedback LED will blink twice to indicate successful programming.

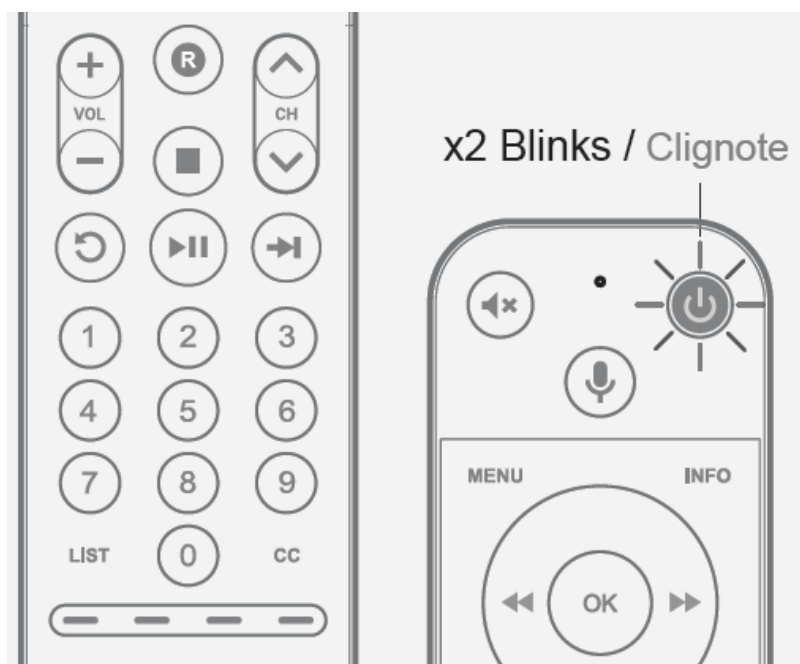


5. Press the Power key on the 6 remote control.




6. If your TV turns off, process is complete. If TV does not turn off, repeat steps 2-7 using the next code in the Chart.

Direct Code Entry for Audio Devices

 
1. Turn ON the Audio Device
2. Refer to Code List for the brand setup code for the device you would like to control (SEE REVERSE SIDE OF THIS MANUAL).
3. Press and hold OK/SELECT and MUTE until the feedback LED blinks twice.

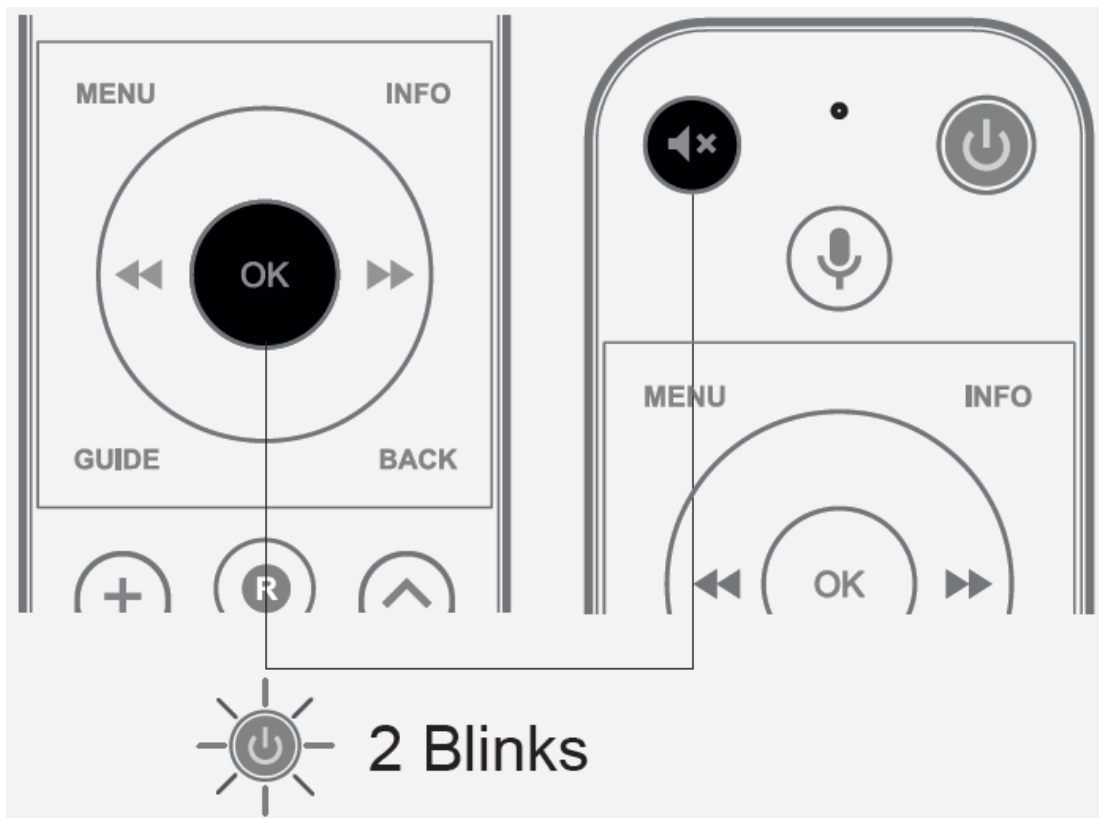

 4. Press digit key 2.

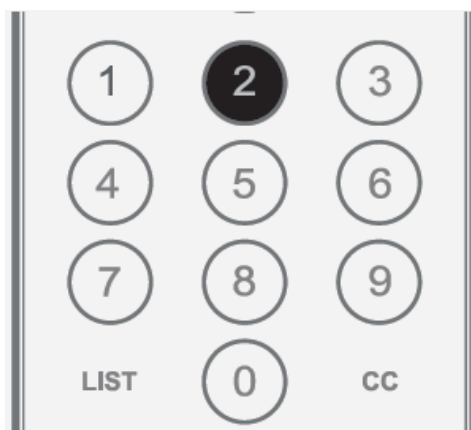

 5. Enter the 4 digit device code. The feedback LED will blink twice to indicate successful programming.

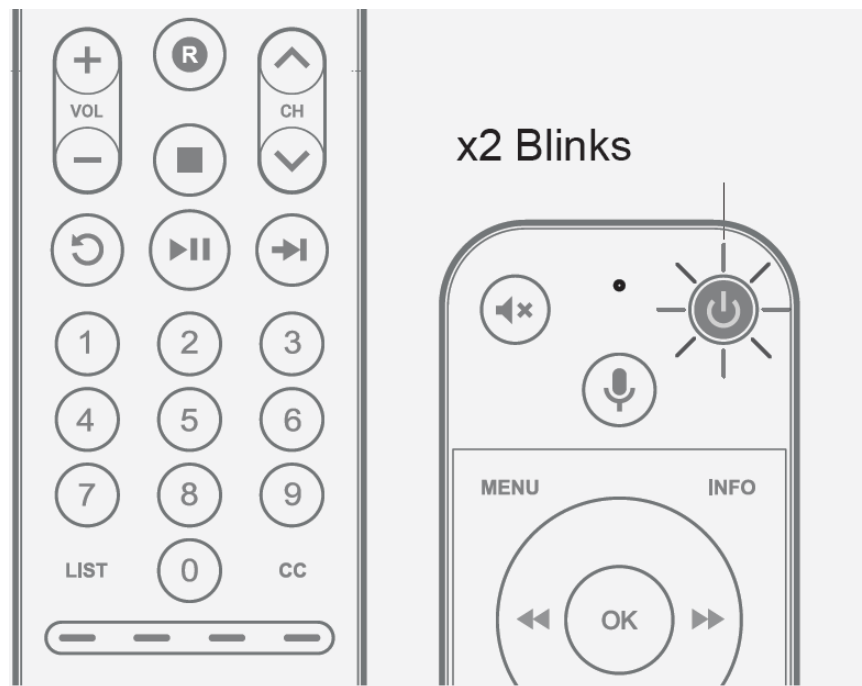

6. Press the Power key on the 6 remote control.



7. If your Audio Device turns off, process is complete. If device does not turn off, repeat steps 2-7 using the next code in the Chart.

Getting Started

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged or try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase or decrease the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced remote control/ TV technician for help.
- It is strongly recommended that the TV be plugged into a separate wall outlet.

This equipment has been verified to comply with the limits for a Class B computing device, pursuant to FCC Rules. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

Industry Canada Statement

For Industry Canada Industry Canada Statement This device complies with RSS-210 of

the Industry Canada Rules.

Code Lists

TV

- ad notam 14382
- Advent 13407
- Affinity 13717, 13577, 13716
- Aiwa 13332
- Akai 13332
- Amazon 13579
- Amazon-Fire TV 13579
- AOC 11589, 11365, 12014, 12087, 12402
- Apex Digital 12397
- Ario 12397
- Asus 12800
- Asustek 12800
- Atak 12397
- Atvio 13636, 13879, 14398
- Atyme 12746
- Audiovox 11865, 11892, 11517, 13407
- Auria 12014, 13519, 12087, 12855
- Aurus 15532
- Aventura 10171
- Avera 12397, 12049
- Avol 13382, 12735, 15463
- Axess 13593, 14888
- BGH 13879
- Blu:sens 12735
- Bolva 13579, 12397
- Broksonic 11892, 13382
- Caixun 14053
- Calypso 13519
- Citizen 11892

- Coby 13519
- Contex 14053
- Continu.us 11840
- Craig 13423, 11687
- Curtis 12855, 13577, 12397, 13895, 12352, 11687, 13636, 13382, 13717, 13899, 14093
- Daewoo 13879
- Digitrex 14207
- Disney 11892
- Durabrand 10171, 13879
- Dynex 12049
- Electrograph 11755
- Electrohome 11670
- Electron 12397, 12855
- Element 13559, 13579, 14398, 11687, 13519, 15484, 12746, 11864, 11524, 14740
- Element- Fire TV 13579
- Element-Roku 14398, 14740
- Element-Xumo 15484
- Elite 13867, 11457
- Emerson 11864, 10171, 13519, 13559
- Envision 11589, 11365, 12087, 12014
- Epworth 13332
- EQD Auria 12014, 12087
- ESA 10171
- eTec 12397
- Exorvision 13579
- EXuby 13593
- Favi 13382
- Fluid 13579
- Funai 10171, 11864
- Furrion 13332, 14093, 11840
- Gateway 11755
- GFM 11864, 10171, 11865
- GoldStar 14542

- GPX 13980, 13977
- Haier 11840, 13519, 13382, 13899, 14398
- Haier-Roku 14398
- Harper 13332
- Hewlett
- Packard 11840, 12800
- Hightong 14542, 14820, 15219
- Hisense 13519, 14740, 14398, 15566, 15484, 11660, 13579, 15677, 13382
- Hisense-Fire TV 13579
- Hisense-Roku 14740, 14398
- Hisense-Xumo 15484
- Hitachi 15076, 14398, 13382, 13332, 12434
- Hitachi-Roku 14398
- Hiteker 13382
- HKPro 13879, 12434, 15348
- HP 11840, 12800
- Hyundai 11524
- iFFALCON 12434
- iLo 11990, 10171
- InFocus 14398, 15532
- InFocus-Roku 14398
- Initial 11990
- Insignia 12049, 13579, 11892, 11204, 11840, 11517, 10171, 11660, 12417, 13407
- Insignia-Fire TV 13579
- Insignia-Roku 12049
- iSymphony 13382, 13094
- JCM 12746
- JVC 11601, 14398, 11524, 14053, 11670, 13382, 15683, 11892, 13879, 14542, 15348
- JVC-Fire TV 15683
- JVC-Roku 14398
- Kalley 13879
- KC 14182
- KDS 11687
- Kenmore 13579

- Kodak 14542
- Kolin 13519
- Legend 12397, 12352, 11840
- LG 11840, 14119, 12864, 13401, 14398, 13519
- LG-Roku 14398
- Lloyd's 13382
- LodgingStar 13147
- MAG 11687
- Magnavox 12372, 11990, 14398, 11365, 11755, 10171, 14740
- Magnavox- Roku 14398, 14740
- Makena 11524
- MarQ 14542
- Maxent 11755
- MB Quart 11865
- Memorex 14686, 11892, 11670, 11687, 12049
- Mintek 11990
- Misakae 10171
- Misakai 10171
- Naxa 14093, 12735, 12397, 13382, 13423, 14888
- NEC 13899
- NetTV 11755
- Nexus 11892, 13519
- Nexus
- Electronics 13519
- Noblex 15566, 13519
- Norcent 11365, 12087, 11589, 13332
- NuVision 12397
- oCOSMO 13899
- Ölevia 11610, 13519
- Onn 14398, 15348, 12434, 13024, 15118
- Onn-Roku 14398
- Orion 11670, 11892
- Panasonic 11480, 15453, 10171, 14230
- Philco 10171, 13879, 15377

- Philips 12800, 12372, 14398, 11990, 10171, 11755, 11365, 12227
- Philips
- Magnavox 10171
- Philips-Roku 14398
- Pioneer 11457, 15484, 13579, 12434
- Pioneer-Fire TV 13579
- Pioneer-Xumo 15484
- Planar 11589, 12014
- Polaroid 11687, 11517, 11524, 13382, 12434
- Prima 12049 ,13519
- Proscan 13577, 13382, 12746, 13519, 13717, 13332, 14053, 14494, 13636, 13579, 13895, 11687, 13899, 14483, 14398, 15229, 14207, 14686, 11524, 14093, 15377
- Proscan-Roku 14398
- Proview 11687
- QFX 13593
- QuantumFX 13593
- Quasar 14207, 13382, 13899, 15221
- RCA 12247, 12746, 12434, 13577, 11840, 14398, 13382, 14494, 14740, 13332, 13717, 14053,13895, 13519, 13579, 14394, 13636, 12855,14079, 15377, 15617, 13147, 13899, 11687, 14483, 11865, 14093, 11670, 15229
- RCA-Roku 14398, 14740
- Roku 14398
- Sampo 11755
- Samsung 12051, 13993, 15386, 12557, 15443
- Sansui 11892, 11670, 14053, 10171, 13559
- Sanyo 11142, 14740, 12049, 11480, 11517, 11892, 14398
- Sanyo-Roku 14740, 14398
- Sceptre 13899, 13332
- Sears 10171
- Seiki 13579, 13560, 11524, 13559, 13382, 15121
- Sens 11865
- Seura 14751
- Sharp 12360, 13519, 14740, 12402, 11407, 11670, 14398, 15566, 13867
- Sharp-Roku 14740, 12360, 14398

- Sigmac 13423
- Silo 13899, 14494, 14182
- Silo Digital 13899, 14494, 14182
- SkyVue 14135, 12360
- Skyworth 14542, 14820, 15219
- Smart Tech 14053
- Sony 10810, 14665, 13519
- Spectroniq 11687
- Speler 13879, 12434
- Squareview 10171
- SunBriteTV 11610, 13899
- Sungpo 12360, 13519, 14740, 12402, 11407, 11670, 14398, 15566, 13867
- Superscan 10864, 10171
- Supersonic 13593, 12397, 14888, 13519, 13147
- Supra 14542
- Sylvania 10171, 11864, 14494, 12746, 13577, 14053
- Sylvox 11524
- Symphonic 10171
- Syntax 11610, 13519
- TCL 14398, 12434, 13579, 13879, 15076
- TCL-Fire TV 13579
- TCL-Roku 14398
- Technicolor 13577, 14494
- Toshiba 11524, 13579
- Toshiba-Fire TV 13579
- Tyler 14888
- Upstar 14182, 13899
- V7 Videoseven 12087
- Vantiva 13577, 14494
- Venturer 11865
- Vidao 12397
- Videoseven 12087
- Viewsonic 12014, 12087, 13706, 10864, 11755, 12049, 11840, 10885, 11892, 11365
- Viore 13382, 12352, 13094, 14829, 12397

- Vios 11524
- VisionQuest 11687, 12397
- VIZIO 13758, 12707, 10864, 10885
- Vizzion 14542
- W Box
- Technologies 14686
- Westinghouse 13899, 13579, 14398, 13382, 10885, 13559, 13094, 12397
- Westinghouse- Fire TV 13579
- Westinghouse- Roku 14398
- Wyse 11365
- Xoceco 12049, 13519
- Yamaha 11407
- Zenith 11840, 11365, 12864, 13401

AUDIO(ARM)

- Acoustic Audio 24683
- AmazonBasics 22454
- AMC 21077
- Anker 25578
- Apex Digital 24334
- Arcam 22114, 22241
- Arvani 22454
- Audio Control 22114
- Audio Solutions 23622
- AudioControl 22114
- Audioengine 24311
- Aura 22454
- Auvio 25106
- Axess 24095
- BlitzWolf 25861
- BÖHM 24280
- Bose 21629, 21933, 23708, 24307, 25230, 23706, 23832, 21355, 25842
- Boston

- Acoustics 23698
- Carver 22114
- Curtis 23942
- Definitive
- Technology 24026, 23645
- Denon 22857, 23347, 21360, 23643, 25178, 24025, 22279, 22502, 25329
- Dynex 22929, 23951
- Edifier 25140
- Emotiva 23763
- Enclave Audio 24800
- Episode 25107
- Gateway 21077
- GE 22611
- General Electric 22611
- GPX 25103
- Haier 23516
- Halcro 22114
- Harman/ Kardon 22241, 20110, 23391, 25343, 23756, 23517
- iLive 24621
- Inkel 21077, 23136
- Innovative
- Technology 23848
- Insignia 23951, 22929, 22472, 22545, 24424, 21077
- Integra 21805, 22503, 23992
- JBL 23756, 22287, 22241, 23391, 23535, 20110
- JVC 21676, 22969
- Kenwood 21570
- Klipsch 24941, 24198, 25187, 24200, 25152
- LG 23217, 22197, 22676, 22284, 25108
- Magnavox 21269, 21514, 24176, 23282
- Marantz 22114, 21269, 23347
- Martin Logan 23526, 24271
- McIntosh 22114
- Nakamichi 21570

- Onkyo 21805, 22503, 24041, 23984, 23992, 25094
- Onn 25041, 25412, 25416, 25042, 25414, 25415
- Outlaw 23973
- Panasonic 21633, 21676
- Paradigm 24536, 23526
- Peerless 25153
- Peerless-AV 25153
- Philco 21269
- Philips 21269, 24105, 22459, 23282, 22986, 22327, 22675, 21514, 24382, 25459, 25716
- Pinnacle
- Speakers 23774, 23728
- Pioneer 21935, 23057, 23956
- Polk Audio 23429, 22114, 25627
- Proficient 23661
- Pyle 24242
- RCA 22611, 23969, 22544, 25490, 21511, 21935
- Roku 25495, 25292
- Samsung 25343, 21868, 23154, 25295, 22241
- Samsung Harman /Kardon 25343
- Sanyo 24176, 23282
- Sennheiser 25330
- Sharp 23736, 23097
- Sherbourn 23763
- Sherwood 21077, 23136
- Sherwood
- Newcastle 21077
- SnapAV 25107
- Sonos 23919
- Sony 22172, 21622, 23700, 22582, 23487, 23585
- Soundcore 25578
- SpeakerCraft 23661
- Sunfire 21570
- Sungpo 23736, 23097

- TaoTronics 24672, 25412
- TCL 24672, 25385
- Teac 24242
- Technics 21633
- Toshiba 23627
- Ultimea 25847, 25759
- VIZIO 22454, 25095
- VMAI 25759
- Wohome 25515, 25759
- Yamaha 22467, 20176, 23283, 21797
- Zenith 22197
- ZVOX 22332, 23913, 22334, 25698



https://urcsupport.com/urc_product/innovative-systems-logan/

Frequently Asked Questions

- **Q: How do I reset the pairing information?**

A: To reset pairing information, hold OK + BACK for 3 seconds until the feedback LED blinks twice.

- **Q: How do I unlock the volume control?**

A: Press and hold OK/SELECT and MUTE until the feedback LED displays four blinks to indicate that the volume has been unlocked.

Documents / Resources

	Logan R329451A00 Audio Device [pdf] User Manual R329451A00, MUG29451AF-A01, R329451A00 Audio Device, R329451A00, Audio Device, Device
---	---

References

- [User Manual](#)

🔖 device, Logan, R329451A00, Remote Control, user

📁 LOGAN manual

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.