



Logicbus CLS-1 UltraSonic Clear LabelSensor Instruction Manual

[Home](#) » [Logicbus](#) » Logicbus CLS-1 UltraSonic Clear LabelSensor Instruction Manual 



CLS-1 UltraSonic Clear LabelSensor Instruction Manual



Contents

- 1 Specifications
- 2 Connections and Dimensions
- 3 Setup Instructions
- 4 Label Position
- 5 Press Menu for Detailed Setup
- 6 How to Specify
- 7 Advanced Options
- 8 Remote Input Signals
- 9 Documents / Resources
 - 9.1 References

Specifications

SUPPLY VOLTAGE

- 12 to 30 VDC
- Polarity Protected

Note: For use in Class 2 Circuits

CURRENT REQUIREMENTS

- 95mA @ 12 VDC, 45mA @ 30 VDC

DIGITAL OUTPUTS

- (1) NPN and (1) PNP open collector output 150mA Max; <2V Residual Voltage
(**Note:** On CLSC-1M8, NPN & PNP are software selectable).
- All outputs are continuously short circuit protected

REMOTE AUTOSET INPUT

- Momentary sinking or sourcing input; 1.2mA max; Software Selectable

DIAGNOSTIC INDICATORS

- OLED Graphic Display – Includes Contrast Indicator, Numerical Display, Set Point and Trigger Point, and all sensor options and modes.
- Red LED Output Indicator– Illuminates when the sensor's output transistors are "ON".
Note: If output LED flashes on power up, a short circuit condition exists.

PUSHBUTTON CONTROL

- Three (3) push button controls
- Gap (for Gap AUTOSET)

- Label (for multi-layered labels)
- Menu (for accessing Options)

HYSTERESIS

- Dynamic – adjusted by AUTOSET

RESPONSE TIME

- 200µs

REPEATABILITY

- 125µs

AMBIENT TEMPERATURE

- 4°C to 50°C (39°F to 122°F)

RUGGED CONSTRUCTION

- Chemical resistant, high impact Aluminum housing
- Waterproof ratings: NEMA 4X, 6P and IP65
- Conforms to heavy industry grade CE requirements

THRESHOLD SET

- 1-Point, 2-Point, or Dynamic AUTOSET; manually or remotely.

THRESHOLD ADJUST

- Manual or AUTO Adjust

OUTPUT TIMERS

- On Delay, Off Delay, One Shot, or Debounce (Advanced Option, software selectable).


CONNECTOR

- M12 5-Pin, M8 4-Pin, or 6' (1.8m) Shielded Cable

RoHS Compliant
Product subject to change without notice

Connections and Dimensions


Ultrasonic Clear Label Sensor

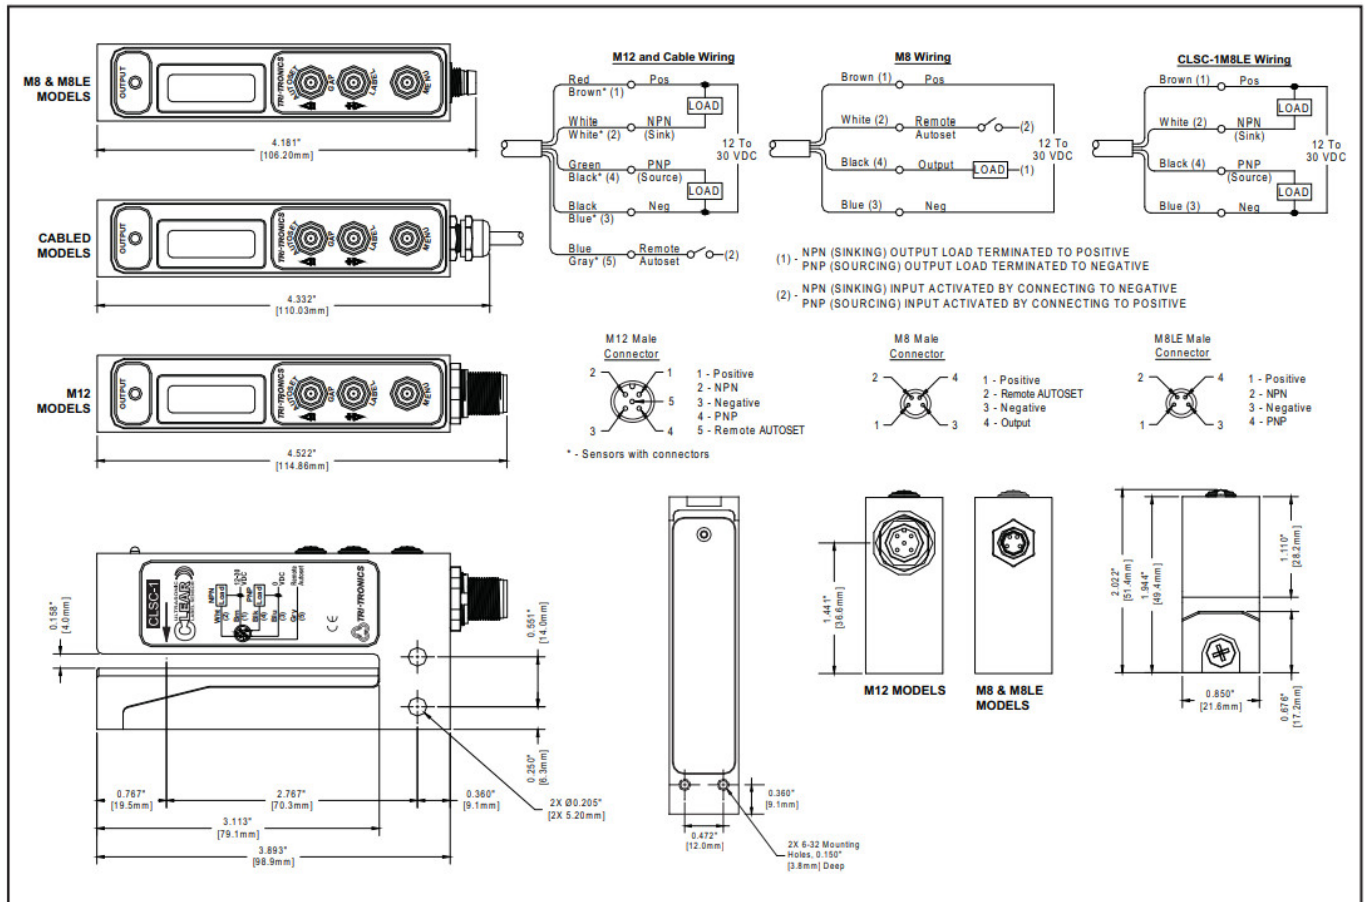

070-0210 Rev. 2



Setup Instructions

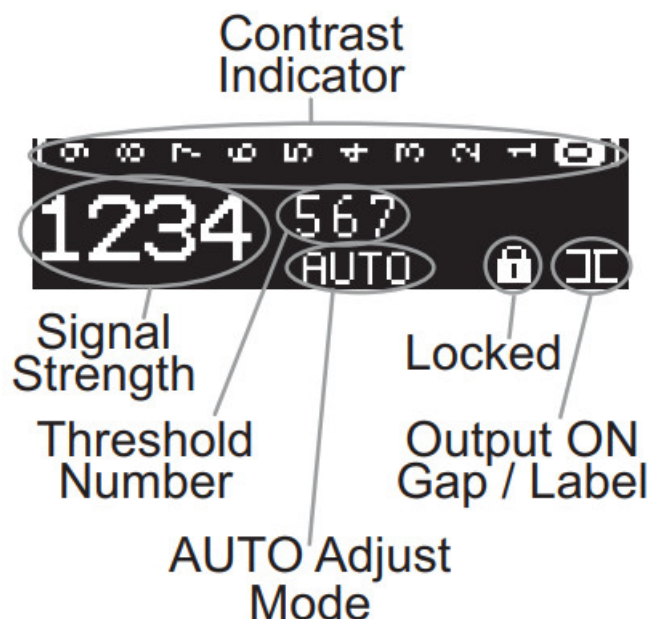


Simple Setup Start ➡ Put the Gap in view, press and hold the AUTOSET/GAP button for two seconds, "Gap Set" will be displayed when complete. This will result in a perfect setup 99% of the time. If you have any false triggers, put the Label in view, push and hold the AUTOSET/LABEL button for two seconds, "Label Set" will be

displayed when complete. This two-point setup will create a new threshold setting resulting in a more consistent signal span between web and label.

Note: Sensor is shipped with a protective plastic covering for the display. Remove protective covering for clearer viewing.

Label Position

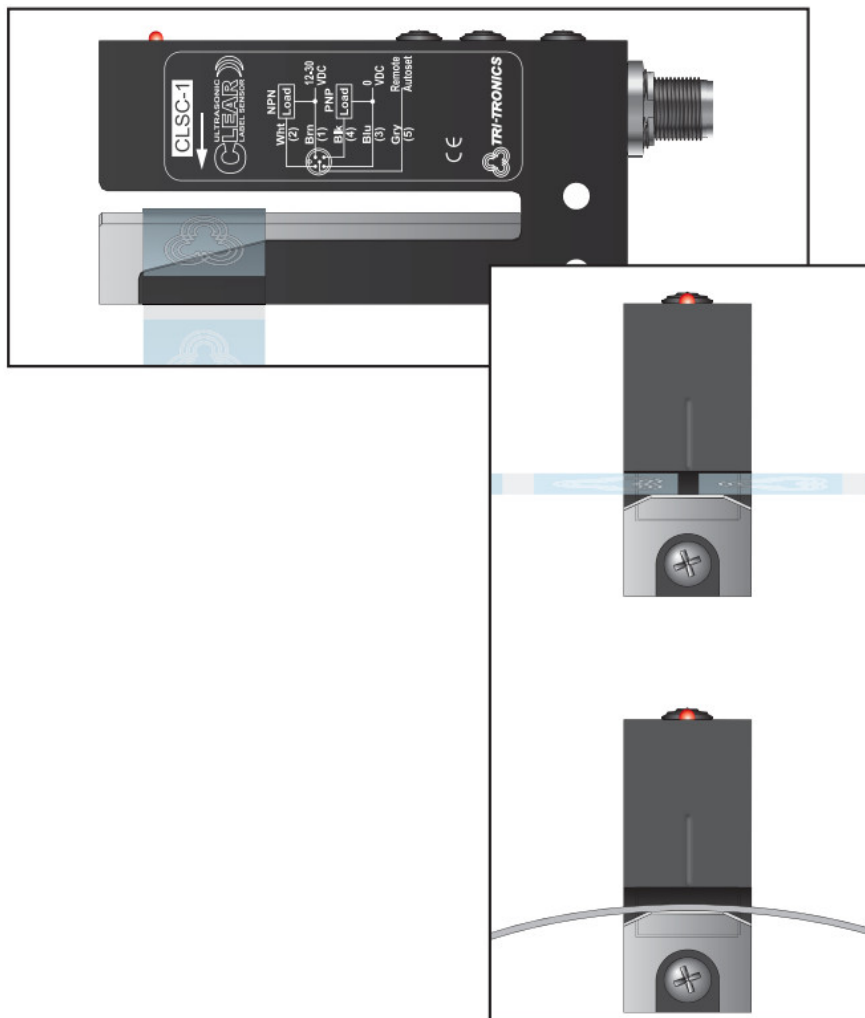


Align Label to Arrow (above) Place the label web so that it is centered on the arrow. The arrow is where the transducers are aligned.

Align Gap to Line (right top) Place label gap in center of the sensor using the alignment line as shown on right. When viewing from the top of the sensor, use the output LED to center label gap.

Gentle Tension (right bottom) Place label webbing so that it slides along the bottom of the sensor gap plate. This will ensure a more consistent setup and performance.

Momentarily press either the Δ or ∇ button to toggle orientation.

5. **Timer Mode** (**Advanced Option)

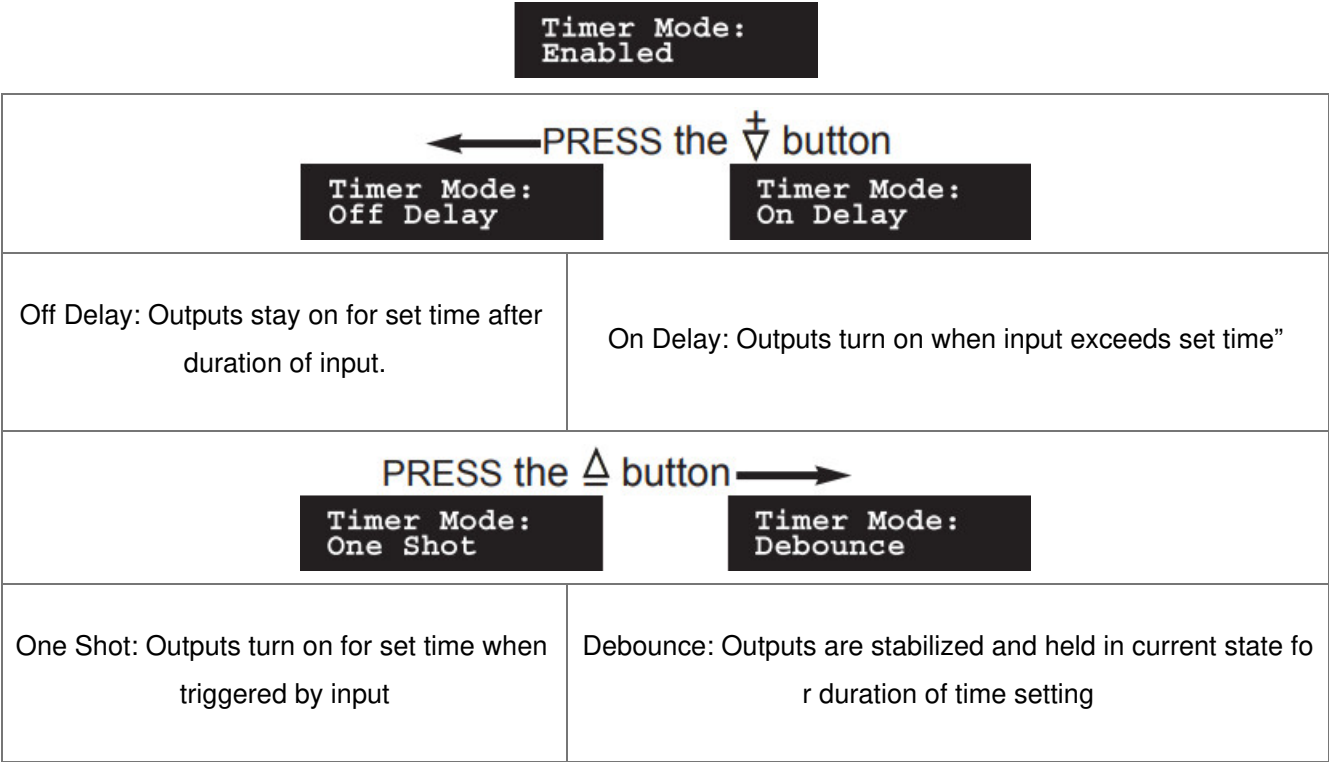


6. **Button Lockout**



Momentarily press either the Δ or ∇ button to toggle from Lock (🔒) to Unlock (no symbol). Useful for tamper-free operation.

7. **Quick Reference**

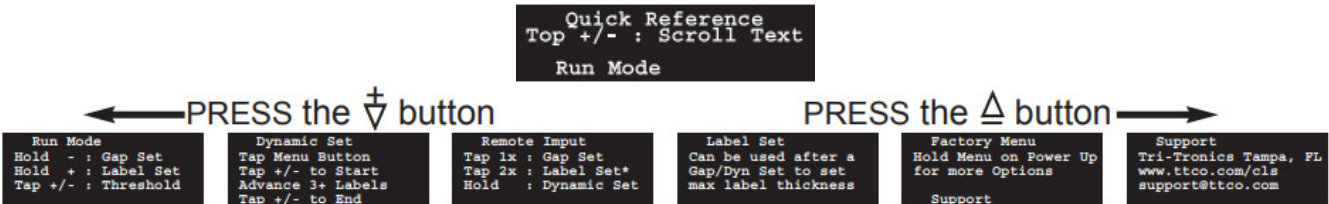

Press the the A button to scroll down through simple setup and options instructions. Press the the • button to scroll up.

8. **Sensor Scope** (**Advanced Option)



This option allows the operator to visually inspect the current setup for repeatability. The sensor scope will also reveal any nominal setup issues or sensitivities to label or gap thickness changes.

Momentarily press the Δ button to shorten the time between signals. Momentarily press the ∇ button to lengthen the time between signals.

How to Specify

1. **Select Sensor:**

Ultrasonic Clear Label Sensor

2. Select Cable:

Blank = 6' (1.8m) Cable

C = Connector M12, 5-Pin


(Standard)

3. Select Connector:

-1 = Standard M12 Connector, see #2 Includes both NPN and PNP

-1M8 = M8, 4-Pin Connector NPN/PNP Software Selectable

-1M8LE = Wired like LER

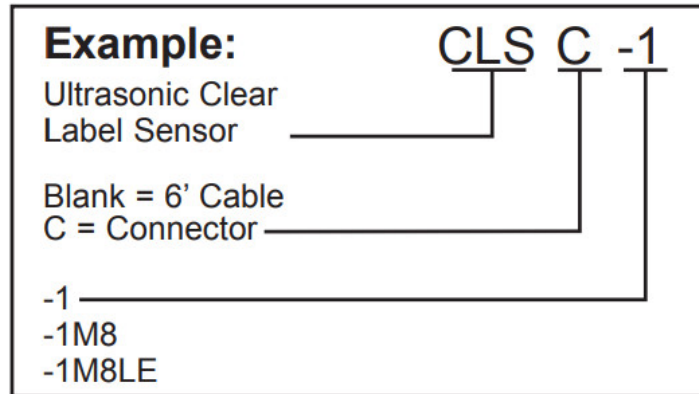


Advanced Options

To access Advance Options, press and hold the Menu button during power up. Press the Menu button to move from screen to screen.

Press either the \triangle or ∇ button to select.



1. Factory Reset

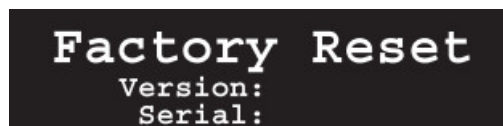

Press either the  or  button to initiate factory reset.

Note: Advanced Option screen will time out in 5 minutes.

2. Input Mode (-1, -1M8 models only)

Input Mode:
NPN / Sink

Press either the \triangle or ∇ button to toggle to PNP / Source or NPN / Sink.

3. Timer Features

Timer Features:
Disabled

Press either the \triangle or ∇ button to toggle to Enable or Disable.

4. Factory Diagnostics/Sensor Scope

Factory Diag:
Disabled

Press either the \triangle or ∇ button to toggle to Enable or Disable.


Returns to Main Screen

Remote Input Signals

Gap Set: Pulse once, 40ms to 400ms.



Label Set: Pulse twice, 40ms to 400ms, with 40ms to 400ms idle time between pulses.

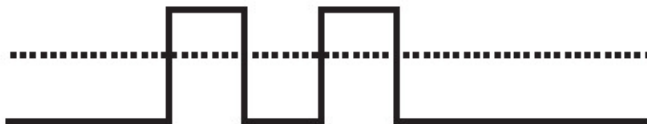

Dynamic Set: Hold Remote Input on for more than 750ms, pull labels and gaps through sensor, release Remote Input line and sensor returns to Run mode.



Note: Waveforms shown correspond to PNP input mode.



863 BOWSPRIT ROAD, CHULA VISTA, CA 91914, U.S.A.
PHONES: (619) 616 7350, WWW.LOGICBUS.COM



TRI-TRONICS®

P.O. BOX 25135, TAMPA, FL 33622-5135

813-886-4000 / 800-237-0946

ttco.com / info@ttco.com



[Logicbus CLS-1 UltraSonic Clear LabelSensor](#) [pdf] Instruction Manual
CLS-1 UltraSonic Clear LabelSensor, CLS-1, UltraSonic Clear LabelSensor, Clear
LabelSensor, LabelSensor

References

- [🔄 You are being redirected...](#)
- [🔄 You are being redirected...](#)

Manuals+.