



Logicbus HiTemp140 Series High Temperature Data Loggers User Guide

[Home](#) » [Logicbus](#) » Logicbus HiTemp140 Series High Temperature Data Loggers User Guide 





PRODUCT USER GUIDE

To view the full MadgeTech product line, visit our website at [madgetech.com](https://www.madgetech.com).

Contents

- [1 Product Overview](#)
- [2 Installation Guide](#)
- [3 Device Operation](#)
- [4 Device Maintenance](#)
- [5 Ordering Information](#)
- [6 NEED HELP?](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Product Overview

The HiTemp140 is a rugged, high-precision, temperature data logger that is built for use with autoclaves and

harsh environments. This stainless steel device is submersible, can withstand temperatures up to +140 °C (+284 °F), and has an accuracy of ± 0.1 .

The HiTemp140 can store up to 65,536 readings and features a rigid external probe capable of measuring extended temperatures, up to +260 °C (+500 °F). Custom probe lengths up to 7 inches are available. The device records the date and time-stamped readings, and has non-volatile solid-state memory that will retain data even if the battery becomes discharged.

The HiTemp140 can be used in both wet and dry applications up to +140 °C (+284 °F) indefinitely.

Water Resistance

The HiTemp140 is fully submersible and is rated IP68. It can be placed in environments with up to 230 feet (70 m) of water.

Installation Guide

Installing the Software

The Software can be downloaded from the MadgeTech website at madgetech.com. Follow the instructions provided in the Installation Wizard.

Installing the Docking Station

IFC400 or IFC406 (sold separately) — Connect the device to a USB port with the interface cable and install the drivers.

Device Operation

Connecting and Starting the Data Logger

1. Once the software is installed and running, plug the interface cable into the docking station.
2. Connect the USB end of the interface cable to an open USB port on the computer.
3. Place the data logger into the docking station.
4. The data logger will automatically appear under Connected Devices within the software.
5. For most applications, select Custom Start from the menu bar and choose the desired start method, reading rate, and other parameters appropriate for the data logging application, and click Start. (Quick Start applies the most recent custom start options, Batch Start is used for managing multiple loggers at once, and Real-Time Start stores the dataset as it records while connected to the logger.)
6. The status of the device will change to Running, Waiting to Start or Waiting to Manual Start, depending upon your start method.
7. Disconnect the data logger from the interface cable and place it in the environment to measure.

Note: The device will stop recording data when the end of memory is reached or the device is stopped unless user selectable memory wrap is enabled. At this point, the device cannot be restarted until it has been re-armed by the computer.

Downloading Data from a Data Logger

1. Place the logger into the docking station..
2. Highlight the data logger in the Connected Devices list. Click Stop on the menu bar.
3. Once the data logger is stopped, with the logger highlighted, click Download.
4. Downloading will offload and save all the recorded data to the PC.

Set Password

To password-protect the device so that others cannot start, stop or reset the device:

1. In the Connected Devices panel, click the device desired.
2. On the Device Tab, in the Information Group, click Properties. Or, right-click the device and select Properties in the context menu.
3. On the General Tab, click Set Password.
4. Enter and confirm the password in the box that appears, then select OK.

Note: This product is rated for use up to 140 °C (284 °F). Please heed the battery warning. The product will explode if exposed to temperatures above 140 °C (284 °F).

Device Maintenance

Battery Replacement

Materials: ER14250MR-145 Battery

1. Unscrew the bottom of the logger and remove the battery.
2. Place the new battery into the logger.

Note the polarity of the battery. It is important to insert the battery with positive polarity pointing upward towards the probe. Failure to do so could result in product inoperability or potential explosion if exposed to high temperatures.



3. Screw the cover back onto the logger.



Recalibration

MadgeTech recommends annual recalibration. To send devices back for calibration, visit madgetech.com.

Ordering Information


HITEMP140-1	PN 900140-00	High-Temperature Data Logger with a 1-inch probe
HITEMP140-2	PN 900153-00	High-Temperature Data Logger with a 2-inch probe
HITEMP140-2-TD	PN 900165-00	High-Temperature Data Logger with a 2-inch transitional diameter probe
HITEMP140-5.25	PN 900173-00	High-Temperature Data Logger with a 5.25-inch probe
HITEMP140-5.25-TD	PN 900180-00	High-Temperature Data Logger with a 5.25-inch transitional diameter probe
HITEMP140-7	PN 900198-00	High-Temperature Data Logger with a 7-inch probe
IFC400	PN 900319-00	Docking station with USB cable
IFC406	PN 900325-00	6 Port, Multiplexer docking station with USB cable
ER14250MR-145	PN 900097-00	Replacement battery for the HiTemp140

NEED HELP?

	Product Support & Troubleshooting <ul style="list-style-type: none"> Visit our Resource Library online at madgetech.com/resources. Contact our friendly Customer Support Team at (603) 456-2011 or support@madgetech.com.
	MadgeTech 4 Software Support <ul style="list-style-type: none"> Refer to the built-in help section of the MadgeTech 4 Software. Download the MadgeTech 4 Software Manual at madgetech.com. Contact our friendly Customer Support Team at (603) 456-2011 or support@madgetech.com.



Documents / Resources

	<p>Logicbus HiTemp140 Series High Temperature Data Loggers [pdf] User Guide HiTemp140 Series High Temperature Data Loggers, HiTemp140 Series, High Temperature Data Loggers, Data Loggers, Loggers</p>
---	--

References

- ▲ [MadgeTech Data Loggers | Solutions for Critical Applications](#)
- ▲ [Resources | MadgeTech](#)