



Logicbus PR2000 Pressure Data Logger with LCD User Guide

[Home](#) » [Logicbus](#) » Logicbus PR2000 Pressure Data Logger with LCD User Guide 

Contents

- [1 Logicbus PR2000 Pressure Data Logger with LCD](#)
- [2 Quick Start Steps](#)
- [3 Product Overview](#)
- [4 Display Overview](#)
- [5 Status Indicators](#)
- [6 Software Installation](#)
- [7 Device Operation](#)
- [8 Downloading data from a data logger](#)
- [9 Computer Interface](#)
- [10 Front Panel Overview](#)
- [11 Screen Descriptions](#)
- [12 Device Maintenance](#)
- [13 General Specifications](#)
- [14 Documents / Resources](#)
 - [14.1 References](#)
- [15 Related Posts](#)



Logicbus PR2000 Pressure Data Logger with LCD



Quick Start Steps

1. Install the MadgeTech 4 Software and USB Drivers onto a Windows PC.
2. Wire the data logger with the desired probes.
3. Connect the data logger to the Windows PC with the IFC200 (sold separately).
4. Launch the MadgeTech 4 Software. The pHTemp2000 will appear in the Connected Devices window indicating the device has been recognized.
5. Select the start method, reading rate and any other parameters appropriate for the desired data logging application. Once configured, click the Start icon and deploy the data logger
6. To download data, connect the data logger to the windows PC with the IFC200, select the device in the list, click the Stop icon, and then click the Download icon. A graph will automatically display the data.


Please refer to the PR2000 Product Manual for full product details by going to madgetech.com/product-documentation

Product Overview


The PR2000 is a pressure data logger with LCD display. The device features an IP rating of 65, which means it is dust proof, and splash proof making it available to be used outdoors. The convenient LCD provides access to the current pressure reading, as well as minimum, maximum and average statistics. A trending graph is also displayed of the last 100 readings.

Please refer to the PR2000 Product Manual for full product details by going to madgetech.com/product-documentation.

Display Overview

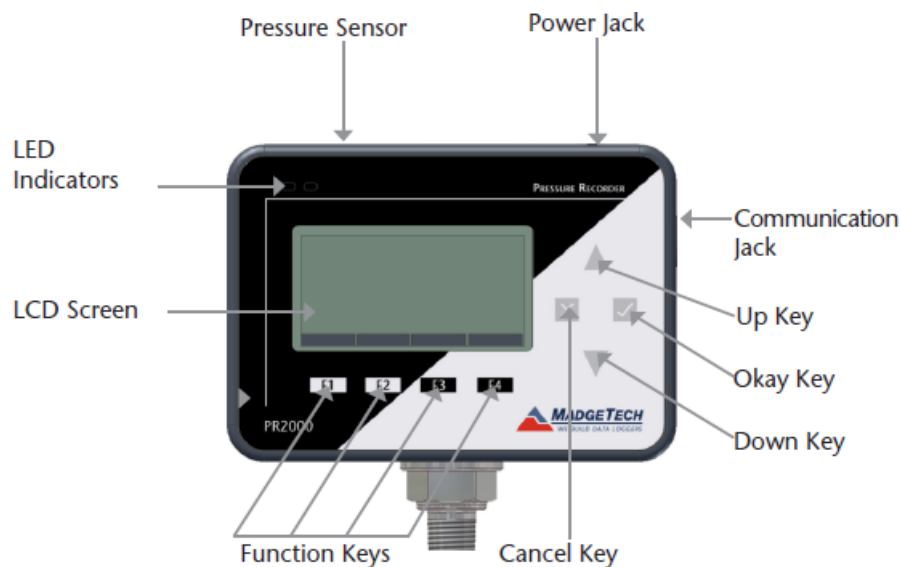

Status Indicators

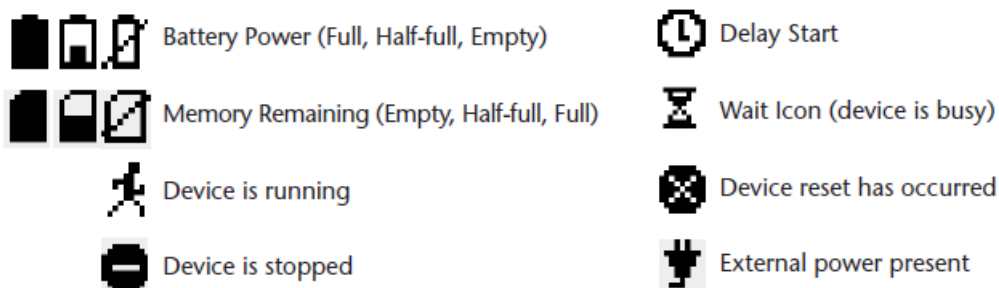

Software Installation

Installing the MadgeTech 4 Software

The MadgeTech 4 Software makes the process of downloading and reviewing data quick and easy, and is free to download from the MadgeTech website.

1. Download the MadgeTech 4 Software on a Windows PC by going to: madgetech.com/software-download.
2. Locate and unzip the downloaded file (typically you can do this by right clicking on the file and selecting Extract).
3. Open the MTInstaller.exe file.
4. You will be prompted to select a language, then follow the instructions provided in the MadgeTech 4 Setup Wizard to finish the MadgeTech 4 Software installation.

Device Operation

Connecting and Starting the data logger

- Once the software is installed and running, plug the interface cable into the data logger.
- Connect the USB end of the interface cable into an open USB port on the computer.
- The device will appear in the Connected Devices list, highlight the desired data logger.
- For most applications, select "Custom Start" from the menu bar and choose the desired start method, reading

rate and other parameters appropriate for the data logging application and click “Start”. (“Quick Start” applies the most recent custom start options, “Batch Start” is used for managing multiple loggers at once, “Real Time Start” stores the dataset as it records while connected to the logger.)


- The status of the device will change to “Running” or “Waiting to Start” depending upon your start method.
- Disconnect the data logger from the interface cable and place it in the environment to measure.

Note: The device will stop recording data when the end of memory is reached or the device is stopped. At this point the device cannot be restarted until it has been re-armed by the computer.

Downloading data from a data logger

- Connect the logger to the interface cable.
- Highlight the data logger in the Connected Devices list. Click “Stop” on the menu bar.
- Once the data logger is stopped, with the logger highlighted, click “Download”. You will be prompted to name your report.
- Downloading will offload and save all the recorded data to the PC

Computer Interface

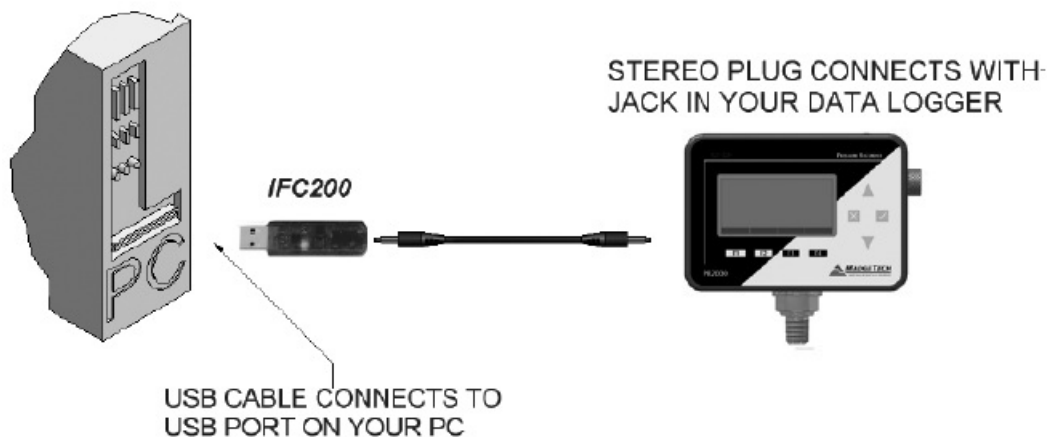

- Fully insert the male connector of the IFC200 interface cable into the female receptacle of the data logger. Fully insert the female USB connector into the USB. (Please see the Data Logger Software manual for further information.)

*WARNING: Install driver before connecting a device using a USB for the first time. See the Software manual for further information.

Front Panel Overview

Changing the display units

The PR2000 comes with factory default display units of PSI for pressure and the real-time pressure graphing feature. These units can be easily changed by pressing the F3 button in the main screen and then selecting F1 for pressure or F2 for the pressure graph. After selecting the channel, the available units can be scrolled through by either pressing the channel's function key repeatedly or using the UP and DOWN keys

Button pressing chain: Main Screen -> F3 -> F1 (pressure) or F2 (pressure graph) -> function key repeatedly or UP and DOWN

Checking the memory status

A status icon appears on all screens representing memory, but further information including percent memory left and number of readings taken can also be viewed. From the Main Screen press the F1 key to enter the Status screens then press F2 to view memory status information.

Button pressing chain: Main Screen -> F1 -> F2

Checking power status

A battery status and external power status (if available) icon appear on all screens, but per-cent battery power remaining and external power presence as well as battery type, current battery voltage, and current external voltage can also be viewed. From the Main Screen press F4 to view the Device Configuration Menu, F2 to access the power options, then F4 twice to view the Power Status screen, including battery power percent remaining and the presence of external power. Battery type and battery voltage are also displayed, as well as external power voltage (if connected).

Button pressing chain: Main Screen -> F4 -> F2 -> F4 -> F4

Changing the Contrast

The PR2000's LCD screen contrast values can be changed in two ways. One method is outlined in the Function Reference Guide. A faster, simpler way involves simultaneously pressing the CANCEL and UP or DOWN button in any screen.

Button pressing chain: CANCEL + UP (to increase) or DOWN (to decrease)

Screen Descriptions

Main Screen

Displays last measured values



Status Screens



Run Parameters




Memory Status



Date and Time

Statistics

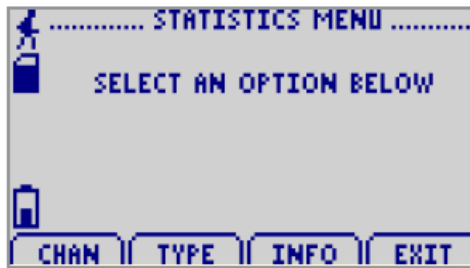


Statistics Menu Screen: Displays options available within the statistics menu



Channel Statistics: Displays statistics



Type Statistics: Displays statistics from the pressure channel

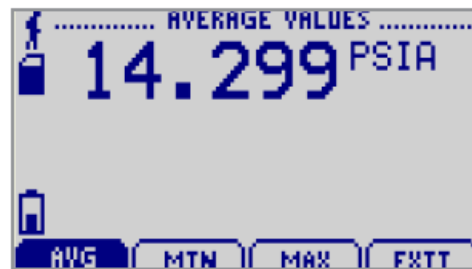

Statistics Information Screen: Displays current statistics information

Device Configuration Menu

Displays options available within the device configuration menu



- F1 = DISPLAY: enters Adjust Visibility screen
- F2 = POWER: enters Power Modes screen
- F3 = INFO: goes to Device Information screens
- F4 = EXIT: returns to main screen
- CANCEL = returns to main screen
- OK = returns to main screen
- UP = no function
- Down = no function

Device Reset

This device include two reset options, Hardware and Power Interruption



Power Interruption: Displayed as notification when power is interrupted during device operation.

- F1 = OK: accepts notification and displays main screen
- F2 = no function F3 = no function F4 = no function
- CANCEL = no function
- OK = accepts notification and displays main screen
- UP = no function
- DOWN = no function
- Hardware Reset: Displayed as notification when a hardware reset has occurred.
- F1 = OK: accepts notification and displays main screen
- F2 = no function F3 = no function F4 = no function
- CANCEL = no function
- OK = accepts notification and displays main screen
- UP = no function
- DOWN = no function

Device Maintenance

Battery Replacement

This product does not have any user-serviceable parts except the battery which should be replaced periodically. The battery life is affected by battery type, ambient temperature, sample rate, sensor selection, off-loads and LCD usage. The device has a battery status indicator on the LCD. If the battery indication is low, or if the device seems to be inoperable, it is recommended that the battery be replaced.

Materials: 3/32" HEX Driver (Allen Key) and Replacement Batteries (6AA)

- Remove the back cover from the device by unscrewing the four screws.
- Remove the battery from its compartment and unsnap it from the connector.
- Snap the new battery into the terminals and verify it is secure.
- Replace the cover taking care not to pinch the wires. Screw the enclosure back together.

Note: Be sure not to over tighten the screws or strip the threads.

For any other maintenance or calibration issues, we recommend the unit be returned to the factory for service. Before returning the device, you must obtain an RMA from the factory.

Recalibration

The PR2000 standard calibration is dependent upon the range.

Additional:

- Custom calibration and verification point options available, please call for pricing.
- Call for custom calibration options to accommodate specific application needs.
- Prices and specifications subject to change. See MadgeTech's terms and conditions at madgetech.com
- To send devices to MadgeTech for calibration, service or repair, please use the MadgeTech RMA Process by visiting madgetech.com, then under the services tab, select RMA Process.

General Specifications

Part Number	PR2000
Pressure Sensor	Semiconductor
Pressure Range	*See Table for Details
Pressure Resolution	
Pressure Accuracy	
Memory	262,143
Reading Rate	1 reading every 2 seconds up to 1 reading every 24 hours
Required Interface Package	IFC200
Baud Rate	115,200
Battery Type	6 alkaline AA batteries, user replaceable
Typical Battery Life	1 year battery life at 1 minute reading rate with display off, 30 days typical with continuous display use.
Operating Environment	-20 °C to +60 °C (-4 °F to +140 °F), 0 %RH to 95 %RH (non-condensing)
Material	Black anodized aluminum and 303 stainless steel NPT process connection
Dimensions	5.1 in x 4.8 in x 1.705 (130 mm x 122 mm x 43.3 mm)
Approvals	CE

BATTERY WARNING: RISK OF FIRE OR EXPLOSION. DO NOT RECHARGE, FORCE OPEN, HEAT OR DISPOSE OF IN FIRE.

* PR2000 Pressure Range, Resolution and Accuracy

Range (PSI)	0- 30	0- 100	0- 300	0- 500	0- 1000	0- 5000
Accuracy (PSI)	2% FSR, 0.25% @ 25 °C typical					
Resolution	0.002	0.005	0.02	0.05	0.05	0.2



Dirección

Av. Fray Antonio Alcalde 1822
Miraflores, 44270
Guadalajara, Jal

Teléfonos

Mex: +52 (33)-3854-5975
+52 (33)-3823-4349

Address

8268 Clairemont Mesa Blvd,
Suite 302, 92111
San Diego, CA.

Phone number

USA: +1 (619) 619-7350

Página Web

tienda.logicbus.com.mx

Correo electrónico

ventas@logicbus.com

Website

logicbus.com

E-mail

sales@logicbus.com

Documents / Resources



[Logicbus PR2000 Pressure Data Logger with LCD](#) [pdf] User Guide
PR2000, Pressure Data Logger with LCD

References

- [MadgeTech Data Loggers | Solutions for Critical Applications](#)
- [MadgeTech 4 Software | MadgeTech](#)

[Manuals+](#)