




logitech Elite 85T Zone True Wireless User Guide

[Home](#) » [Logitech](#) » logitech Elite 85T Zone True Wireless User Guide 




LOGITECH ZONE TRUE WIRELESS Setup Guide Guide d'installation

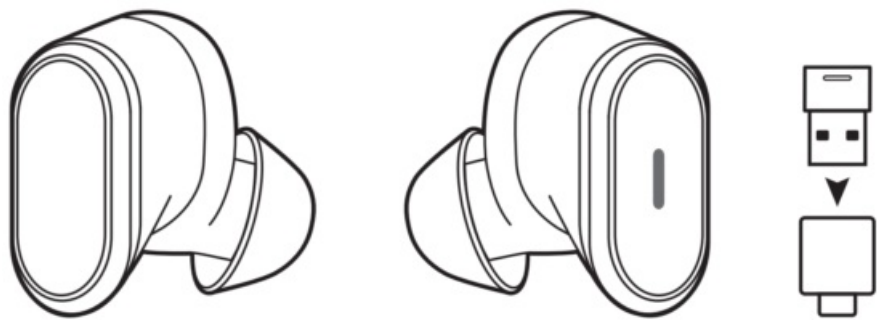

Contents


- 1 KNOW YOUR PRODUCT
- 2 WHAT'S IN THE BOX
- 3 CHARGING
- 4 HOW TO SET UP YOUR DEVICE
- 5 PAIR TO COMPUTER VIA USB RECEIVER
- 6 PAIR TO SMARTPHONE VIA BLUETOOTH®
- 7 FIND YOUR PERFECT FIT
- 8 CALL AND MUSIC CONTROLS
- 9 ACTIVE NOISE CANCELLATION (ANC)
- 10 EARBUD LIGHT INDICATOR
- 11 RECEIVER LIGHT INDICATOR
- 12 DIMENSIONS
- 13 SYSTEM REQUIREMENTS
- 14 TECHNICAL SPECIFICATIONS
- 15 Documents / Resources
 - 15.1 References
- 16 Related Posts

KNOW YOUR PRODUCT

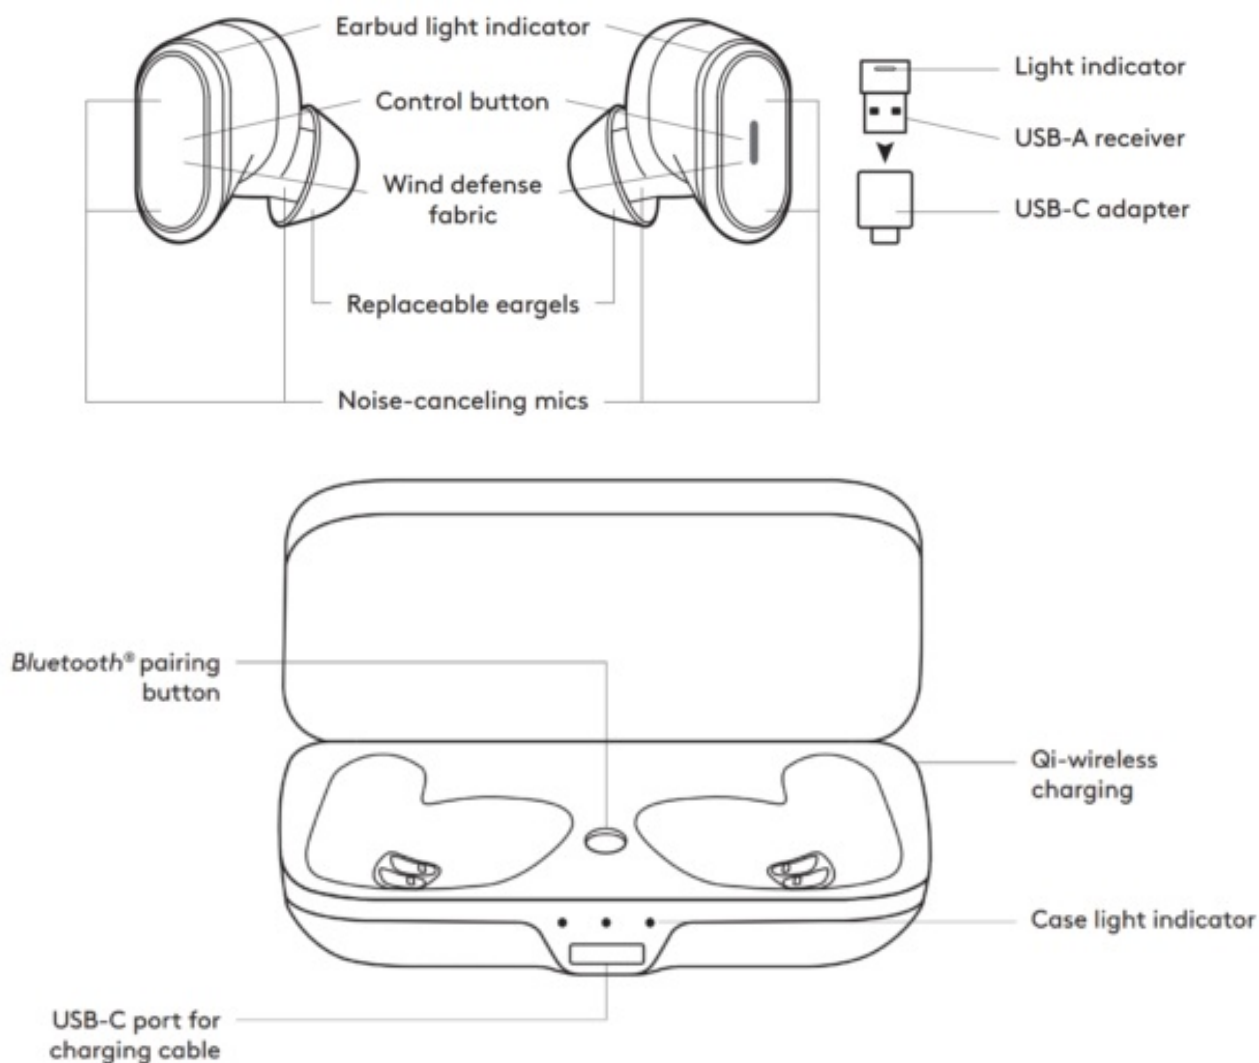

WHAT'S IN THE BOX

1. Left & right earbuds
2. Replaceable ear gels (total of 3 pairs):
 - Small left & right ear gels without ear fins
 - Medium left & right ear gels with ear fins (premounted on the earbuds)
 - Large left & right ear gels with ear fins
3. Cloth travel bag
4. Wireless charging case
5. User documentation
6. USB-A receiver
7. USB-C to A adapter
8. USB-C to A charging cable (0.79 ft)

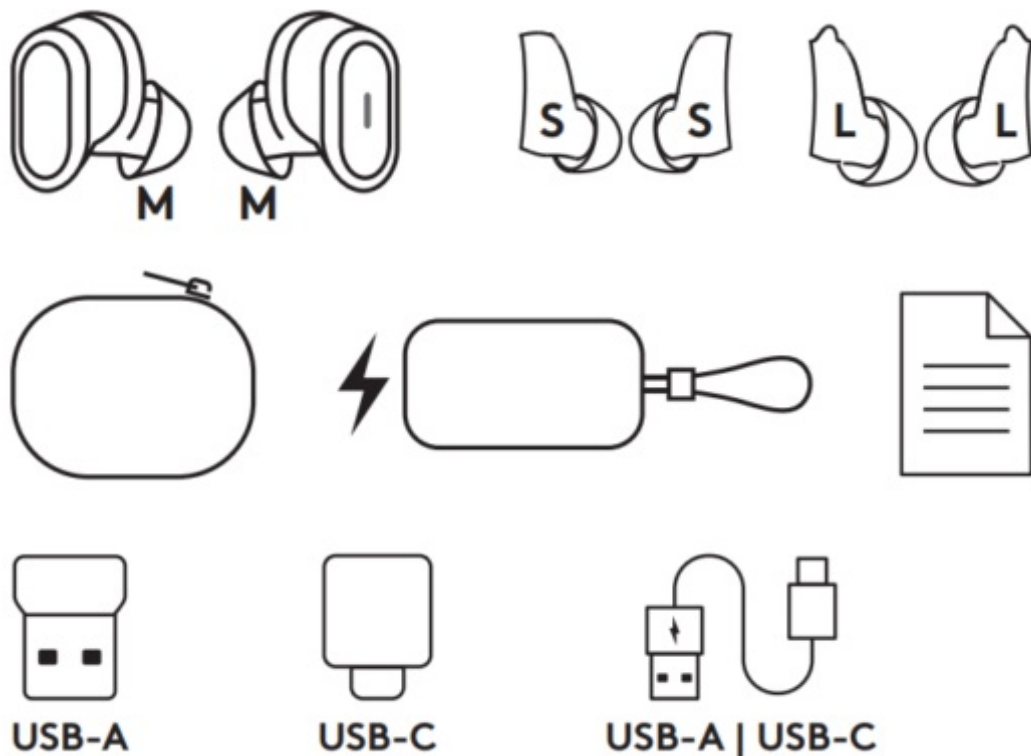


CHARGING

Charging via USB cable

1. Place the earbuds in the charging case and close the lid
2. Plug the USB-C cable end into the USB-C port on the front of the charging case
3. Plug the USB-A end into the USB-A charging port on your computer or plug the USB-A end into the USB-C adapter and plug the USB-C adapter into the USB-C port on your computer
4. Case light Indicator will be a pulsing, white light for charging
5. Case light Indicator will be solid white when fully charged
 - 2 hrs 45 mins for full earbuds charge
 - 3 hrs for full case charge
 - 5 mins will give you 2 hrs music time (ANC off)


6. Earbuds can be used with a receiver and Bluetooth® paired while charging

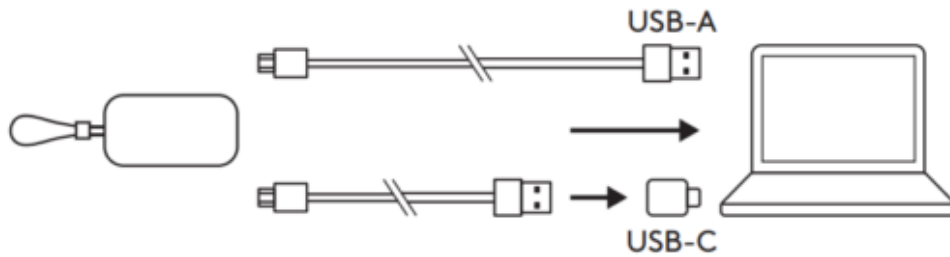

Charging via Qi wireless charger


1. Place the charging case on top of any Qi wireless charging pad *
2. The case indicator light will be a pulsing, white light when charging
3. The case Indicator light will be solid white when fully charged

* Qi wireless charging base is not included

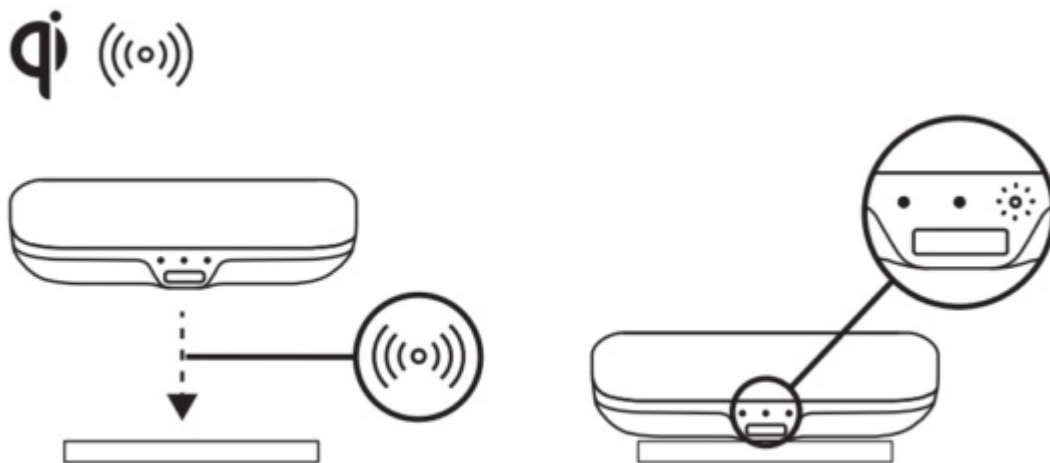

HOW TO SET UP YOUR DEVICE

1. Remove the earbuds from the charging case
2. Insert the earbuds into your ears

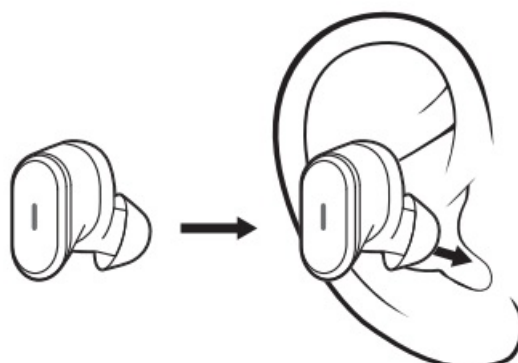

PAIR TO COMPUTER VIA USB RECEIVER


1. USB-A

Insert the USB-A receiver into the computer USB-A port

USB-C


Insert the USB-A receiver into the USB-C adapter Then insert the adapter into the computer USB-C port

2. Earbuds are pre-paired to the receiver included in the box Once successfully paired, the light the indicator on the receiver will remain solid

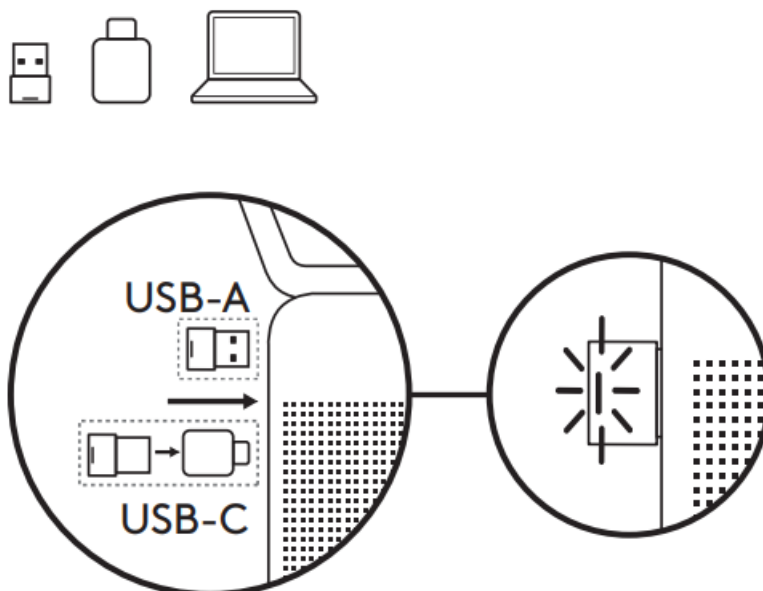

PAIR TO SMARTPHONE VIA BLUETOOTH®


1. Press the Bluetooth® pairing button in the charging case for 3 seconds Earbud light indicator will flash white rapidly
2. Open Bluetooth® settings on your device
3. Select Zone True Wireless in discoverable devices
4. Once successfully paired, the light indicator will turn solid white

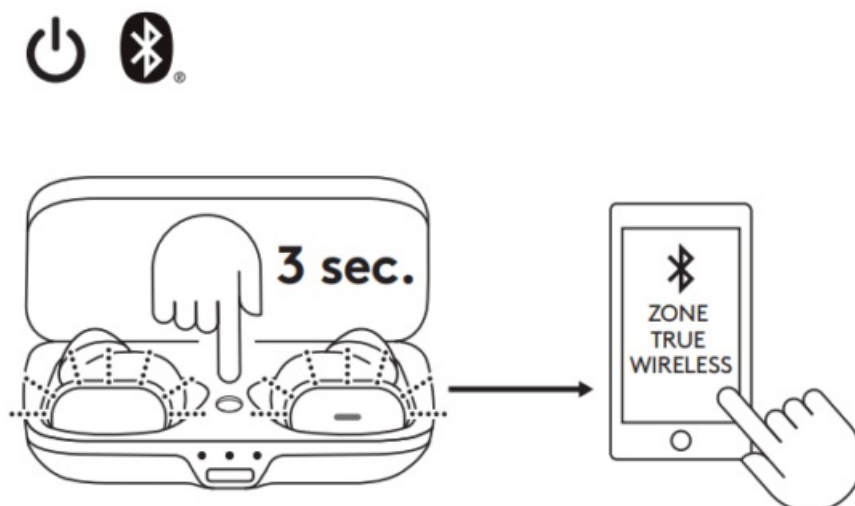

FIND YOUR PERFECT FIT

For the optimized performance of ANC and comfort, select among the three larger sizes (S, M, L) to find the ones that best fit your ears Earbuds ship with medium largely

1. Place the earbuds firmly within your ears Adjust the angle and depth of the earbuds for the best seal and comfort

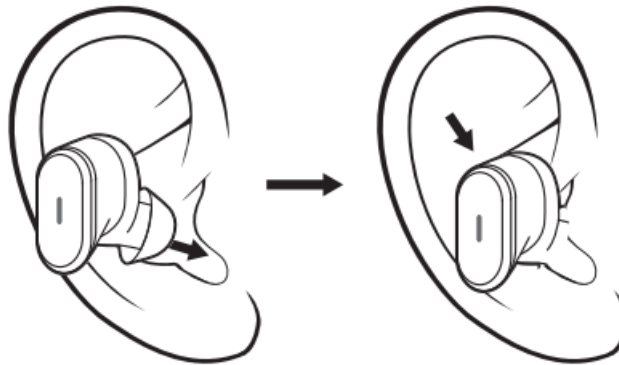

2. Size down if you feel too much pressure on your ear, or size up if the earbuds are too loose
— **Note:** It is common to use differently sized ear gels for different sides of your ears

Left **Right**




OR






OR



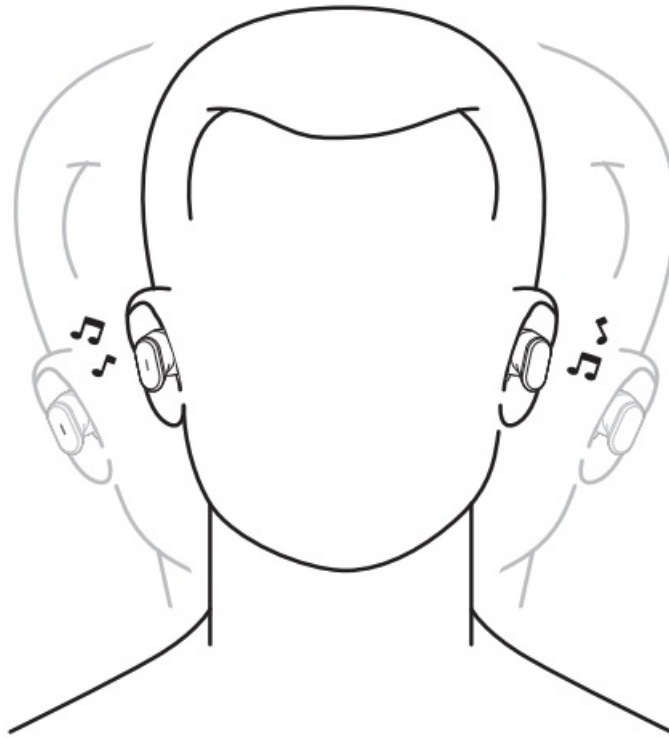


3. Fit Trial
— The earbuds should remain secured and tight even after shaking your head in all directions
— Play the same music as a fair comparison of noise isolation



CALL AND MUSIC CONTROLS

For UC:	Call situations		Non-call situations	
Action	Left earbud	Right earbud	Left earbud	Right earbud
Short press 	Answer / End call		Play / Pause	—
2 seconds press 	Reject call		Next song	—
Double taps 	Transparency Toggle	Mute on / off	ANC / Transparency Toggle	Mute on / off

For Microsoft Teams:	Call situations		Non-call situations	
Action	Left earbud	Right earbud	Left earbud	Right earbud
 Short press	Answer / End call		Play / Pause	Invoke Teams
 2 seconds press	Reject call		Next song	Invoke Teams Cortana
Double taps 	Transparency Toggle	Mute on / off	ANC / Transparency Toggle	Mute on / off

Note:


- Teams activities are only functional when Teams is running on an unlocked computer
- Media control functionality depends on the type of application
- Call activities are always the first priority When two Bluetooth® devices are connected, The last active device will override the other

Tip: Button customizations and Music EQ controls are available in Logi Tune

ACTIVE NOISE CANCELLATION (ANC)

ANC blocks out the noise around you to help you concentrate on the task at hand

1. Double-tap the left earbud to switch between ANC and Transparency mode
2. There will be a voice prompt when turning ANC or Transparency mode on
3. You can also switch between ANC and Transparency mode via Logi Tune

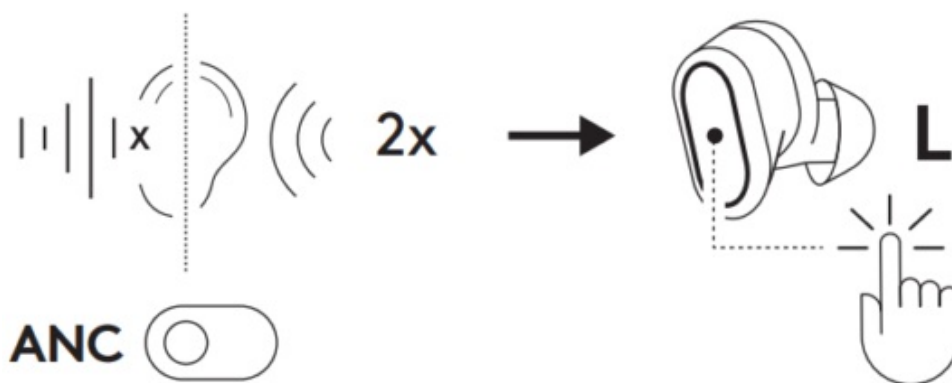


EARBUD LIGHT INDICATOR

Controlling busy light via Logi Tune

The busy light is disabled by default To activate it:


1. Open Logi Tune
2. Select the “Settings” tab
3. Click on “Busy light” and select “Active on call”

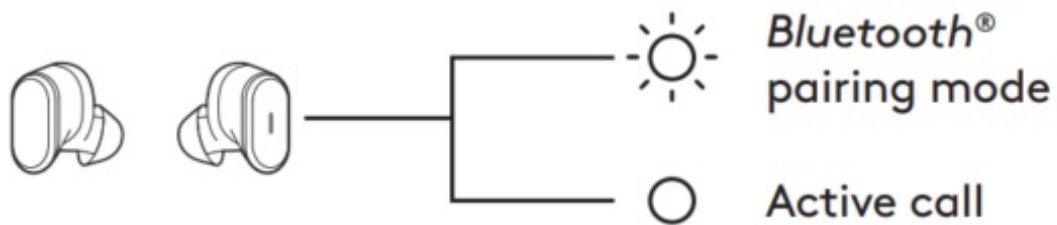


Earbud		Status
White	Flashing	Bluetooth® pairing mode
	Solid	Active call*

* Download Logi Tune to activate the busy light

RECEIVER LIGHT INDICATOR

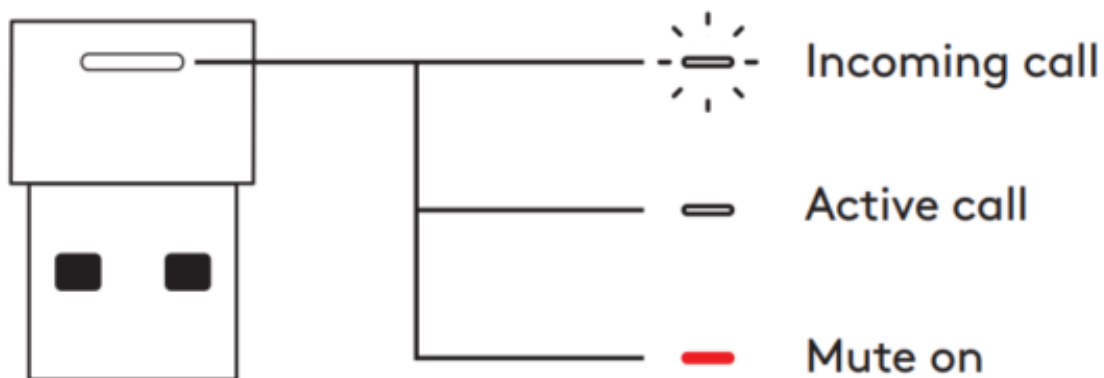


For UC:		
Light		Status
White	Flashing	Incoming call
	Solid	Active call
Red	Solid	Mute on

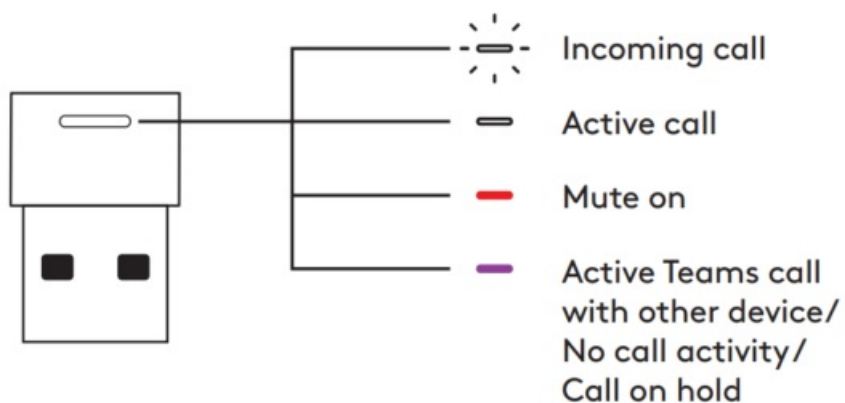


For Microsoft Teams:		
Light		Status
White	Flashing	Incoming call
	Solid	Active call
Red	Solid	Mute on
Purple	Solid	Active Teams call with another device/ No call activity / Call on hold

CASE LIGHT INDICATOR

Left LED light: Battery status of the left earbud
 Middle LED light: Battery status of the charging case
 The right LED light: Battery status of the right earbud

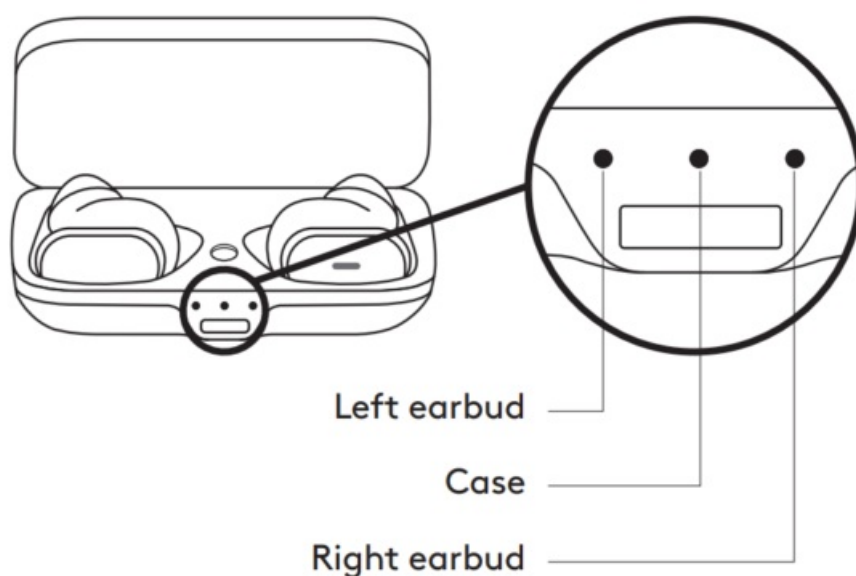


State	Light		Status
Plugged into power source	White	Solid	Fully charged
		Pulsing	Not fully charged
Inserting buds in the case	White	Pulsing for 3 seconds	Earbud inserted in the case
Case button pressed and released (earbuds in the case)	White	Solid for 3 seconds	Fully charged
		Pulsing for 3 seconds	Charging
	Red	Solid	Case battery <20%
Case button pressed and released (no earbuds in the case)	White (All lights on)	Solid for 3 seconds	Case battery between 80-100%
	White (Middle and left light on)		Case battery between 50-79%
	White (Left light on only)		Case battery between 20-49%
	Red		Case battery <20%
Others	White	Blinking	Pairing mode
	Red	Blinking while in over-the-air (OTA) mode	Device firmware update
		Pulsing	Charging error
	White	Blinking while in pairing mode and blinking WHITE 3 times to confirm factory reset	Factory reset

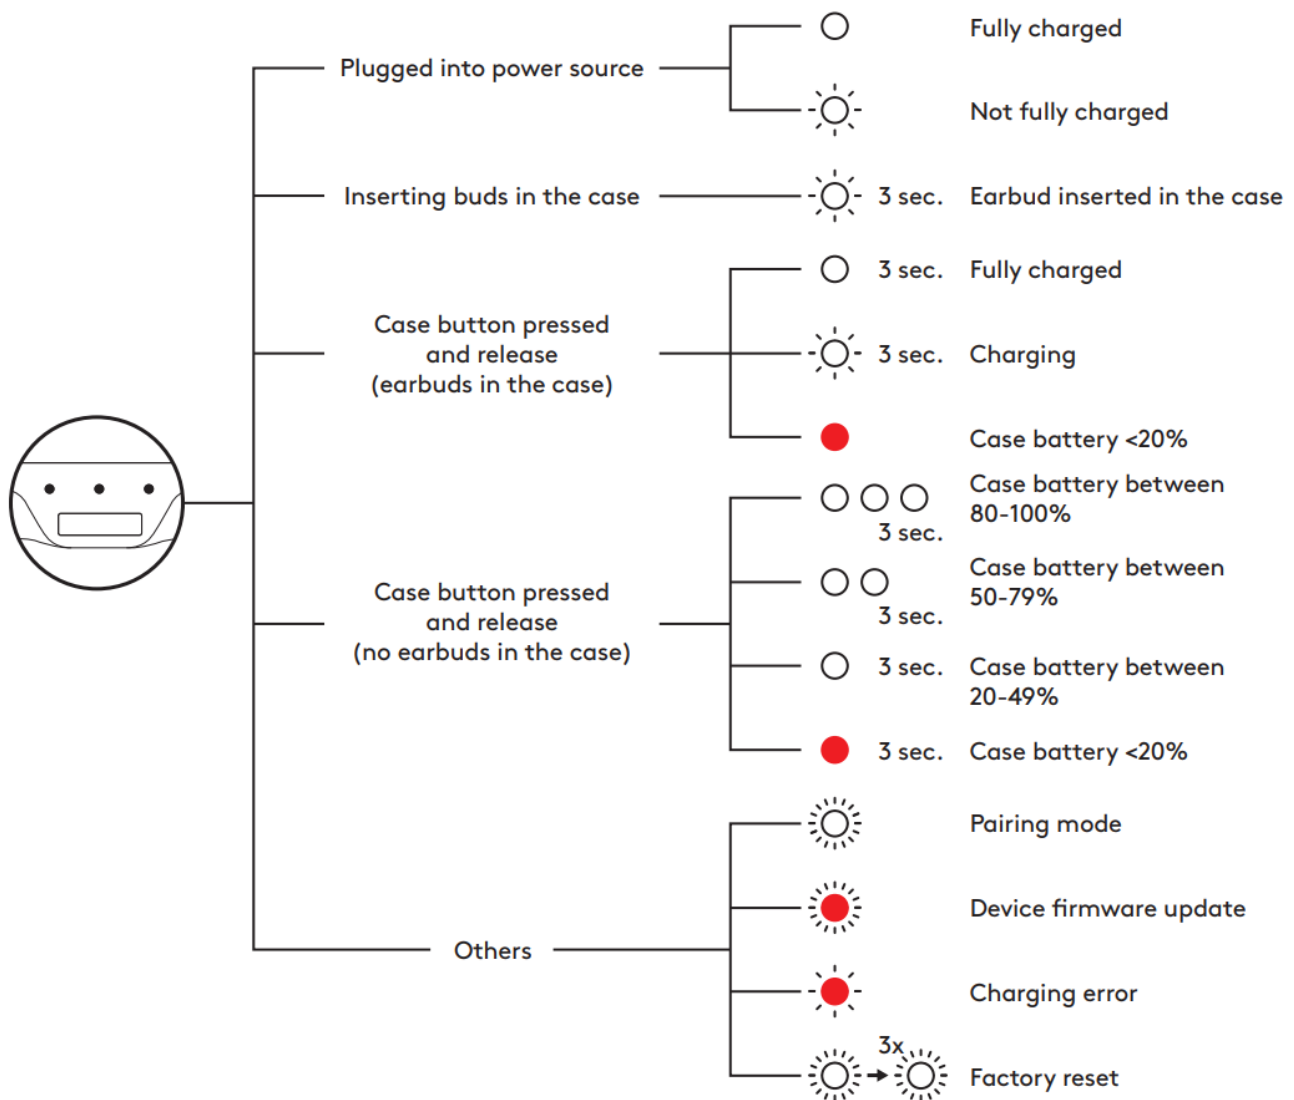

LOGI TUNE

Logi Tune helps boost your earbud performance with periodic software and firmware updates. Learn more and download Logi Tune at www.logitech.com/tune, the Apple App Store® or Google Play™ store.

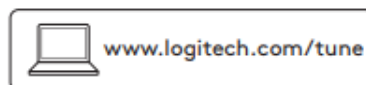

ADJUSTING SIDETONE

Sidetone lets you hear your own voice during conversations so you are aware of how loud you are talking. In Logi Tune, select the sidetone feature, and adjust the dial accordingly.

- A higher number means you hear more external sound
- A lower number means you hear less external sound

AUTO SLEEP TIMER

By default, your earbuds will automatically power off when not in use for one hour. Adjust the sleep timer in Logi Tune.

RECONNECT EARBUDS

Reconnect earbuds to the receiver via Logi Tune.

1. Plug USB-A receiver into computer.

2. Open Logi Tune
3. Select the receiver from the dashboard Press "Reconnect earbuds"
4. To initiate Bluetooth® pairing, press and hold the Bluetooth® pairing button in the charging case for seconds
The light indicator on the receiver will flash white
5. Once successfully paired, the light indicator on the receiver will remain solid white

FACTORY RESET

1. Place the left and right earbuds in the charging case
2. Press the Bluetooth® pairing button in the case for 15 seconds
3. The case light indicators will blink 3 times in white to confirm the reset

DIMENSIONS

Earbuds:

Height x Width x Depth: 15.9 x 27.4 x 26.3 mm

Weight (a pair of earbuds): 13 g

Charging case:

Height x Width x Depth: 25.0 x 39.8 x 74.5 mm

Weight: 46 g

Receiver:

Height x Width x Depth: 21.5 x 13.6 x 6.0 mm

Adapter:

Height x Width x Depth: 25.2 x 16.5 x 9.5 mm

SYSTEM REQUIREMENTS

Works with common calling applications across almost all platforms and operating systems Works with Windows®, Mac, or Chrome™ based computers via USB-C, USB-A, Bluetooth®, and iOS or Android™ Bluetooth® enabled devices

TECHNICAL SPECIFICATIONS

Microphone Type: Omni-directional, dual MEMS mics array with beamforming plus an inward-facing mic

Frequency response (Earbuds): 20-20kHz (music mode), 100-8kHz (talk mode)

Frequency response (Microphone): 100-8kHz

Battery type: Built-in battery (Lithium-ion)

Battery life (talk time): Up to 6 hrs (ANC on), up to 6.5 hrs (ANC off)

Battery life (listening time): Up to 7 hrs (ANC on), up to 12 hrs (ANC off)

Bluetooth® version: 5.0


Wireless range: Up to 30 m / 100 ft (open field line of sight) Qi Wireless charging enabled

USB-A to C charging cable: 0.79 ft (24 cm)

www.logitech.com/support/zonetruewireless

© 2021 Logitech Logitech, Logi, and the Logitech logo are trademarks or registered trademarks of Logitech Europe S A and/or its affiliates in the US and other countries Apple and the Apple logo are trademarks of Apple Inc, registered in the US and other countries and regions App Store is a service mark of Apple Inc Google Play and the Google Play logo are trademarks of Google LLC The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc and any use of such marks by Logitech is under license

Documents / Resources

 <p>LOGITECH ZONE TRUE WIRELESS Elite 85T Guide d'utilisation</p> <p>logitech</p>	<p>logitech Elite 85T Zone True Wireless [pdf] User Guide Elite 85T Zone True Wireless, Elite 85T, Zone True Wireless</p>
--	---

References

- [logi Logitech Support + Download](#)
- [logi Logi Tune - Software App for Webcams, Headsets & Logi Dock](#)