

Logitech G600 MMO Gaming Mouse



Logitech G600 MMO Gaming Mouse User Guide

[Home](#) » [Logitech](#) » Logitech G600 MMO Gaming Mouse User Guide 

Contents

- [1 Logitech G600 MMO Gaming Mouse](#)
- [2 Set up your product](#)
- [3 Product features](#)
- [4 Troubleshooting](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)




Logitech G600 MMO Gaming Mouse



Know your product

1. Left mouse button
2. Right mouse button
3. G-Shift button*
4. Wheel left
5. Wheel right
6. G8 (cycle modes)
7. G7 (shift-B)
8. Wheel click
9. G9-G20 (programmable keys with RGB backlighting)
10. Documentation

By default, performs the G-Shift function in Modes 1 and 2 and the DPI-shift in Mode 3.

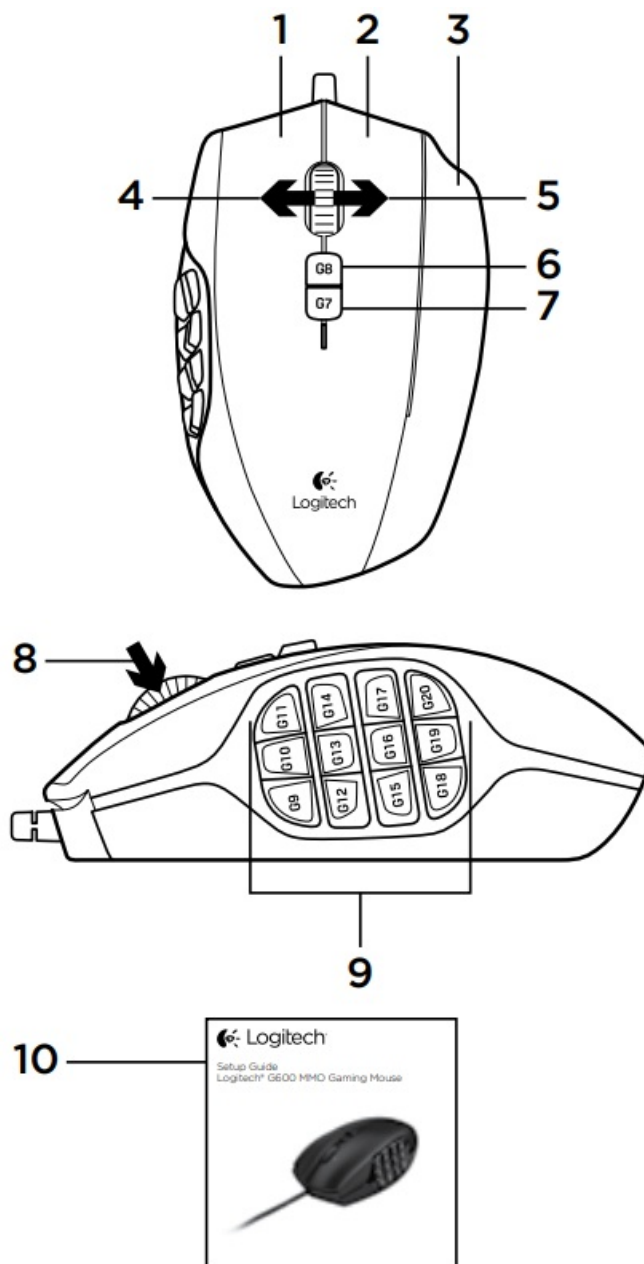

Set up your product

1. Turn on your computer.
2. Connect the G600 gaming mouse to a USB port.

Note: To customize the G600 gaming mouse for each game you play, download and install the Logitech® Gaming Software from www.logitech.com/support/g600.

Visit Product Central

There's more information and support online for your product. Take a moment to visit Product Central to learn more about your new gaming mouse.

Browse online articles for setup help, usage tips, or information about additional features. If your gaming mouse has optional software, learn about its benefits and how it can help you customize your product. Connect with other users in our Community Forums to get advice, ask questions, and share solutions.

At Product Central, you'll find a wide selection of content:

- Tutorials
- Troubleshooting
- Support community
- Software downloads
- Online Documentation
- Warranty information
- Spare parts (when available)

Go to www.logitech.com/support/g600

Product features

Built-in modes

Use the G8 button to cycle the 3 modes of the built-in profile: Primary MMO, Alternate MMO, and Generic Gaming. Modify and save new profiles and modes using the Logitech Gaming Software (LGS). For more information about modes and profiles, go to www.logitech.com/support/g600.

Programmable thumb keys with RGB backlighting

The 12 G-keys work with the most popular MMO games. Using the LGS, reassign keystrokes, create complex macros, and assign lighting colors and effects (shifting and pulsing) to each mode.

G-shift function

Use the G-Shift button to double the number of commands assigned to the G600's buttons.

In-play sensitivity switching

Out of the box, there are four tracking sensitivity levels: 3200 dpi, 2000 dpi, 1200 dpi (default), and 400 dpi. Choose up to four levels (200 dpi to 8200 dpi) for each profile using the LGS.

Default built-in modes

Mode 1 = primary MMO

- **Lighting color** = Color cycling
- **Default DPI value** = 1200
- **Left mouse button** = Button 1
- **Right mouse button** = Button 2
- **G-Shift button** = G-Shift function
- **Wheel click** = Button 3
- **Wheel left** = Button 4

- **Wheel right** = Button 5
- **G7** = Shift-B (WoW backpack open command)
- G8 = Cycle mode
- G9 = 1
- G10 = 2
- G11 = 3
- G12 = 4
- G13 = 5
- G14 = 6
- G15 = 7
- G16 = 8
- G17 = 9
- G18 = 0
- G19 = --
- G20 = =

G-shift values: (Hold down)

- Lighting color =
- Color cycling
- G9 = Ctrl-1
- G10 = Ctrl-2
- G11 = Ctrl-3
- G12 = Ctrl-4
- G13 = Ctrl-5
- G14 = Ctrl-6
- G15 = Ctrl-7
- G16 = Ctrl-8
- G17 = Ctrl-9
- G18 = Ctrl-0
- G19 = Ctrl-
- G20 = Ctrl-=

Mode 2 = Alternate MMO

- Lighting color = White
- Default DPI value = 1200
- Left mouse button = Button 1
- Right mouse button = Button 2
- G-Shift button = G-Shift function
- Wheel click = Button 3
- Wheel left = Button 4
- Wheel right = Button 5
- G7 = Shift-B (WoW backpack open command)
- G8 = Cycle mode
- G9 = Numpad 1

- G10 = Numpad 2
- G11 = Numpad 3
- G12 = Numpad 4
- G13 = Numpad 5
- G14 = Numpad 6
- G15 = Numpad 7
- G16 = Numpad 8
- G17 = Numpad 9
- G18 = Numpad 0
- G19 = Numpad –
- G20 = Numpad +

G-shift values: (Hold down)

- Lighting color = White
- G9 = Ctrl-Numpad 1
- G10 = Ctrl-Numpad 2
- G11 = Ctrl-Numpad 3
- G12 = Ctrl-Numpad 4
- G13 = Ctrl-Numpad 5
- G14 = Ctrl-Numpad 6
- G15 = Ctrl-Numpad 7
- G16 = Ctrl-Numpad 8
- G17 = Ctrl-Numpad 9
- G18 = Ctrl-Numpad 0
- G19 = Ctrl-Numpad –
- G20 = Ctrl-Numpad +

Mode 3 = Generic gaming

- Lighting color = Pulsing green
- DPI values = 400 (Shift), 1200 (Default), 2000, 3200
- Left mouse button = Button 1
- Right mouse button = Button 2
- G-Shift button = DPI shift
- Wheel click = Button 3
- Wheel left = Button 4
- Wheel right = Button 5
- G7 = Cycle DPI
- G8 = Cycle mode
- G9 = 1
- G10 = 2
- G11 = 3
- G12 = 4
- G13 = 5
- G14 = 6
- G15 = DPI up

- G16 = DPI Default
- G17 = Forward (button 5)
- G18 = DPI Down
- G19 = E
- G20 = Backward (button 4)

Troubleshooting

Gaming mouse does not work

- Check the USB connection.
 - Do not use a USB hub.
 - Try another USB port on your computer.
 - Reboot your system.
- Need help programming the mouse buttons and keys
- Download and install the Logitech Gaming Software.
 - Launch the software.
 - Select Help (question mark) for assistance.
 - To download the software, go to www.logitech.com/support/g600.

What do you think?

- Please take a minute to tell us.
- Thank you for purchasing our product. www.logitech.com/ithink

www.logitech.com/support/g600


- **Italia** +39-02-91 48 30 31
- **Nederland** +31-(0)-20-200 84 33
- **United Kingdom** +44-(0)203-024-81 59|
- **European, English:** +41-(0)22 761 40 25
- **Mid. East., & Fax:** +41-(0)21 863 54 02
- African Hq.
- Morges,
- Switzerland

www.logitech.com

© 2012 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered.

All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

Documents / Resources

| | |
|---|--|
|  | <p>Logitech G600 MMO Gaming Mouse [pdf] User Guide</p> <p>G600 MMO Gaming Mouse, G600, MMO Gaming Mouse, Gaming Mouse, Mouse</p> |
|---|--|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.