

logitech K380 Wireless Multi Device Keyboard User Guide

Home » Logitech » logitech K380 Wireless Multi Device Keyboard User Guide 🖺

Contents

- 1 logitech K380 Wireless Multi Device
- Keyboard
- 2 Getting started
- **3 DETAILED SETUP**
- **4 INSTALL SOFTWARE**
- **5 FEATURES**
- **6 SHORTCUTS AND FUNCTION KEYS**
- 7 Manual selection
- 8 Hold down the key combination
- 9 Power management
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts



logitech K380 Wireless Multi Device Keyboard



Getting started

Getting started - K380 Multi-Device Bluetooth Keyboard

- Enjoy the comfort and convenience of desktop typing on your desktop computer, laptop, smartphone, and tablet.
- The Logitech Bluetooth® Multi-Device Keyboard K380 is a compact and distinctive keyboard that lets you communicate and create on your personal devices, anywhere in the home.
- Convenient Easy-Switch™ buttons make it easy to simultaneously connect with up to three devices via Bluetooth® wireless technology and instantly switch among them.
- The OS-adaptive keyboard automatically remaps keys for the selected device so you're always typing on a familiar keyboard with favorite hotkeys where you expect them.

Logi Options+

• In addition to optimizing the keyboard for your preferred operating system, the software lets you customize the K380 to fit your individual needs and personal style.

K380 AT A GLANCE



- 1. tasty-switch press to connect and select the device keys
- 2. Bluetooth Show the state of the Bluetooth connection status lights
- 3. **3 Split keys** Modifier based on the type of device connected to keyboard Above Windows® and Android™. Below: Mac OS® X and iOS®



- 4. Battery compartment
- 5. On/off switch
- 6. Battery status light

DETAILED SETUP

1. Pull the tab on the back side of the keyboard to power it on. The LED on the Easy-Switch button should blink rapidly. If not, hold down the button for three seconds.



- 2. Connect your device using Bluetooth:
 - Open the Bluetooth settings on your computer to complete the pairing. Steady light for 5 seconds on the button indicates successful pairing. If the light blinks slowly, hold down the button for three seconds and try pairing via Bluetooth again.
 - Click here for more details on how to do this on your computer. If you experience issues with Bluetooth, click here for Bluetooth troubleshooting.
- 3. Install Logi Options+ Software. Download Logi Options+ to use all the possibilities this keyboard has to offer. To download and learn more, go to logitech.com/optionsplus.

PAIR TO A SECOND COMPUTER WITH EASY-SWITCH

Your keyboard can be paired with up to three different computers using the Easy-Switch button to change the channel.

- 1. Select the channel you want using the Easy-Switch button press and hold the same button for three seconds. This will put the keyboard in discovery mode so it can be seen by your computer. The LED will start blinking rapidly.
- 2. Open the Bluetooth settings on your computer to complete the pairing. You can find more details here.
- 3. Once paired, a short press on the Easy-Switch button lets you switch channels.

Re-pairing a device

• If a device becomes disconnected from the keyboard, you can easily re-pair the device with the keyboard.

Here's how:

On the keyboard

- Press and hold down an Easy-Switch button until the status light starts blinking rapidly.
- The keyboard is now in pairing mode for the next three minutes.

On the device

- 1. Go to Bluetooth settings on your device and select Logitech Bluetooth Multi-Device Keyboard K380 when it appears in the list of available Bluetooth devices.
- 2. Follow the onscreen instructions to complete the pairing.
- 3. Upon pairing, the status LED on the keyboard stops blinking and remains steady for 10 seconds.

INSTALL SOFTWARE

- Download Logi Options+ to use all the possibilities this keyboard has to offer.
- In addition to optimizing the K380 for your operating system, Logi Options+ lets you customize the keyboard to
 fit your needs and personal style create shortcuts, reassign key functions, display battery warnings, and
 much more.
- To download and learn more, go to logitech.com/optionsplus.
- Click here for the list of supported OS versions for Options+.

FEATURES

Explore the advanced features your new keyboard offers:

- · Shortcuts and function keys
- OS-adaptive keyboard
- Power management

SHORTCUTS AND FUNCTION KEYS

Hotkeys and media keys

The table below shows hot keys and media keys available for Windows, Mac OS X, Android, and iOS.

Keys	Windows 7 Windows 10 Windows 11	macOS Catalina macOS Big Sur macOS Monterey	iPadOS 13.4+ iOS 13.4+	Android	Chrome OS
0,	Home (Launch web browser)	Mission Control*	Home (Go to Homescreen)	Home (Go to Homescreen)	Home (Go to Homepage in web browser)
0,	App Switch	Launchpad	Home Screen	App SwitchApp Switch	App Switch
	Contextual menu	Does nothing	Does nothing	Contextual menu	Contextual menu
	Back	Back	Back	Back	Back
-	Previous Track	Previous Track	Previous Track	Previous Track	Previous Track
	Play / Pause	Play / Pause	Play / Pause	Play / Pause	Play / Pause
	Next Track	Next Track	Next Track	Next Track	Next Track
	Mute	Mute	Mute	Mute	Mute
	Volume Down	Volume Down	Volume Down	Volume Down	Volume Down
9	Volume Up	Volume Up	Volume Up	Volume Up	Volume Up
• del	Delete	Forward Delete	Forward Delete	Delete	Delete

Shortcuts

- To perform a shortcut hold down the fn (function) key while pressing the key associated with an action
- The table below provides function key combinations for different operating systems.

Keys	Android	Windows 7 Windows 10 Windows 11	Mac OS X	iOS
0.0	Print screen	Print screen	Screen lock*	Capture screen
0.0	Cut	Cut	Cut	Cut
0.0	Сору	Сору	Сору	Сору
0.0	Paste	Paste	Paste	Paste
0.0	Home (when editing text)	Home (when editing text)	Select previous word	Select previous word
0.0	End (when editing text)	End (when editing text)	Select next word	Select next word
0.0	Page up	Page up	Page up/Increase brightness*	
0.0	Page down	Page down	Page down/Decrease brightness*	

· Requires installation of Logitech Options software

Logi Options+

• If you typically use function keys more often than shortcut keys, install Logi Options+ software and use it to set up shortcut keys as function keys and use the keys to perform functions without having to hold down the Fn key.

OS-adaptive keyboard

- The Logitech Keyboard K380 includes OS-adaptive keys that have different functions; depending on the operating system of the device you're typing on.
- The keyboard automatically detects the operating system on the currently selected device and remaps keys to provide functions and shortcuts where you expect them to be.

Manual selection

• If the keyboard fails to correctly detect the operating system of a device, you can manually select the operating system by performing a long press (3 seconds) of a function key combination.

Hold down the key combination



Multi-function keys


- Unique multi-function keys make the Logitech Keyboard K380 compatible with most computers and mobile devices
- Key label colors and split lines identify functions or symbols reserved for different devices and operating systems.

Key label color

- Gray labels indicate functions available on Apple devices running Mac OS X or IOS.
- White labels on gray circles identify symbols reserved for use with Alt Gr on Windows computers.

Split keys

- Modifier keys on either side of the space bar display two sets of labels separated by split lines.
- The label above the split line shows the modifier sent to a Windows, Android, or Chrome device.
- The label below the split line shows the modifier sent to an Apple Macintosh, iPhone, or iPad.
- The keyboard automatically uses modifiers associated with the currently selected device.
- The Alt Gr (or Alt Graph) key that appears on many international keyboards replaces the right Alt key normally found to the right of the spacebar. When pressed in combination with other keys, Alt Gr enables the entry of special characters.

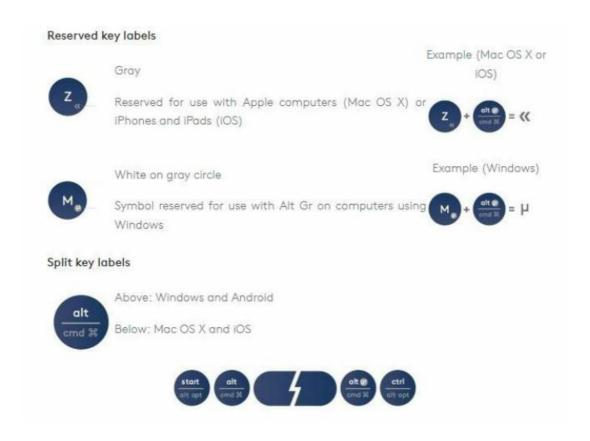

Power management

- Check battery level
- The status LED on the side of the keyboard turns red to indicate battery power is low and it's time to change batteries.

Replace batteries

- 1. Lift the battery compartment up and off the base.
- 2. Replace the spent batteries with two new AAA batteries and reattach the compartment door.



TIP: Install Logi Options+ to set up and receive battery status notifications.

Compatibility

BLUETOOTH WIRELESS TECHNOLOGY-ENABLED DEVICES:

Apple

- Mac OS X (10.10 or later)
- Windows
- Windows 7, 8, 10 or later
- Chrome OS
- Chrome OS™
- Android
- · Android 3.2 or later

Documents / Resources



<u>logitech K380 Wireless Multi Device Keyboard</u> [pdf] User Guide

K380, K380 Wireless Multi Device Keyboard, Wireless Multi Device Keyboard, Multi Device Keyboard, Device Keyboard, Keyboard

References

• User Manual

Manuals+,