

logitech K400 Plus Touchpad Keyboard for TV User Guide



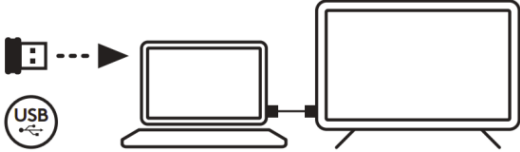
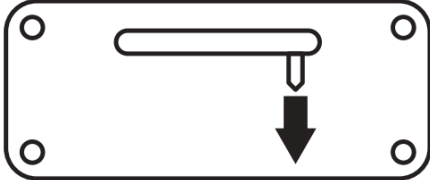
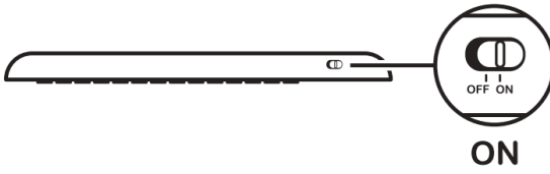
Contents [[hide](#)]

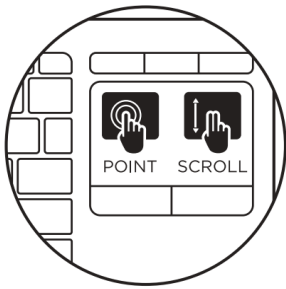
[1 Using Instruction](#)

[2 Documents / Resources](#)

[2.1 References](#)

Using Instruction

1. 
2. 
3. 
4. 



EU Directive 2014/53/EU:

Y-R0055-Proprietary 2.4 GHz (2400-2483.5 MHz): 2405-2474 MHz; 6.47 dBm C-U0008-Proprietary 2.4 GHz (2400-2483.5 MHz): 2405-2474 MHz; 2.21 dBm



logitech.com/support/k400plus



Documents / Resources

	logitech K400 Plus Touchpad Keyboard for TV [pdf] User Guide YR0055, JNZYR0055, yr0055, K400 Plus Touchpad Keyboard for TV, K400 Plus, Touchpad Keyboard for TV, Keyboard for TV
---	---

References

- [User Manual](#)

Logitech

JNZYR0055, K400 Plus, K400 Plus Touchpad Keyboard for TV, Keyboard for TV, Logitech, Touchpad Keyboard for TV, YR0055

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.