

# logitech Lightspeed Wireless Installation Guide

Home » Logitech » logitech Lightspeed Wireless Installation Guide Ta


#### **Contents**

- 1 logitech Lightspeed Wireless Installation Guide
- 2 LIGHTSPEED Wireless Gaming Mouse Souris gaming sans fil **LIGHTSPEED**
- **3 SETUP INSTRUCTIONS**
- 4 Tips:
- **5 6 FULLY PROGRAMMABLE BUTTONS**
- **6 LED INDICATOR**
- **7 G HUB SOFTWARE**
- 8 Read More About This Manual & Download PDF:
- 9 Documents / Resources
  - 9.1 References
- **10 Related Posts**

logitech Lightspeed Wireless Installation Guide




LIGHTSPEED Wireless Gaming Mouse Souris gaming sans fil LIGHTSPEED

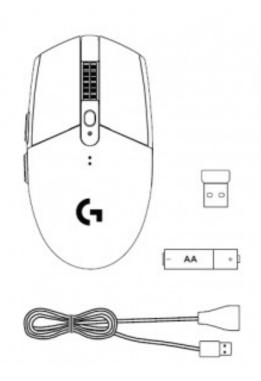


# **SETUP INSTRUCTIONS**


1. Remove the battery cover by pressing the top of the cover and pulling it downwards

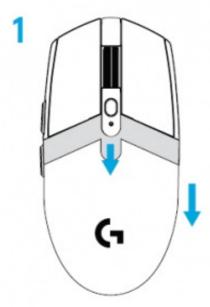


# 2. Remove the receiver

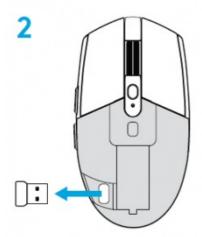

# 3. Insert the battery

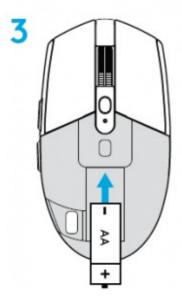

4. Close the battery cover

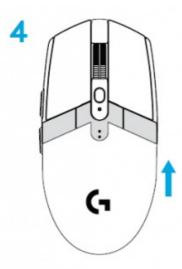


5. Make sure the mouse is turned on via the switch on the bottom of the mouse




6. Recommended: Insert receiver into the receiver extension cable. Insert extension cable into your USB port. Alternatively,

insert receiver directly into your USB port

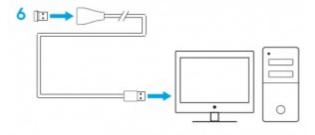

7. Download the G HUB software

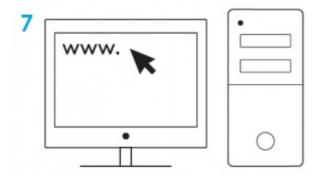

logitechG.com/GHUB


#### logitechG.com/support

#### Tips:

To make your mouse lighter, a lithium AA battery (not included) can be used. —


Keep the mouse and receiver 2 m+ away from wireless routers or other 2.4GHz wireless devices to minimize environmental noise. —

G304 / G305 has a wireless range of up to 10 meters. To ensure optimal performance in noisy wireless environments, it is recommended to keep the receiver within 20 cm of the mouse.

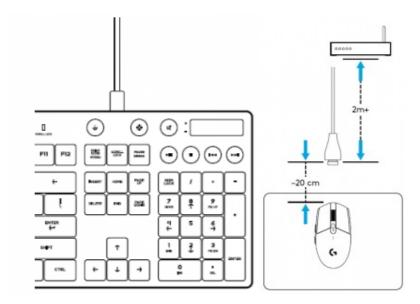


#### **6 FULLY PROGRAMMABLE BUTTONS**

#### 1. Left (Button 1)

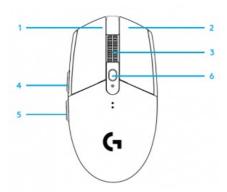

- 2. Right (Button 2)
- 3. Wheel click (Button 3)
- 4. Forward (Button 4)
- 5. Back (Button 5)
- 6. DPI cycle (Button 6)

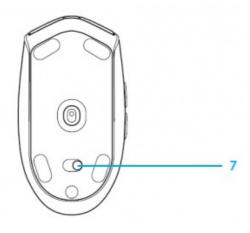

7. On/Off switch (bottom of mouse, not programmable)

#### **LED INDICATOR**

Battery life

Flashing red: battery <15%

#### DPI

Yellow: step 1 - 400 DPI

White: step 2 – 800 DPI (default) Orange: step 3 – 1600 DPI Magenta: step 4 – 3200 DPI

Blue: step 5 – 6400 DPI (Step 5 can be activated via software only)

#### Mode

Cyan: performance mode (default)

Green: endurance mode (can be activated via software only).

### Tips:


Activating endurance mode will degrade tracking performance but improve battery life.

#### **G HUB SOFTWARE**

You can customize the onboard profile settings using the G HUB. These settings include button programming, report rate, performance/endurance modes and tracking behavior. G304 / G305 allows up to 5 DPI settings.

By default, G304 / G305 has the following settings:

- —DPI: 400/800/1600/3200
- -Report rate: 1ms
- -Performance mode

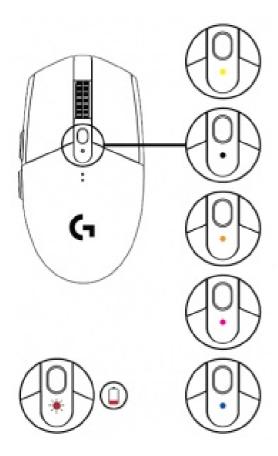

©2020 Logitech. Logitech G, Logi and their respective logos are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice

#### Read More About This Manual & Download PDF:

#### **Documents / Resources**



<u>logitech Lightspeed Wireless</u> [pdf] Installation Guide Lightspeed Wireless, G305

#### References

- Ca Logitech G HUB Advanced Gaming Software, RGB & Game Profiles
- Gaming Logitech Support + Download

Manuals+,