


## Logitech C310 HD Webcam User Manual

[Home](#) » [Logitech](#) » Logitech C310 HD Webcam User Manual 

### Contents

 
- [1 Setup Guide](#)
- [2 Logitech C310 HD WEBCAM Complete Setup Guide](#)
  - [2.1 KNOW YOUR PRODUCT](#)
  - [2.2 Read More About This Manual & Download PDF:](#)
- [3 Related Posts](#)

### Setup Guide



**Logitech C310 HD WEBCAM**  
**Complete Setup Guide**

**KNOW YOUR PRODUCT**

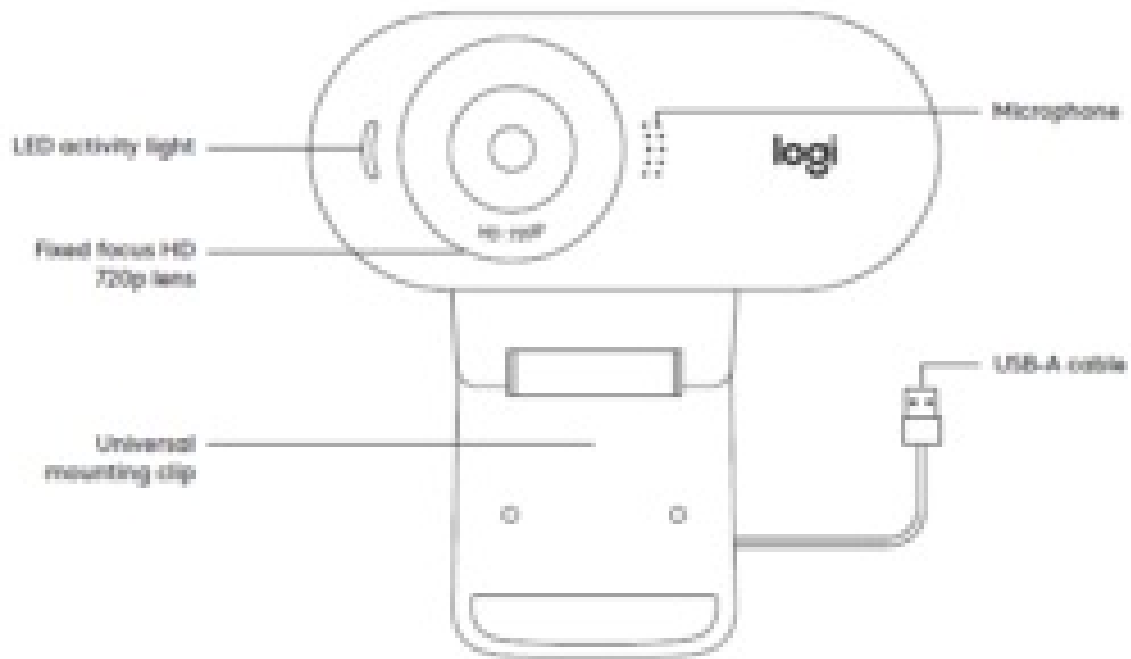


## WHAT'S IN THE BOX

1. Webcam with 5 ft (1.5 m) attached USB-A cable
2. User documentation




## SETTING UP THE WEBCAM

 
1. Place your webcam on a computer, laptop or monitor at a position or angle you desire.

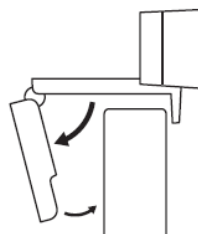

 2. Adjust the webcam to make sure the end on the universal mounting clip is flush with the back of your device.

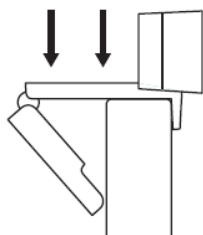


 3. Manually adjust the webcam up/down to the best position to frame yourself.

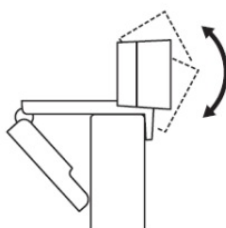


### CONNECTING THE WEBCAM VIA USB-A

 Plug the USB-A connector into the USB-A port on your computer.

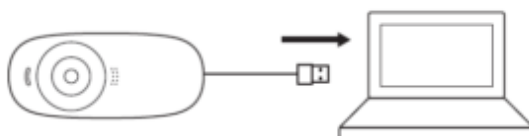

### SUCCESSFUL CONNECTION

 LED activity light will light up when the webcam is in use by an application.

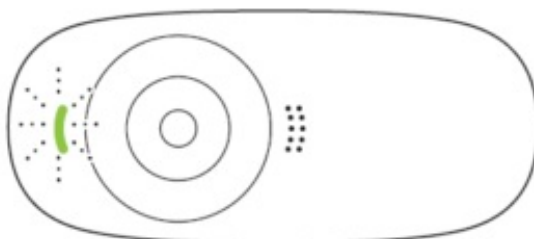

### DIMENSIONS

#### INCLUDING FIXED MOUNTING CLIP:

Height x Width x Depth:

2.80 in (71.15 mm) x 1.23 in (31.3 mm) x 1.02 in (25.95 mm)

Cable Length: 5 ft (1.5 m)

Weight: 2.51 oz (71.2 g), including clip and cable

**[www.logitech.com/support/C310](http://www.logitech.com/support/C310)**

**Read More About This Manual & Download PDF:**

**Logitech C310 HD Webcam User Manual – [Optimized PDF](#)**

**Logitech C310 HD Webcam User Manual – [Original PDF](#)**