

Logitech Harmony Smart Control Add-on



Logitech Harmony Smart Control Add-on User Manual

[Home](#) » [Logitech](#) » Logitech Harmony Smart Control Add-on User Manual 

Contents

- [1 Logitech Harmony Smart Control Add-on User Manual](#)
- [2 Package contents](#)
- [3 Harmony remote](#)
- [4 Troubleshooting](#)
- [5 References](#)



Logitech Harmony Smart Control Add-on User Manual




Package contents

1. Harmony Smart Remote

What You Need

2. Harmony Hub (sold separately)


Hub must be already set up

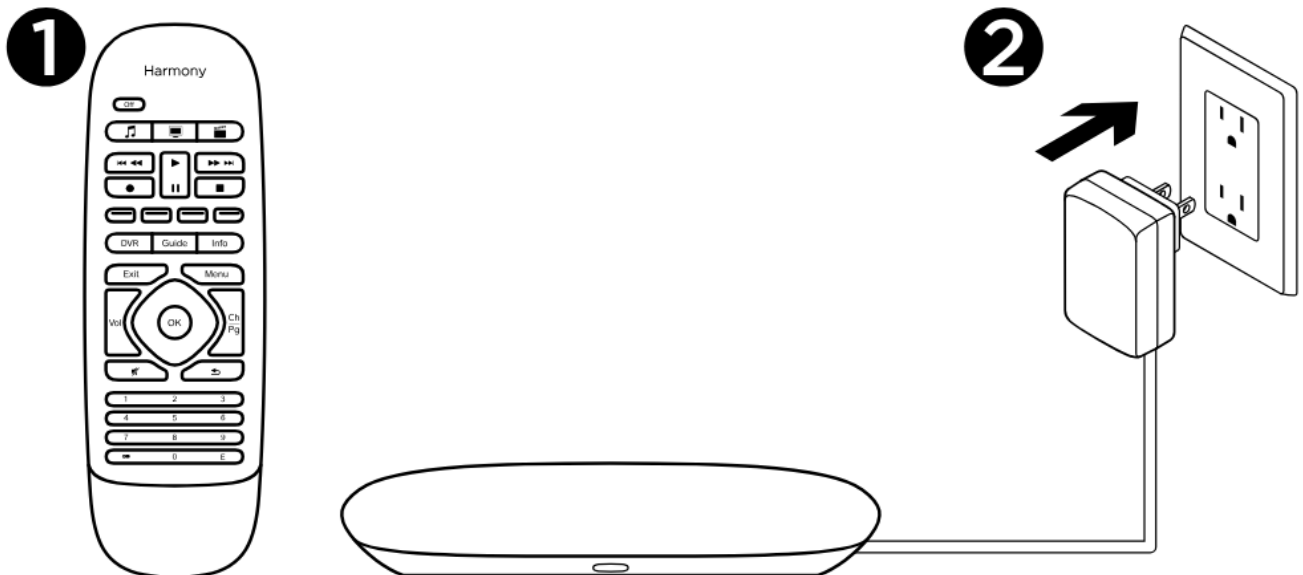

Let's Get Started

- If not already done, install the Harmony App from the Apple App Store or Google Play.
- Launch the Harmony App from your smartphone or tablet.
- Tap Menu and open Settings.
- Select Upgrade Remote and then Add Smart Remote.
- Follow the instructions to pair the remote.
- Optionally, you may visit setup.myharmony.com to perform setup using a Mac or Windows computer.

Harmony remote

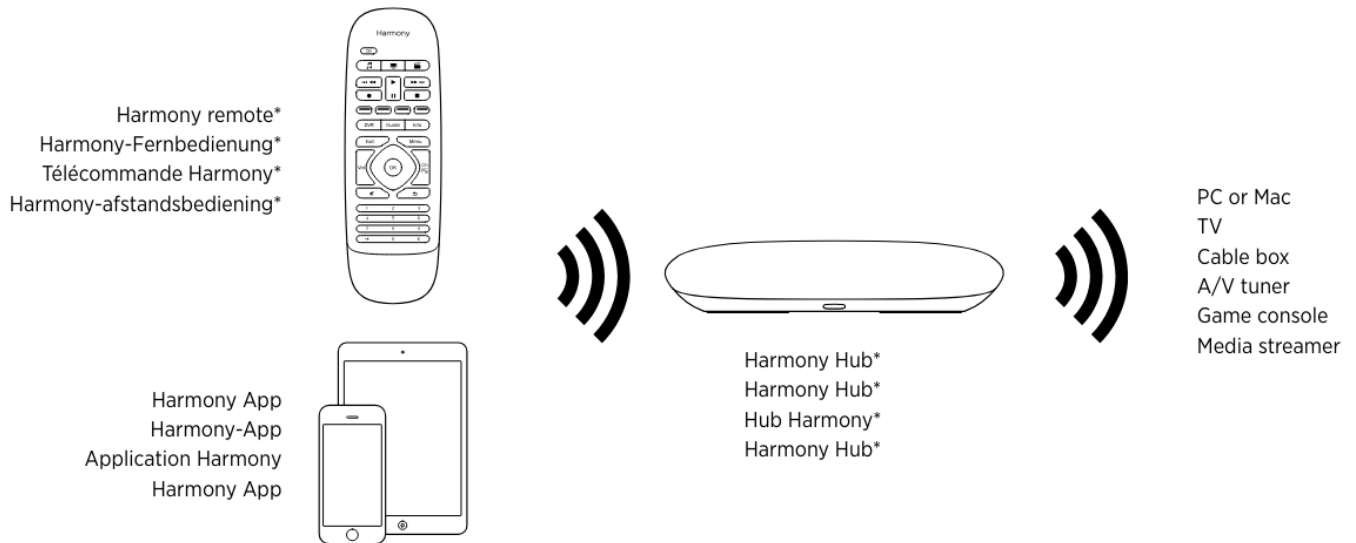

- The remote connects to Harmony Hub wirelessly so there's no need to point the remote at your devices.
- The remote may launch up to 6 Activities and will stay in sync with activities started from the Harmony App.
- If you have not already done so, download and install the Harmony App from the Apple App Store or Google Play to pair your remote with the hub and customize buttons on the remote.

Harmony Hub

- The Harmony Hub receives commands from the remote wirelessly and from the Harmony App on your mobile device via Wi-Fi.
- The hub transmits the commands via IR and Bluetooth® to control devices in its range*.
- The LED is green when operating normally; red when starting up, not yet configured or if Wi-Fi connectivity is lost.

Harmony App

- The Harmony App on your mobile device sends commands to the Harmony Hub via Wi-Fi.
- The Harmony App enables you to control your entertainment system from your mobile device.
- The Harmony App uses Bluetooth® during initial setup to connect the hub to your Wi-Fi network.
- Multiple mobile devices can be connected to one hub.
- If one of your devices is not responding, try repositioning the hub or IR mini blaster closer to the front of that

device.

- For more information visit support.myharmony.com/smart-remote-add-on

Troubleshooting

- Pressing an Activity button on my remote is not starting the assigned Activity.
- Open the battery compartment and make sure the battery is installed properly.
- Press the Volume Mute button and verify if the LED on the hub flashes.
- Launch the Harmony App on your smartphone or tablet, navigate to Edit Activities and Devices, and verify if an Activity has been assigned to the Activity button in question.
- If the remote has lost its pairing with the hub, press the pairing button on the back of the hub and then simultaneously press and hold the Menu and Mute buttons on the remote for a few seconds.
- When I press an Activity button, only some of the required devices power on.
- Launch the Harmony App on your smartphone or tablet and use the help function to troubleshoot.
- Visit support.myharmony.com/smartremote-add-on for additional help.

Access support articles and Harmony community forums:

support.myharmony.com/smart-remote-add-on

Download PDF: [Logitech Harmony Smart Control Add-on User Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.