

# Logitech Keyboard K120 User Manual

[Home](#) » [Logitech](#) » Logitech Keyboard K120 User Manual 

## Contents

- [1 Logitech Keyboard K120](#)
- [2 Troubleshooting](#)
- [3 \[www.logitech.com/support\]\(http://www.logitech.com/support\)](#)
- [4 What do you think?](#)
- [5 Specs & Details](#)
  - [5.1 Dimensions](#)
  - [5.2 Technical Specifications](#)
  - [5.3 Warranty Information](#)
  - [5.4 Part Number](#)
- [6 Read More About:](#)
- [7 Download](#)
- [8 FAQ – Frequently Asked Questions](#)
- [9 Related Posts](#)

## Logitech Keyboard K120


Logitech Keyboard K120

### User Manual



K120 Corded is reliable and durable, equipped with a number pad with an easy-to-use design that works right out of the box. Just plug in this corded keyboard via USB and go.



1

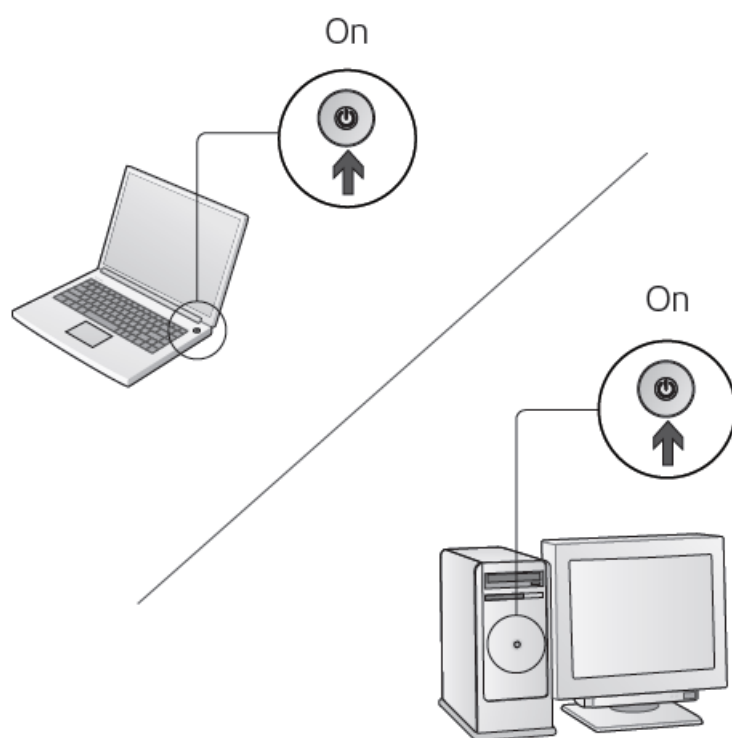

# 2

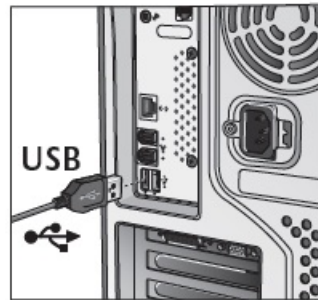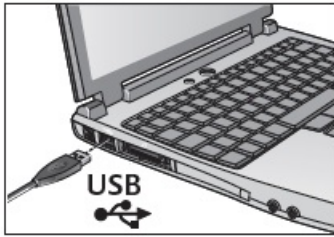

## Troubleshooting

My keyboard doesn't work.

- Check your keyboard USB connection.
- Try another USB port on the computer.
- If the keyboard still doesn't work, please restart the computer.

[www.logitech.com/support](http://www.logitech.com/support)

## What do you think?

Please take a minute to tell us. Thank you for purchasing our product.

[www.logitech.com/ithink](http://www.logitech.com/ithink)

© 2009 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

Apple, Mac, and Macintosh are trademarks of Apple Inc., registered in the U.S. and other countries.

---

## Specs & Details

### Dimensions

**Height:** 6.10 in (155 mm)

**Width:** 17.72 in (450 mm)

**Depth:** 0.93 in (23.5 mm)

**Weight:** 19.4 oz (550 g)

**Cable length:** 59.06 in (150 cm)

### Technical Specifications

#### Keyboard

- **Spill-resistant design**
- **10-Key Number pad**
- **Caps lock indicator light**
- **Num lock indicator light**
- **Up to 10 million keystrokes (excludes number lock key)**
- **Key type:** Deep profile

#### Sustainability

- **Black plastics:** 51% post-consumer recycled material

#### Warranty Information

3-year limited hardware warranty

#### Part Number

- 920-002478

---

## Read More About:

[Logitech Keyboard K120 User Manual](#)

## Download

Logitech Keyboard K120 User Manual – [ [Download PDF](#) ]

---

## FAQ – Frequently Asked Questions

### My NumPad/KeyPad is not working, what should I do?

– Make sure that the NumLock key is enabled. If pressing the key once doesn't enable NumLock, press and hold the key for five seconds.



- Verify that the correct keyboard layout is selected in Windows Settings and that the layout matches your keyboard.
- Try enabling and disabling other toggle keys such as Caps Lock, Scroll Lock, and Insert while checking if the number keys work on different apps or programs.
- Disable **Turn on Mouse Keys** :
  1. Open the **Ease of Access Center** — click the **Start** key, then click **Control Panel > Ease of Access** and then **Ease of Access Center**.
  2. Click **Make the mouse easier to use**.
  3. Under **Control the mouse with the keyboard**, uncheck **Turn on Mouse Keys**.
- Disable **Sticky Keys, Toggle Keys & Filter Keys** :
  1. Open the **Ease of Access Center** — click the **Start** key, then click **Control Panel > Ease of Access** and then **Ease of Access Center**.
  2. Click **Make the keyboard easier to use**.
  3. Under **Make it easier to type**, make sure all checkboxes are unchecked.
- Verify the product or receiver is connected directly to the computer and not to a hub, extender, switch, or something similar.
- Make sure the keyboard drivers are updated. Click [here](#) to learn how to do this in Windows.
- Try using the device with a new or different user profile.
- Test to see if the mouse/keyboard or receiver on a different computer.

## Cleaning your Logitech device

In the event your Logitech device needs cleaning we have some recommendations:

### Before You Clean

- If your device is cabled, please unplug your device from your computer first.
- If your device has user-replaceable batteries, please remove the batteries.
- Be sure to switch off your device and then wait 5-10 seconds before starting to clean.
- Don't put cleaning liquids directly on your device.
- For devices that are not waterproof, please keep moisture to a minimum and avoid any liquid dripping or seeping into the device
- When using cleaning sprays, spray the cloth and wipe — do not spray the device directly. Never submerge the device in a liquid, cleaning or otherwise.
- Don't use bleach, acetone/nail polish remover, strong solvents, or abrasives.

### Cleaning Keyboards

- To clean the keys, use regular tap water to lightly moisten a soft, lint-free cloth and gently wipe down the keys.
- Use compressed air to remove any loose debris and dust between the keys. If you do not have compressed air available, you could also use cold-air from a hair-dryer.
- You can also use fragrance-free disinfecting wipes, fragrance-free anti-bacterial wet wipes, makeup removing tissue, or alcohol swabs containing less than 25% concentration of alcohol.
- Don't use bleach, acetone/nail polish remover, strong solvents, or abrasives.

### Cleaning Mice or Presentation Devices

- Use tap water to lightly moisten a soft, lint-free cloth and gently wipe down the device.
- Use lens cleaner to lightly moisten a soft, lint-free cloth and gently wipe down your device.
- You can also use fragrance-free disinfecting wipes, fragrance-free anti-bacterial wet wipes, makeup removing tissue, or alcohol swabs containing less than 25% concentration of alcohol.
- Don't use bleach, acetone/nail polish remover, strong solvents, or abrasives.

### Cleaning Headsets

- Plastic parts (headband, mic boom, etc.): it is recommended to use fragrance-free disinfecting wipes, fragrance-free anti-bacterial wet wipes, makeup-removing tissue, or alcohol swabs containing less than 25% concentration of alcohol.
- Leatherette earpads: it is recommended to use fragrance-free disinfecting wipes, fragrance-free anti-bacterial wet wipes, or make-up removal tissue. Alcohol wipes can be used on a limited basis.
- For the braided cable: it is recommended to use anti-bacterial wet wipes. When wiping cables and cords, grip the cord mid-way and pull towards the product. Don't forcefully pull the cable away from the product or away from the computer.
- Don't use bleach, acetone/nail polish remover, strong solvents, or abrasives.

### **Cleaning Webcams**

- Use tap water to lightly moisten a soft, lint-free cloth and gently wipe down the device.
- Use lens cleaner to lightly moisten a soft, lint-free cloth and gently wipe down the webcam lens.
- Don't use bleach, acetone/nail polish remover, strong solvents, or abrasives.

### **If Your Device Still Isn't Clean**

- In most cases, you can use isopropyl alcohol (rubbing alcohol) or fragrance-free anti-bacterial wipes and apply more pressure when cleaning. Before using rubbing alcohol or wipes, we suggest you test it first in an inconspicuous area to make sure it doesn't cause discoloration or remove any printing on your device.
- If you're still not able to get your device clean, please consider [contacting us](#).

### **COVID-19**

Logitech encourages users to properly sanitize their products in accordance with guidelines put out by the [World Health Organization](#) and the [Centers for Disease Control](#) guidelines.

### **Windows 8 and Windows 10 product support and device compatibility**

To check if your Logitech product works with Windows 8 or Windows 10, first select the appropriate product category from the list below.

- [Mice and keyboards](#)
- [Tablet and laptop accessories](#)
- [Gaming products](#)
- [Harmony remotes](#)
- [Speakers](#)
- [Headphones and headsets](#)
- [Smart radios](#)
- [Squeezebox network music players](#)
- [Alert security cameras](#)
- [WiLife security cameras](#)
- [Webcams](#)


### **US, US International and United Kingdom keyboard layouts**

See the following for generic English-language keyboard layouts:


- [US](#)
- [US International](#)
- [United Kingdom](#)

---


**US**

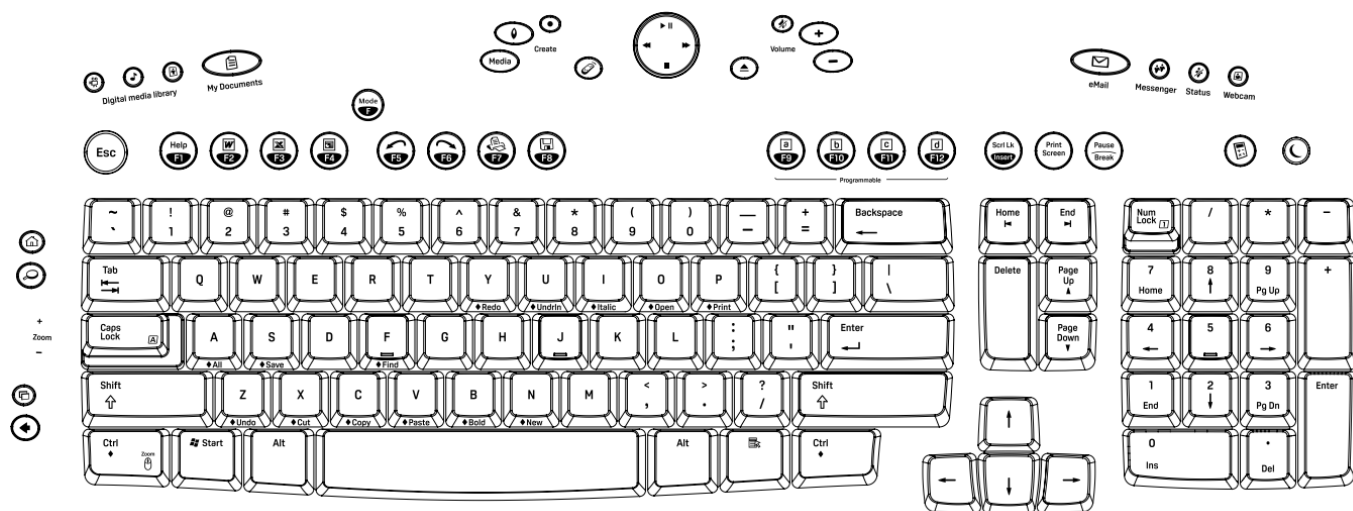

## US International

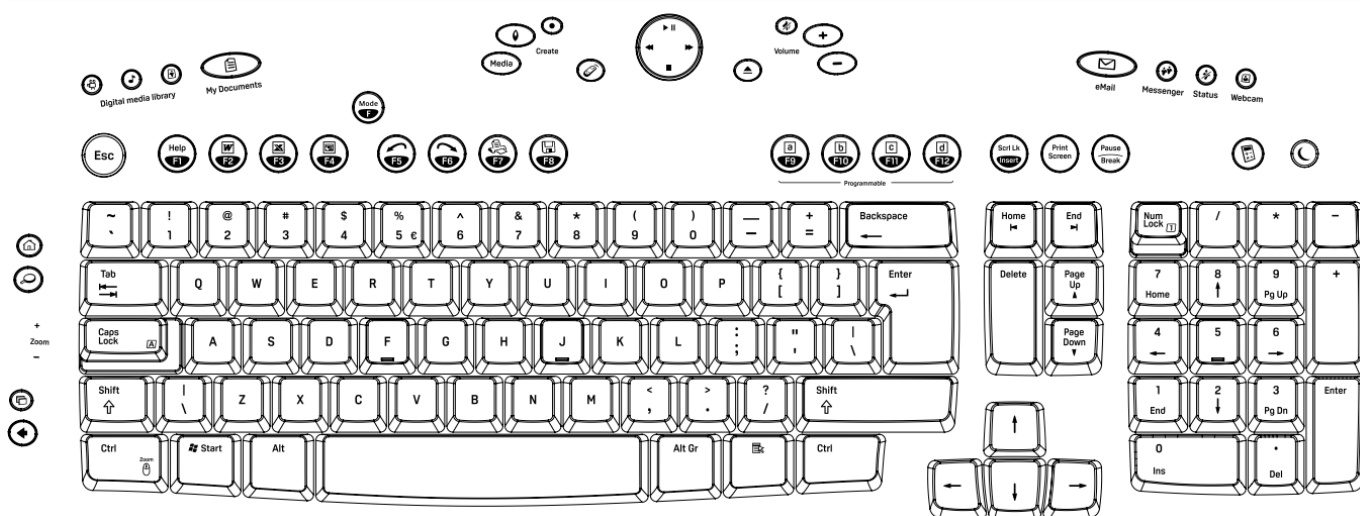

## United Kingdom

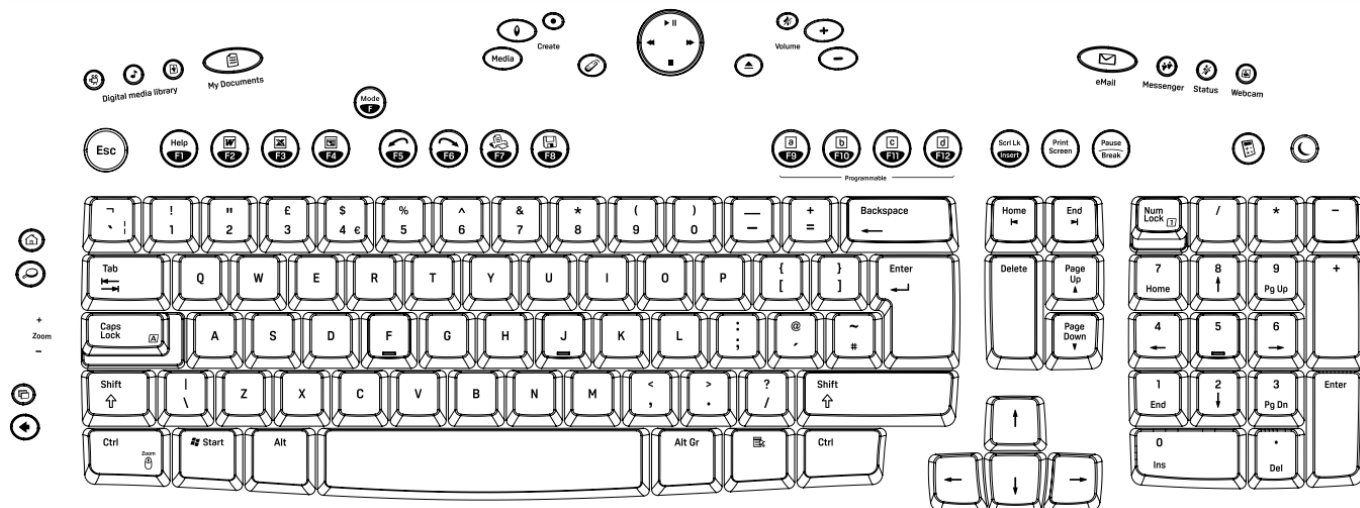

## Supported operating systems for my Keyboard K120

The Keyboard K120 is supported by these operating systems:

- Windows 7
- Windows XP
- Windows Vista
- Linux 2.6 or above or above

### NOTE:

Your K120 is not supported on Windows 98, Windows ME, Windows 2000, Macintosh OS X or UNIX.

## Downloading the latest software for my Logitech mouse and keyboard

To find out if software is available for your product, do the following:

1. Go to the [Product Support Page](#).
2. Click on the category for your product.
3. Locate the picture of your product and click on it.


NOTE: If you can't find the picture of your product on this page, scroll down and click on "Still can't find your product?" at the bottom of the page.

4. If two pictures look similar, check the Model Numbers (M/N) displayed with the M/N on your product. The M/N can usually be found here:

- **Mouse:** On a label inside the battery compartment, underneath the batteries or on the bottom of the product.
- **Keyboard:** On a label on the bottom of the product.

5. Click on the **Downloads** tab and select your operating system in the drop-down to check if software is available. (see screenshot below).

NOTE: Most Logitech products will work with no additional software or drivers needed. If no software is shown for your operating system on your PC or Mac, then software is not available for your product.

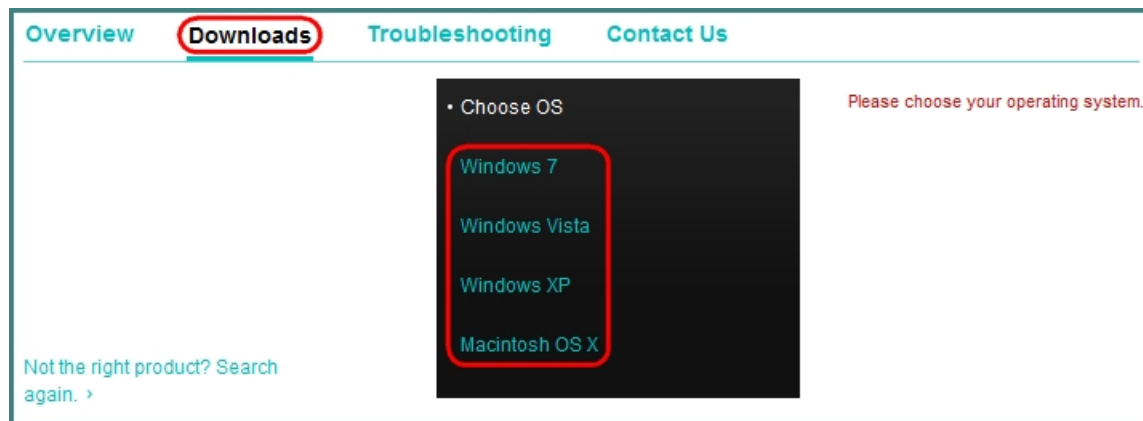

If you're using Windows and need to determine if you need 32 or 64-bit software, refer to [Knowledge Base article 12320](#).

## Num Lock disabled after Windows 10 starts

By default, the Num Lock on your keyboard is disabled each time Windows 10 boots up after a shutdown or restart.

To configure your operating system so that Num Lock stays on during startup, please contact professional support for your operating system. This requires advanced changes that need to be done under the guidance of a professional technician.