

Logitech P710e Mobile Speakerphone



# Logitech P710e Mobile Speakerphone User Manual

[Home](#) » [Logitech](#) » Logitech P710e Mobile Speakerphone User Manual 

## Contents

 
- [1 Logitech P710e Mobile Speakerphone User Manual](#)
- [2 What's In Box](#)
- [3 Product Features](#)
- [4 Inserts/sliding top](#)
- [5 Troubleshooting](#)
- [6 References](#)
- [7 Related Posts](#)



 
 
 
 
**Logitech P710e Mobile Speakerphone User Manual**





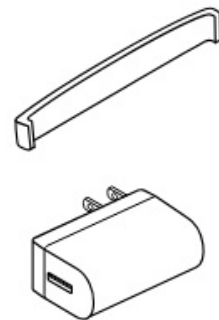



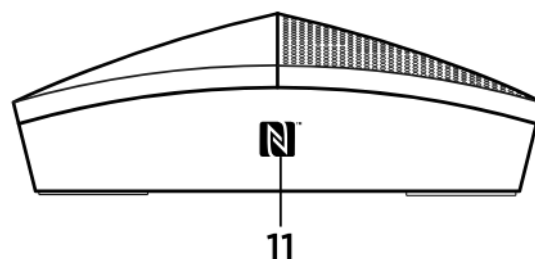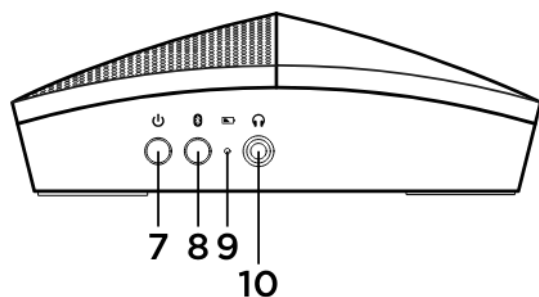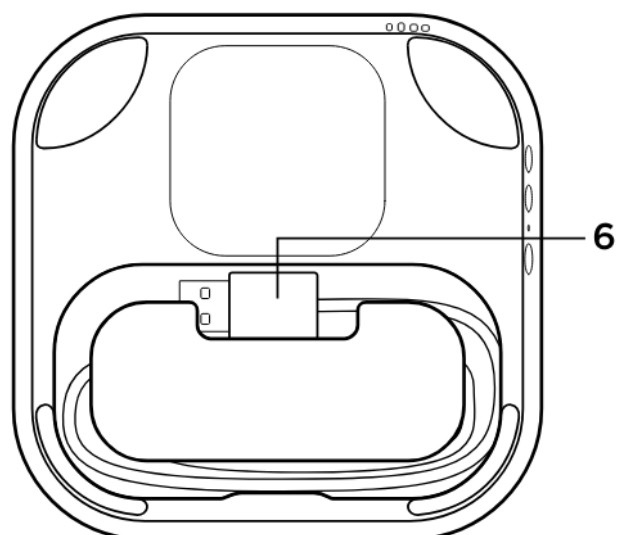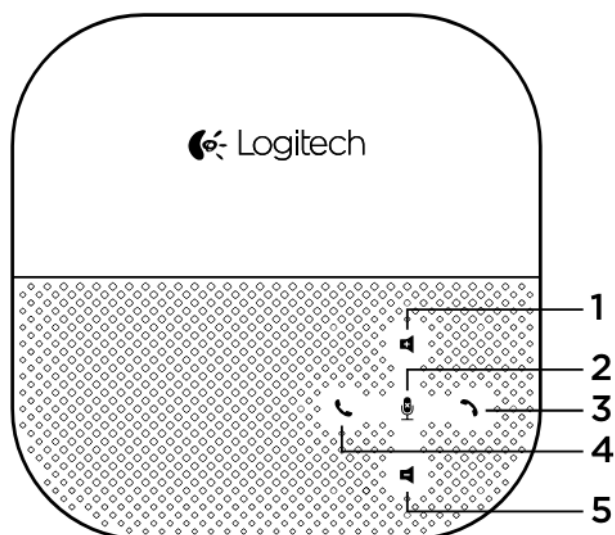


## What's In Box



## Product Features



 
 
1. Increase volume
2. Microphone mute
3. Call end
4. Call answer
5. Decrease volume
6. USB cable
7. Power
8. Bluetooth pairing
9. Battery indicator light
10. Headphone jack
11. NFC target area

	Power button	Powers on or off the P710e
	Bluetooth pairing button	Press and hold until blue lights appear in a clockwise circle on the top of the device to place P710e in pairing mode
	Battery level indicator	Will show green once fully charged, red indicates 30 minutes of battery life left, and flashing red indicates charging
	Call answer button	Press to answer calls
	Call end/reject button	Press to end a call or reject an incoming call
	Volume up button	Press to increase speaker volume
	Volume down button	Press to decrease speaker volume
	Microphone button	Press to mute or unmute the microphone
	NFC target area	Place the NFC antenna of your mobile device near the target area to pair or connect/disconnect


We recommend you charge the P710e before the first use. You can charge by either using the enclosed AC adapter or by connecting to a USB port on a computer—although the AC adapter charges more quickly.

Charge times with the AC adapter	
15 minutes of charge	Provides about 2 hours of talk time
½ hour of charge	Provides about 4 hours of talk time
3 hours of charge	Provides about 15 hours of talk time


## Inserts/sliding top

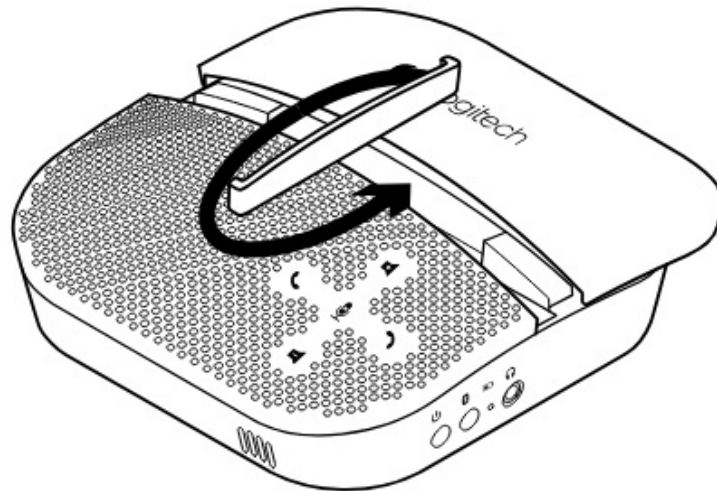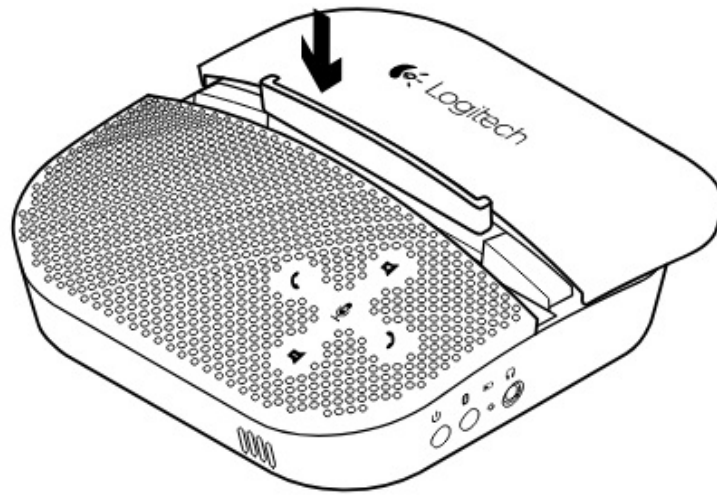

 The top of the P710e can be slid back to reveal a concealed stand for your mobile device. This stand is especially useful when using your mobile device for video conferences for greater stability of the image for those on the other end of the call.

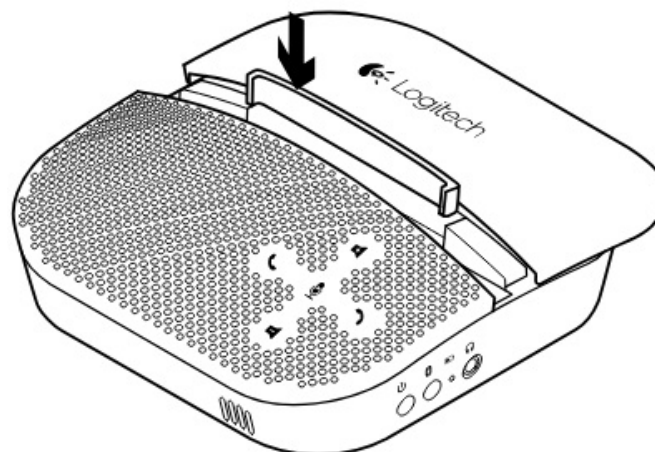

 
There is an insert that can be used in the concealed stand to adjust to the size of your mobile device. The insert can be placed in two ways as illustrated. The approximate size of the mobile device that will fit in the concealed stand is:

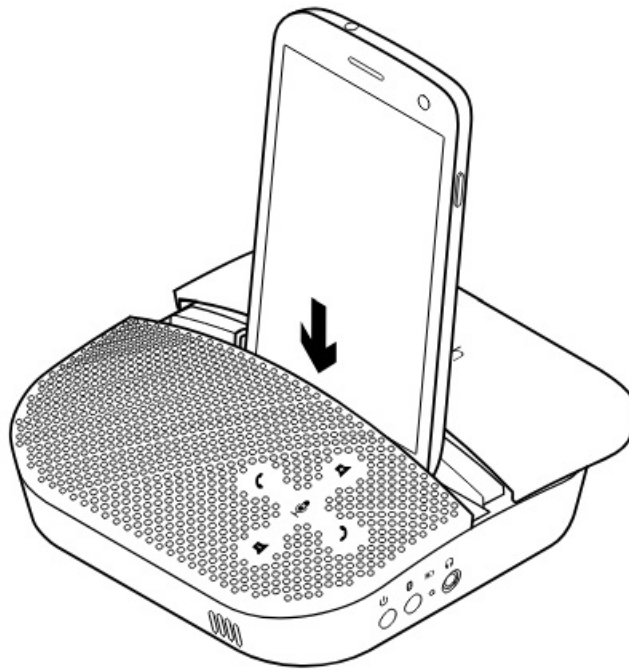

- Side 2: 0mm–8.5mm
- Side 1: 8.5mm–10.5mm

#### Initial setup of the device

 - The very first time you use the P710e, you must either connect it to a PC or an AC outlet.

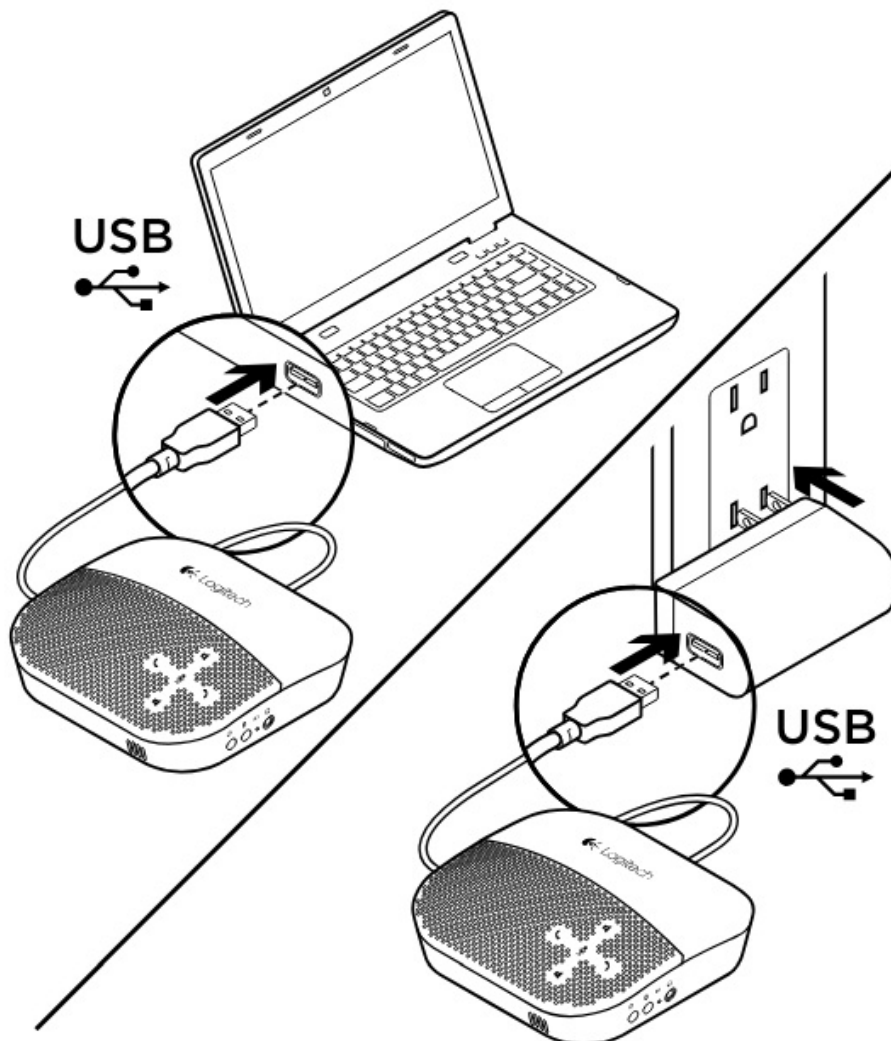


## Setup with a computer

- Connect the USB cable from the P710e to your PC.
- Ensure that the P710e is selected as the default audio device in your OS settings and your application.

## Setup with a Bluetooth device

 - Press and hold the Power button to turn ON the device. The blue lights start flashing in a clockwise circle.
- Place your mobile device in pairing mode and pair it to the P710e. You may pair up to eight Bluetooth devices with only two active at the same time.
- If you have an NFC-enabled device, position it near the NFC target area on the P710e.
- You should see a message on your phone asking if you would like to pair to the P710e.
- P710e must be powered on.
- Note, position your NFC-enabled device near the NFC target area a second time to disconnect from the P710e.
- This is helpful if you're still in the range of the P710e, but want to handle calls on the mobile device.
- Repeat the procedure to reconnect.

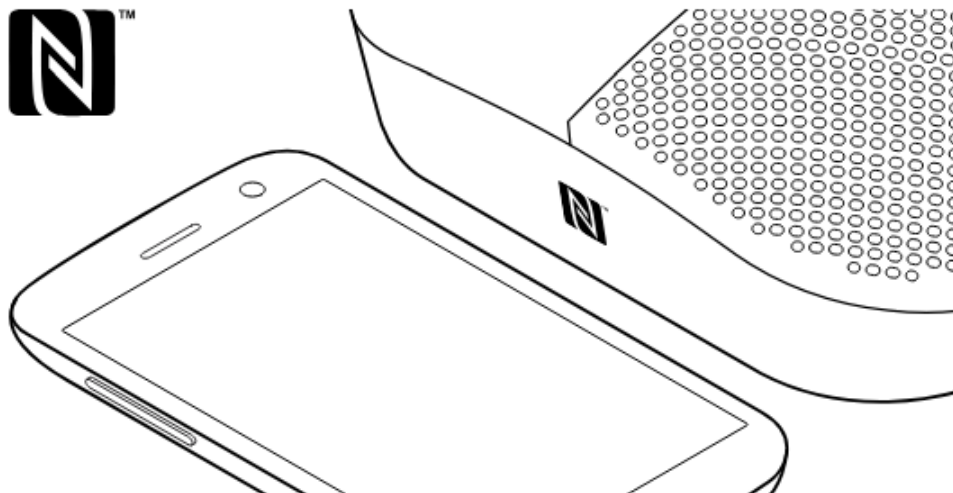

## Troubleshooting

### Bad or no audio?

- Check if the USB cable is fully inserted into the computer's USB port.
- Check that your mobile device is paired with the P710e.
- Using a non-powered USB hub may degrade product performance.
- Check the volume level in both your media/ voice application and your PC.
- Try restarting your media/voice application.
- Ensure the microphone is not muted.
- Make sure the Logitech P710e Speakerphone is the default audio device.

### Windows Vista, Windows 7

- Close all media/voice applications.
- Go to the Start/Control Panel/ Sound/ Playback Devices tab.

- Choose Logitech P710e.
- Click on Set Default.
- Click on the “Recording” tab.
- Choose Logitech P710e.
- Click on “Set Default”.
- Restart your media/video application.

## Windows 8

- Close all media/voice applications.
- From the Start Menu, select the “Desktop” tile.
- From the Charms menu, select Settings>Control Panel>
- Hardware and then Sound.
- Go to Sound and select the “Playback” tab.
- Choose Logitech P710e.
- Click on Set Default.
- Click on the “Recording” tab.
- Choose Logitech P710e.
- Click on “Set Default”.
- Restart the media/video application.

## Mac 10.6 X and above

- Close all media/voice applications
- Open System Preferences.
- Select the Sound/ Output tab, and then select Logitech P710e”.
- Restart the media/video application.
- For additional support, please visit us at [www.logitech.com/support](http://www.logitech.com/support)

All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Logitech is under license. The N Mark is a trademark or registered trademark of NFC Forum, Inc. in the United States and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

**Download PDF:** [Logitech P710e Mobile Speakerphone User Manual](#)

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The “Bluetooth®” word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The “Wi-Fi®” word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.