

Logitech WONDERBOOM 3 Bluetooth Speaker



Logitech WONDERBOOM 3 Bluetooth Speaker User Manual

[Home](#) » [Logitech](#) » Logitech WONDERBOOM 3 Bluetooth Speaker User Manual 

Contents

- [1 Logitech WONDERBOOM 3 Bluetooth Speaker User Manual](#)
- [2 POWER](#)
- [3 PLAY MUSIC](#)
- [4 CONTROL MUSIC](#)
- [5 CHARGE](#)
- [6 References](#)



Logitech WONDERBOOM 3 Bluetooth Speaker User Manual



POWER



To get started with your WONDERBOOM 3, press the power button located on the top of your speaker. When powered on, WONDERBOOM 3 automatically reconnects to the last mobile device it was connected to. WONDERBOOM 3 will automatically turn itself off after 15 minutes of inactivity to save battery life. To pair WONDERBOOM 3 with your mobile device, press and hold the Bluetooth button until you hear the tone. Go to the Bluetooth settings on your mobile device and select WONDERBOOM 3 from the list.

CONNECT

To pair WONDERBOOM 3 with your mobile device, press and hold the Bluetooth button until you hear the tone. Go to the Bluetooth settings on your mobile device and select WONDERBOOM 3 from the list.



PLAY MUSIC

Once WONDERBOOM 3 is on and connected to your mobile device, just hit play to begin streaming your music. You can control the volume from your mobile device, or directly from your WONDERBOOM 3 by pressing the “+” or “-” button.



CONTROL MUSIC

You can control the music directly from your WONDERBOOM 3 without picking up your phone. To pause the stream, simply press the centre button located on the top of the speaker. Press it again to resume playing. Double-press the button will skip to the next track.



CHARGE

To charge your WONDERBOOM 3, plug the included USB cable into the micro-USB port located inside the weather door.



Warning

A wet or contaminated micro-USB connector may cause excessive heat or melting and may lead to fire damage or personal injury. Always charge your speaker with a clean, dry microUSB connector.

BATTERY LEVEL

You can check the battery level of your WONDERBOOM 3 by pressing both the volume + and volume – buttons simultaneously. If you hear this tone, it means that your WONDERBOOM 3 is roughly half full (or half empty).



{audio clip}

If you hear this tone, your WONDERBOOM 3 is running low on power and needs a charge.

DOUBLE UP

Connect two WONDERBOOM 3 for a bigger sound. PRESS AND HOLD the centre button on 1 speaker and wait for the sonification. While holding the centre button on speaker 1, press the centre button on speaker 2 until you hear a pairing tone.



{Sound clip}

You could easily switch between 'Party Louder' mode and 'Immersive Stereo' mode by pressing the centre button. Press the Bluetooth button of one of the two speakers to leave the DOUBLE-UP mode. If you hear this confirmation tone, it means that you are in double sound mode. If you hear this confirmation tone, it means that you are in stereo mode.

MULTI-HOST

WONDERBOOM 3 can simultaneously connect with up to two Bluetooth mobile devices. Simply pair and connect each mobile device to WONDERBOOM 3, and then you can take turns playing music from each device.

Still, Need help?

Our agents are here to help Monday -Friday from 7 AM – 5 PM PST. With two ways to contact us, communicate in the way that you like best!

Shop

HYPERBOOM

MEGABOOM 3

BOOM 3

boom 3

WONDERBOOM 3

RETAILERS

Hours

Monday – Friday
7:00 AM – 5:00 PM PST

Learn

Press
Recycling
Heritage
Helpful Info

Download PDF: [Logitech WONDERBOOM 3 Bluetooth Speaker User Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.