



logitech M337 Wireless Mouse User Guide

[Home](#) » [Logitech](#) » logitech M337 Wireless Mouse User Guide 



M337 Wireless Mouse User Guide

EXPLORE THE M337

Logitech M337 Bluetooth Mouse is a lightweight wireless mouse that's comfortable to use—on the go, in the office, or at home.

The M337 connects to computers and other devices supporting Bluetooth® wireless technology, eliminating the unsightly clutter of wires. The sculpted shape conforms to your hand and provides continuous comfort over hours of use.

Unlock all the possibilities your mouse offers by installing Logitech Options™. In addition to optimizing the mouse for your preferred operating system, the software lets you customize the M337 to fit your individual needs and personal style.

Logitech Options

Note: Descriptions of features that require installation of Logitech Options are tagged with a blue badge.

The M337 at a glance



CONNECT NOW!





**Press Bluetooth
button**

LED starts
blinking rapidly



**Set up
Bluetooth
connection**



Blinking stops, LED is steady for 10 seconds



CONNECTED!



**Download
Logitech Options**

Contents

1 FEATURES

2 Logitech Options

3 Gestures

4 Logitech Options

5 Power ManagementCheck battery level

6 COMPATIBILITY

7 Documents / Resources


7.1 References

8 Related Posts

 
FEATURES

Explore the advanced features your new mouse offers.


Versatile scroll wheel

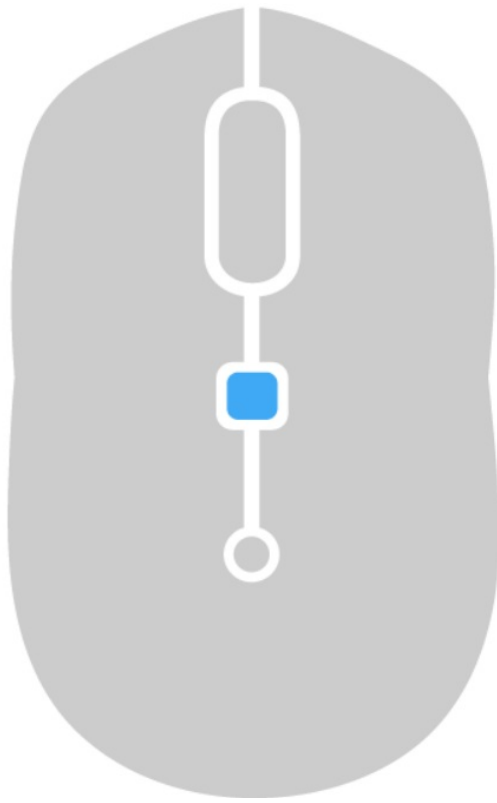

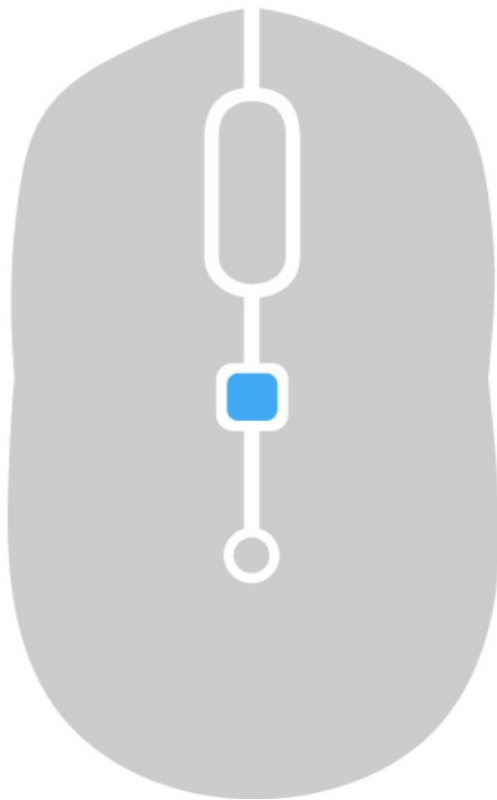


Gestures

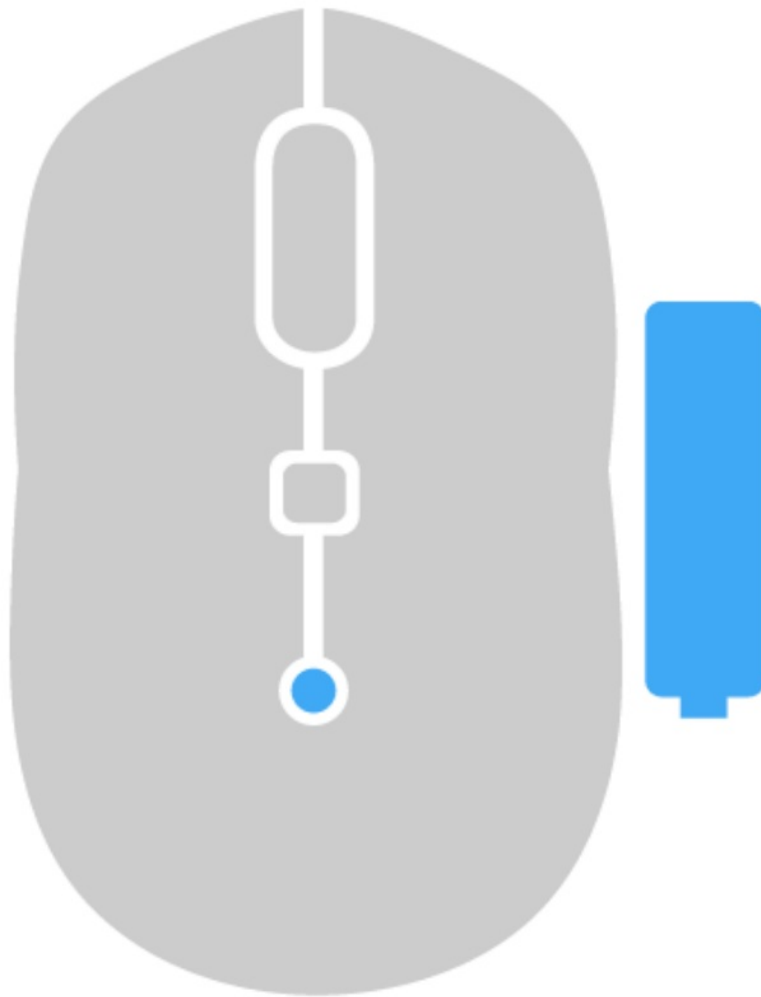 

Power management



Ready for action Your mouse provides buttons and controls tailored for your operating system—in most cases right out of the box. The table below shows the actions the mouse buttons and controls perform on the different operating systems.

	Out of the box (without the software)		With software	
	Windows	Android	Chrome OS	Mac OS
 Tilt wheel	Back/forward	Back (tilt left)	Back/forward	Back/forward
 Press scroll wheel	Middle Click	Middle Click	Middle Click	Middle Click
 Press nav button	Switch applications	Switch applications	Switch applications	Switch applications

Logitech Options

Enhance your mouse with Logitech Options


Discover all your mouse can do: add Logitech Options software.

In addition to optimizing the mouse for your operating system, Logitech Options lets you customize the M337 to fit your needs and personal style—reassign button functions, enable and use gestures, adjust tracking speed, and much more.

Logitech Options is available for Windows (7, 8, or later) and Mac OS X (10.8 or later).

Install Logitech Options: Mac or Windows


Versatile scroll wheel

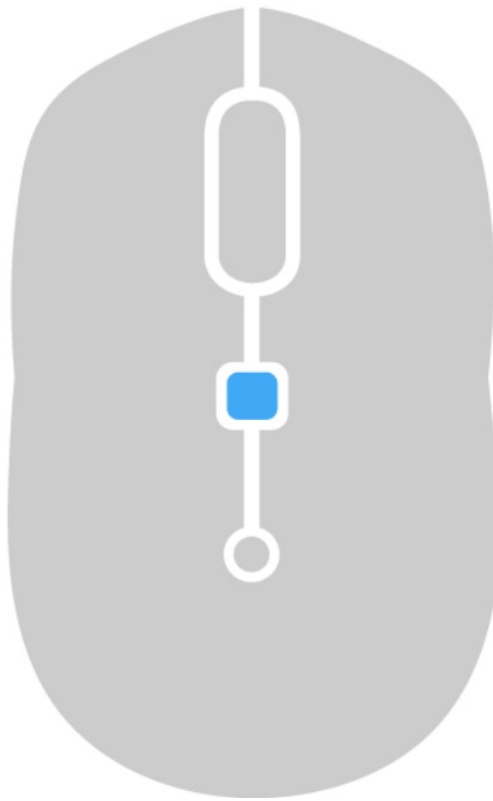

Depending on your computer's operating system, the scroll wheel also serves as a middle-click button and back/forward control.

Scroll vertically

 To scroll vertically, spin the wheel up or down.

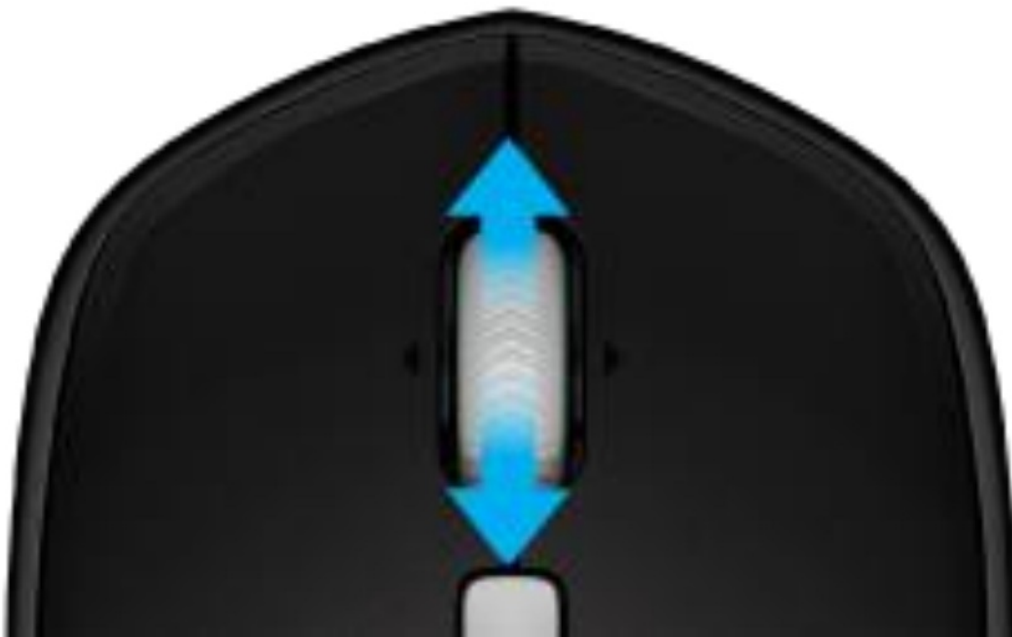

Back/forward

Move back and forward by tilting the scroll wheel left or right.

 


Logitech Options

Install Logitech Options to optimize the scrolling experience.

- Enable smooth scrolling (Windows)
- Switch scrolling direction between standard and natural
- Adjust scrolling speed (Mac OS) Scroll side-to-side

Gestures

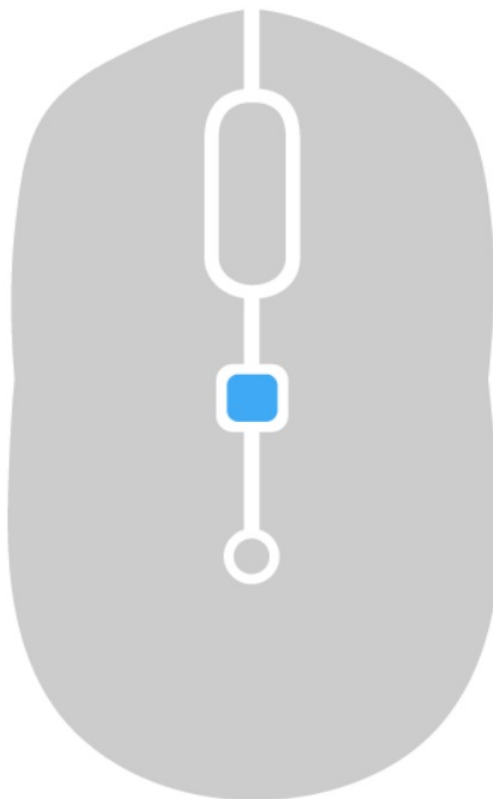

Use Logitech Options to set up the tilt wheel for side-to-side (horizontal) scrolling.

Logitech Options

Installation of Logitech Options software gives you access to gestures that simplify desktop and application


management, media control, document viewing, and personalization of common tasks.

Perform a gesture

Hold down the navigation button while moving the mouse left, right, up, or down.

The figure below shows gesture sets available for managing windows in Windows (7, 8, or later) and Mac OS X (10.8 or later). View and enable other gesture sets in Logitech Options.

Tip: Use Logitech Options to view available gesture sets and assign gestures to the navigation button or to other mouse controls.

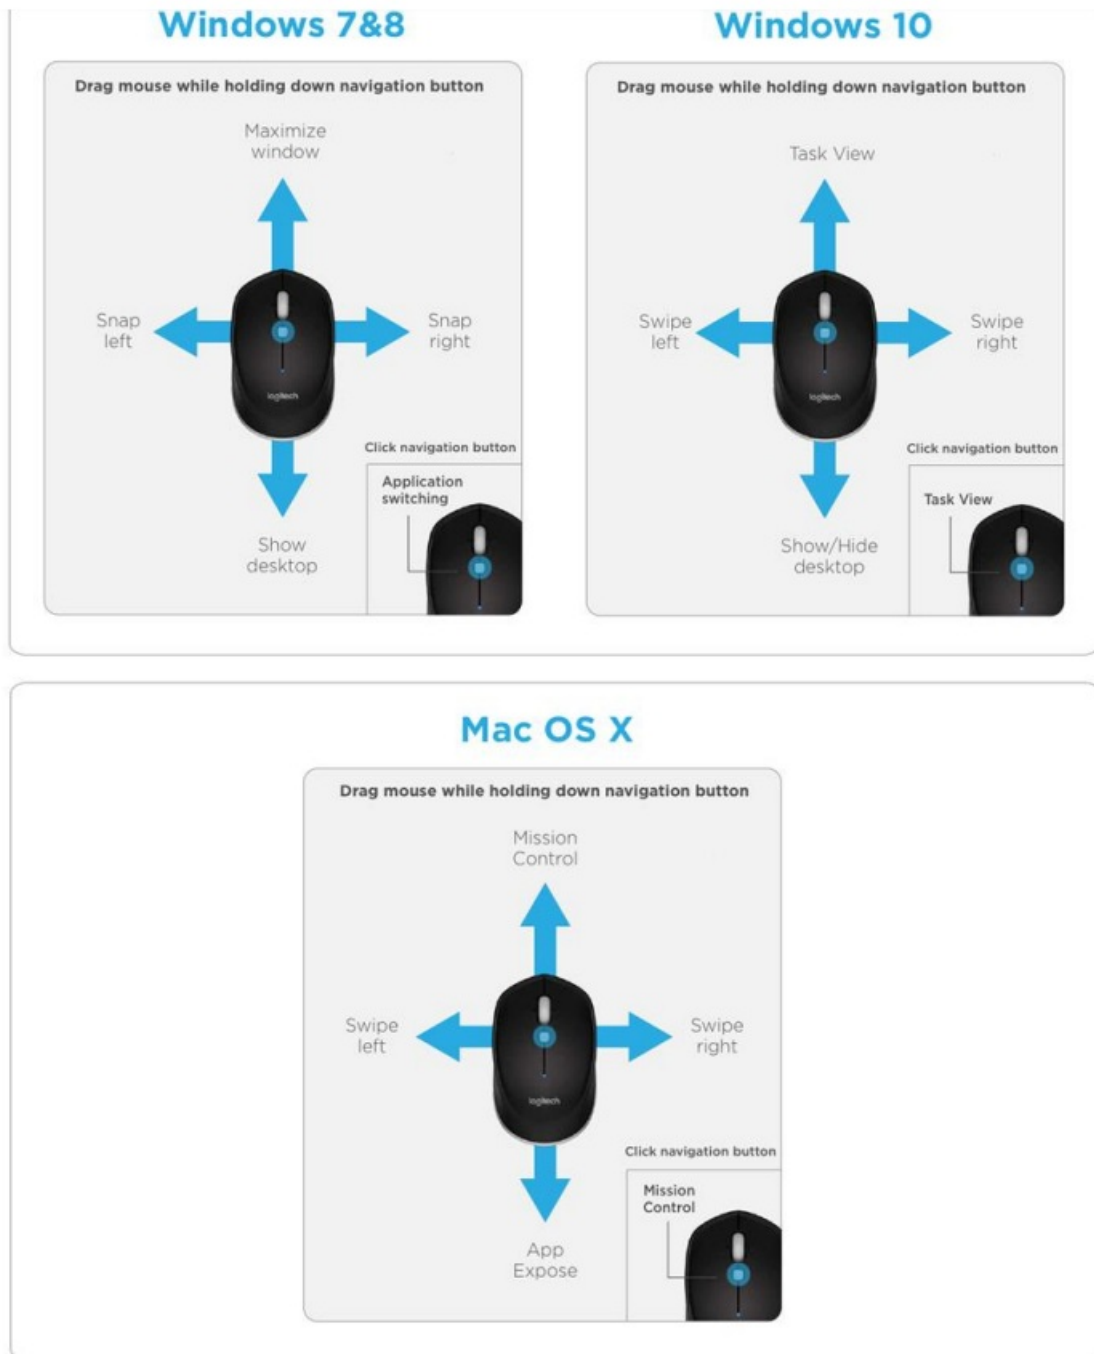

Power Management

Check battery level



The status LED on top of the mouse turns red to indicate that battery power is low and it's time to change batteries.

Tip: Install Logitech Options to set up and receive battery status notifications.

Replace batteries

Slide the battery compartment cover down and lift it off the mouse body. Replace the spent batteries with two new AAA batteries and reattach the compartment cover.



COMPATIBILITY

Bluetooth wireless technology enabled devices

Apple

Mac OS X (10.8 or later)

Windows

Windows 7, 8, 10 or later


Chrome OS

Chrome OS v. 44

Android





Android 3.2 or later <<

Documents / Resources

	<p>logitech M337 Wireless Mouse [pdf] User Guide M337, Wireless Mouse</p>
---	---

References

- [Logitech Support + Download Sustainability Navigation](#)
- [Getting started - M535 Bluetooth Mouse – Logitech Support + Download Sustainability Navigation](#)

-  [Logitech Options – Logitech Support + Download](#)
-  [Logitech M337 Bluetooth Mouse SETUP GUIDE](#)
-  [Logitech M337 Bluetooth Mouse SETUP GUIDE](#)
-  [Logitech M337 Bluetooth Mouse SETUP GUIDE](#)

Manuals+.