

logitech®
**M650 Signature Full
Size Wireless Mouse**



logitech M650 Signature Full Size Wireless Mouse Instruction Manual

[Home](#) » [Logitech](#) » logitech M650 Signature Full Size Wireless Mouse Instruction Manual 

Contents

- [1 logitech M650 Signature Full Size Wireless Mouse](#)
- [2 Cleaning your Logitech device](#)
- [3 Before You Clean](#)
- [4 Cleaning Keyboards](#)
- [5 If Your Device Still Isn't Clean](#)
- [6 Specifications](#)
- [7 Frequently Asked Questions \(FAQ\)](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

logitech®

logitech M650 Signature Full Size Wireless Mouse



Cleaning your Logitech device

Logitech recommends that you clean your Logitech device on a regular basis, either daily, weekly or monthly, especially if you have a light-colored device. In the event your Logitech device needs cleaning we have some recommendations.

Warning! Don't use bleach, acetone/nail polish remover, strong solvents or abrasive cleaning products. Logitech does not recommend using any of these, although strong solvents or abrasives, such as degreasers, may help remove tough stains. Please consult the cleaning product instructions and guidelines before use, as damage can occur to your Logitech product if used incorrectly. If you do choose to use bleach, acetone/nail polish remover, strong solvents, or abrasives Logitech is not liable for any damage that may occur and any damage would be considered out of warranty.

Before You Clean

- If your device is cabled, please unplug your device from your computer first.
- If your device has user-replaceable batteries, please remove the batteries.
- Be sure to switch off your device and then wait 5-10 seconds before starting to clean.
- Don't put cleaning liquids directly on your device.
- For devices that are not waterproof, please keep moisture to a minimum and avoid any liquid dripping or seeping into the device
- When using cleaning sprays, spray the cloth and wipe — do not spray the device directly. Never submerge the device in a liquid, cleaning or otherwise.
- Don't use bleach, acetone/nail polish remover, strong solvents, or abrasives. See the above warning!

Cleaning Keyboards

- To clean the keys, use regular tap water to lightly moisten a soft, lint-free cloth and gently wipe down the keys.
- Use compressed air to remove any loose debris and dust between the keys. If you do not have compressed air available, you could also use cold air from a hair dryer.
- You can also use fragrance-free disinfecting wipes, fragrance-free anti-bacterial wet wipes, makeup-removing tissue, or alcohol swabs containing less than 25% concentration of alcohol.
- Don't use bleach, acetone/nail polish remover, strong solvents, or abrasives. See the above warning!

Cleaning Mice or Presentation Devices

- Use tap water to lightly moisten a soft, lint-free cloth and gently wipe down the device.
- Use lens cleaner to lightly moisten a soft, lint-free cloth and gently wipe down your device.
- You can also use fragrance-free disinfecting wipes, fragrance-free anti-bacterial wet wipes, makeup-removing tissue, or alcohol swabs containing less than 25% concentration of alcohol.
- Don't use bleach, acetone/nail polish remover, strong solvents, or abrasives. See the above warning!

Cleaning Headsets

- Plastic parts (headband, mic boom, etc.): it is recommended to use fragrance-free disinfecting wipes, fragrance-free anti-bacterial wet wipes, makeup-removing tissue, or alcohol swabs containing less than 25% concentration of alcohol.
- Leatherette earpads: it is recommended to use fragrance-free disinfecting wipes, fragrance-free anti-bacterial wet wipes, or make-up removal tissue. Alcohol wipes can be used on a limited basis.
- For the braided cable: it is recommended to use anti-bacterial wet wipes. When wiping cables and cords, grip the cord mid-way and pull towards the product. Don't forcefully pull the cable away from the product or away from the computer.
- Don't use bleach, acetone/nail polish remover, strong solvents, or abrasives. See the above warning!

Cleaning Webcams

- Use tap water to lightly moisten a soft, lint-free cloth and gently wipe down the device.
- Use lens cleaner to lightly moisten a soft, lint-free cloth and gently wipe down the webcam lens.
- Don't use bleach, acetone/nail polish remover, strong solvents, or abrasives. See the above warning!

If Your Device Still Isn't Clean

In most cases, you can use a melamine cleaning sponge, isopropyl alcohol (rubbing alcohol) or fragrance free anti-bacterial wipes and apply more pressure when cleaning. Before using a melamine cleaning sponge, isopropyl alcohol (rubbing alcohol), or fragrance-free anti-bacterial wipes, we suggest you test it first in an inconspicuous area to make sure it doesn't cause discoloration or remove any printing on your device. Please consult the cleaning product instructions and guidelines before use, as damage can occur to your Logitech product if used incorrectly. Logitech is not liable for any damage that may occur and any damage would be considered out of warranty.

Specifications

- **Brand:** Logitech
- **Recommended Cleaning Frequency:** Daily, Weekly, or Monthly
- **Recommended Cleaning Products:** Melamine Cleaning Sponge, Isopropyl Alcohol, Fragrance-Free Anti-Bacterial Wipes

Frequently Asked Questions (FAQ)

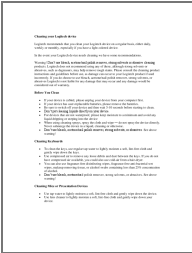
Q: Can I use other cleaning products not mentioned in the manual?

A: It is recommended to stick to the suggested cleaning products to avoid damage to your Logitech device.

Q: How should I clean hard-to-reach areas on my device?

A: Use a soft brush or cotton swab dampened with a cleaning solution to reach difficult spots.

Documents / Resources

	<p>logitech M650 Signature Full Size Wireless Mouse [pdf] Instruction Manual M650 Signature Full Size Wireless Mouse, M650, Signature Full Size Wireless Mouse, Full Size Wireless Mouse, Wireless Mouse</p>
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.