

[Skip to content](#)

Manuals+

User Manuals Simplified.



logitech MK240 Wireless Combo User Guide

[Home](#) » [Logitech](#) » logitech MK240 Wireless Combo User Guide

Contents [hide](#)

[1 logitech MK240 Wireless Combo](#)

[2 BOX CONTENT](#)

[3 Set up your product](#)

[4 Visit Product Central](#)

[5 Know your product](#)

[6 Troubleshooting](#)

[7 CONTACT LIST](#)

[8 Documents / Resources](#)

[8.1 References](#)

 
[9 Related Posts](#)



logitech MK240 Wireless Combo



BOX CONTENT

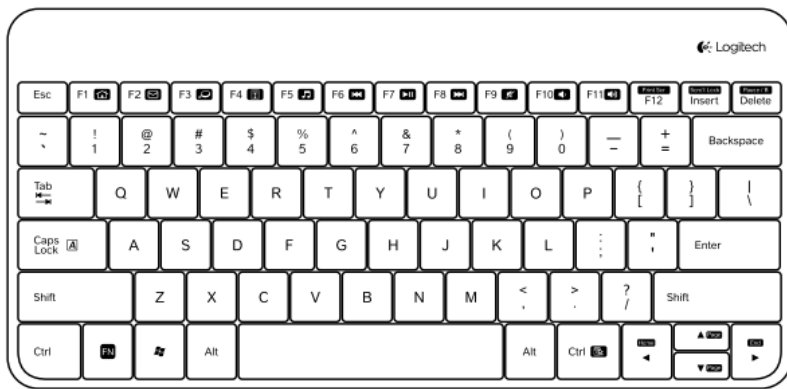

K240

 
 
 


M212



Set up your product

1. Turn on your computer.
2. Plug the receiver into a USB port.
3. Insert the keyboard batteries.
4. Insert the mouse batteries, and then turn on the mouse.

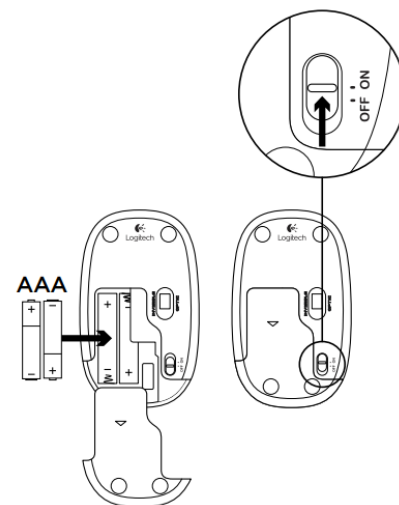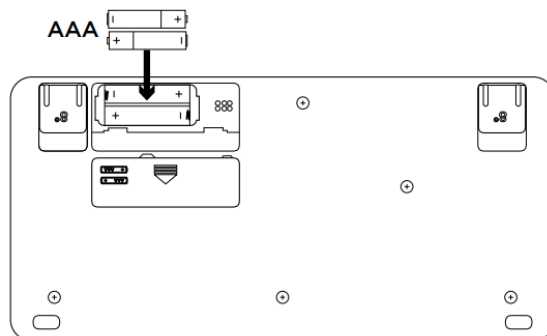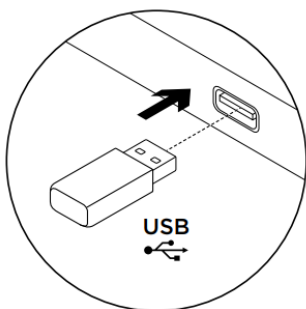

Visit Product Central

- There's more information and support online for your product. Take a moment to visit Product Central to learn more about your new mouse and keyboard.
- Browse online articles for setup help, usage tips, or information about additional features. If your product has optional software, learn about its benefits and how it can help you customize your product.
- Connect with other users in our Community Forums to get advice, ask questions, and share solutions.
- At Product Central, you'll find a wide selection of content:
 - Tutorials
 - Troubleshooting
 - Support community
 - Software downloads
 - Online documentation
 - Warranty information
 - Spare parts (when available)

Know your product

 
Keyboard features

F-keys To use, press and hold the Fn key, and then press an F-key.



1. **Fn + F1** = Launch Internet browser
2. **Fn + F2** = Launch email application
3. **Fn + F3** = Launch Windows Search
4. **Fn + F4** = Launch calculator
5. **Fn + F5** = Launch media player
6. **Fn + F6** = Previous track
7. **Fn + F7** = Play/Pause
8. **Fn + F8** = Next track
9. **Fn + F9** = Mute
10. **Fn + F10** = Volume down
11. **Fn + F11** = Volume up
12. **Fn + F12** = Print screen

Mouse features

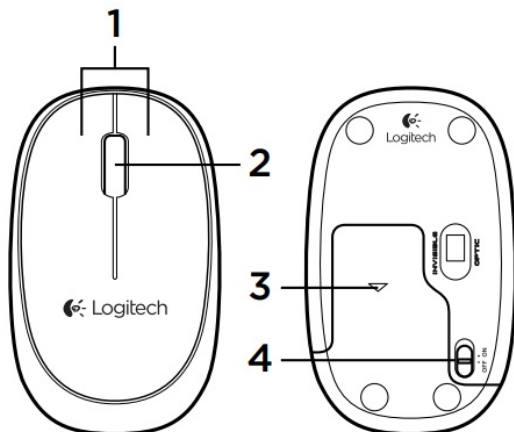

1. Left and right buttons
2. Scroll wheel
3. Battery door
4. On/Off switch

Middle button function: Press down on the scroll wheel to activate. Function may vary by application.

For additional mouse and keyboard features and configuration, go to www.logitech.com/support/mk240.

Download and install the Logitech® SetPoint™ software for Windows®.

Troubleshooting

Mouse or keyboard not working

 
- Turn on the mouse.
- Check the receiver connection.
- Try a different USB port on your computer.
- Connect directly to your computer. Do not use a USB hub.
- Check the battery orientation or replace the batteries.
- Remove metallic objects near the mouse and keyboard.

CONTACT LIST

- www.logitech.com/support/mk240

- **United States:** +1 646-454-3200
- **Argentina:** +00800-555-3284
- **Brasil:** +0 800-891-4173
- **Canada:** +1 866-934-5644
- **Chile:** 1230 020 5484
- **Colombia:** 01-800-913-6668
- **Latin America:** +1 800-578-9619
- **Mexico:** 01.800.800.4500

Documents / Resources

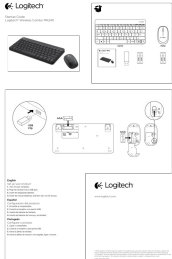

[logitech MK240 Wireless Combo](#) [pdf] User Guide
MK240 Wireless Combo, MK240, Wireless Combo, Combo

References

- [logi Logitech | Official Online Store](#)
- [logi Logitech | Defy Logic - Tools to Create a Better Tomorrow](#)
- [logi Logitech | Defy Logic - Tools to Create a Better Tomorrow](#)

[Manuals+](#),

- [home](#)
- [privacy](#)