

logitech MK955 Signature Slim Wireless Keyboard



logitech MK955 Signature Slim Wireless Keyboard User Guide

[Home](#) » [Logitech](#) » logitech MK955 Signature Slim Wireless Keyboard User Guide 

Contents

- [1 logitech MK955 Signature Slim Wireless Keyboard](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 KNOW YOUR PRODUCT](#)
- [5 GETTING STARTED](#)
- [6 Connect your keyboard and mouse to multiple devices](#)
- [7 DONGLE COMPARTMENT](#)
- [8 KEYBOARD FUNCTIONS](#)
- [9 MULTI-OS KEYBOARD](#)
- [10 DIMENSIONS](#)
- [11 SYSTEM REQUIREMENTS](#)
- [12 TECHNICAL SPECIFICATIONS](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)



logitech MK955 Signature Slim Wireless Keyboard



Product Information

Specifications

- **Product:** Signature Slim Combo MK955/MK950 for Business
- **Connection:** Low Energy (BLE) and Logi Bolt receiver
- **Compatibility:** Windows, macOS, ChromeOS
- **Features:** Easy-Switch keys, Battery status LED, Adjustable tilt legs, SmartWheel, Customizable buttons

Product Usage Instructions

Pairing the Keyboard and Mouse

1. Initial Pairing:

1. Insert the Logi Bolt receiver into a USB port.
2. Keep pull tabs on the keyboard until the receiver is inserted.
3. Set keyboard layout for OS by long-pressing shortcuts.

2. Subsequent Pairing:

1. Remove pull tabs from the keyboard and mouse to turn them on.
2. Press the Easy-Switch key for 3 seconds to pair with additional devices.

Dongle Compartment

1. Store the Logi Bolt USB receiver inside the keyboard.
2. Remove the battery door, place the receiver in the compartment, and secure it.

Keyboard Functions

The keyboard offers various functions like F-Row keys with primary and secondary functions for different OS.

Frequently Asked Questions (FAQ)


- **Q: How do I switch between devices connected to the Easy-Switch keys?**

A: Press the respective Easy-Switch key for 3 seconds to initiate pairing mode and connect to a different device following the same pairing process.

- **Q: What do I do if the battery status LED indicates a low charge?**

A: Replace batteries with new ones or recharge them if the product supports rechargeable batteries.

KNOW YOUR PRODUCT

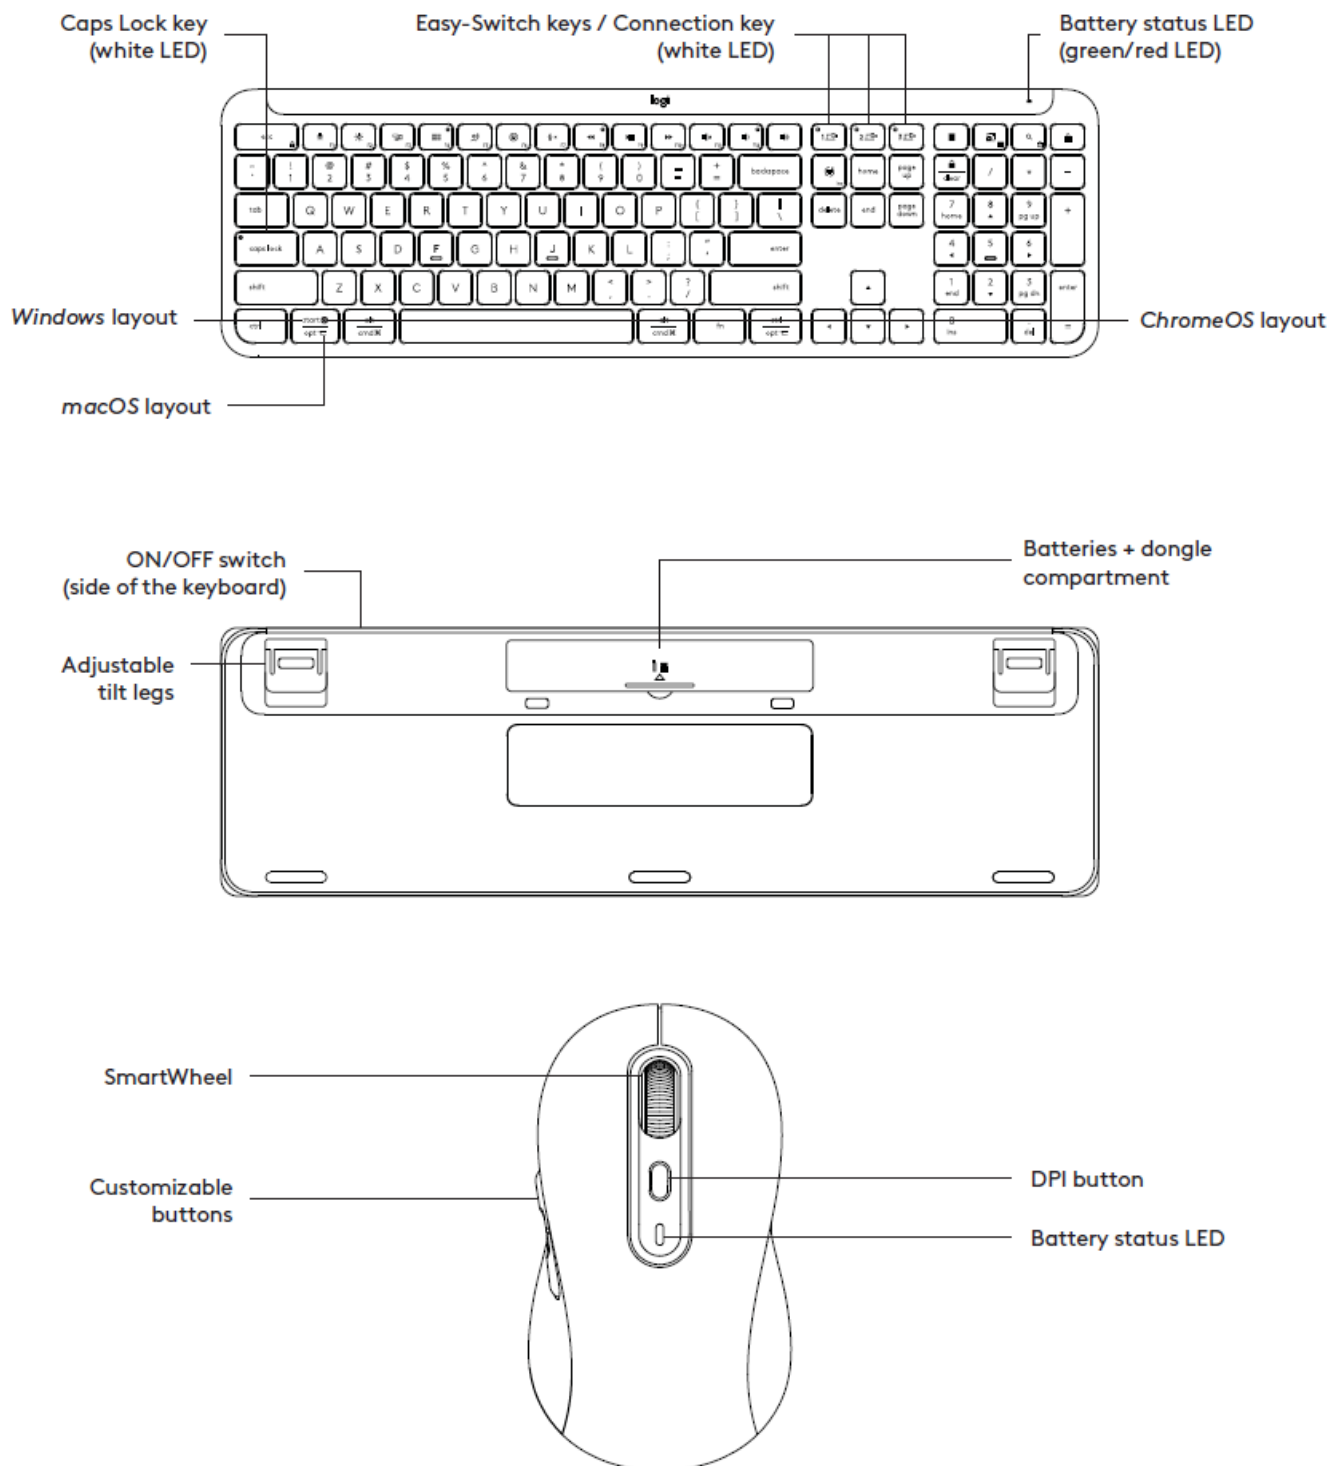

GETTING STARTED

 
Connect your keyboard and mouse to your device. Choose how you want to pair your keyboard to your device. You have 2 options:

- **Option 1:** Through our Logi Bolt receiver
- **Option 2:** Through direct Bluetooth® Low Energy (BLE) connection

To pair through Logi Bolt receiver:

- **STEP 1:**

Take the Logi Bolt receiver from the packaging tray that was holding your keyboard.

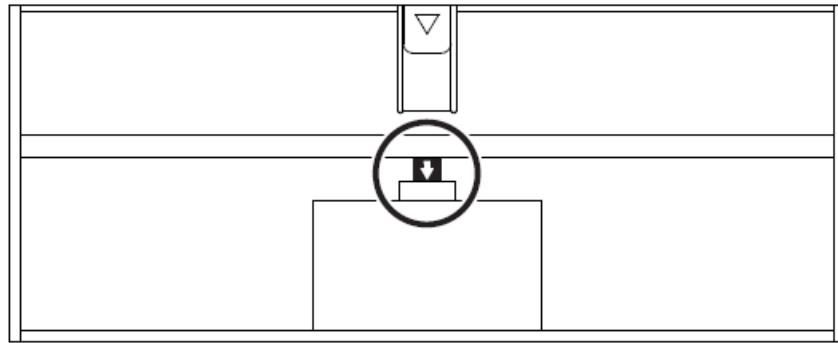


IMPORTANT:

Don't remove the pull tabs from your keyboard yet.


- **STEP 2:**

 Insert the receiver into any available USB port on your desktop or laptop.

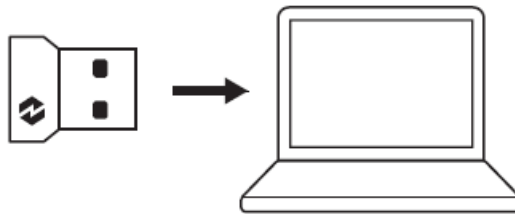


- **STEP 3:**

 - Now you can remove the pull-tabs from the keyboard and the mouse.
- The white LED on the first Easy-Switch key of the keyboard and mouse will start blinking.

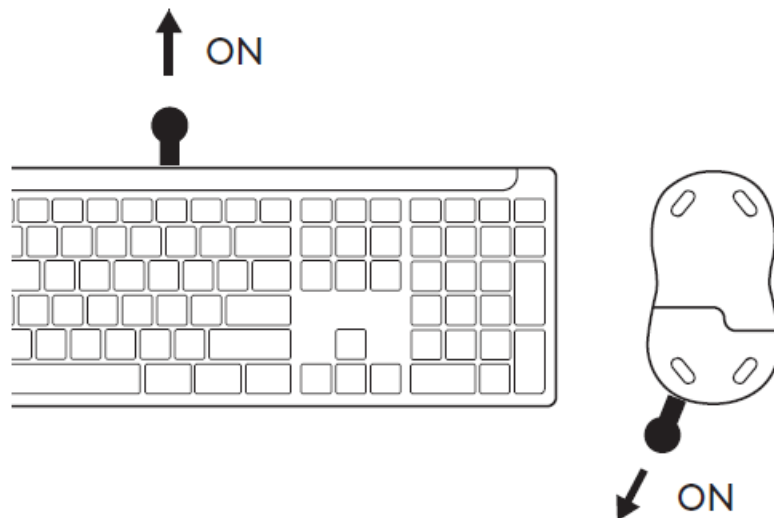

- **STEP 4:**

 - Set the right keyboard layout for your computer operating system:
- Long press for 3 seconds the following shortcuts to set it up for Windows, macOS or ChromeOS.
 - **Windows:** Fn + P
 - **macOS:** Fn+O
 - **ChromeOS:** Fn+C

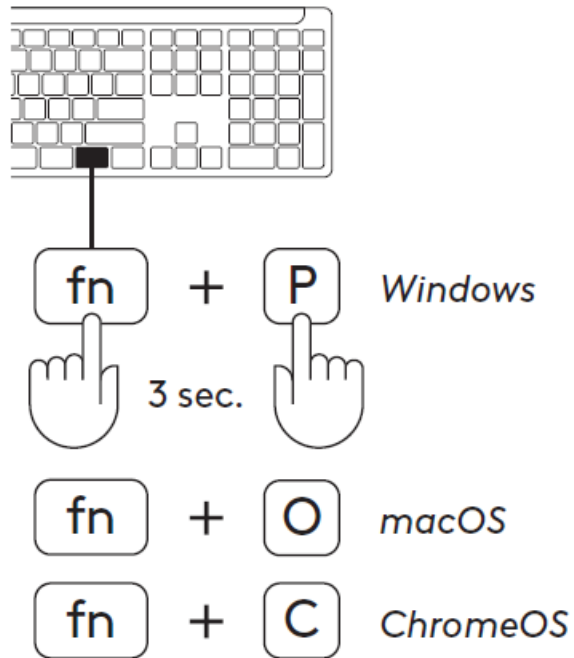


IMPORTANT:

Windows is the default OS layout. If you are using a Windows computer you can skip this step. Your keyboard and mouse are now ready to use.


To pair through Bluetooth®:

• **STEP 1:**

 - Remove the pull-tabs from the keyboard and mouse. Both of them will automatically turn on.


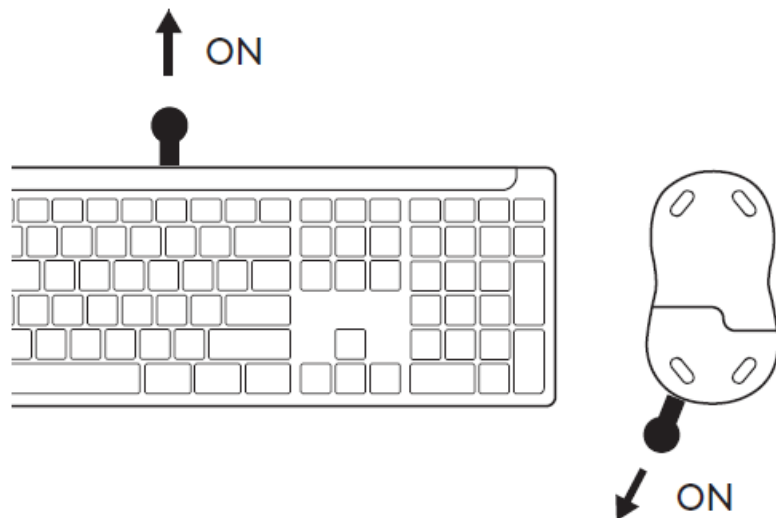


- The white LED on the first Easy-Switch key of the keyboard and mouse will start blinking.

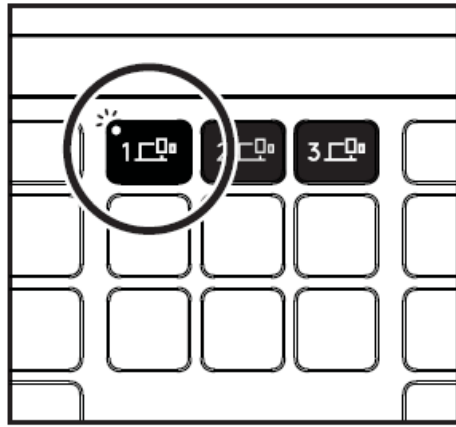


• STEP 2:

- Open the Bluetooth® settings on your device.
- Add a new peripheral by selecting your keyboard and mouse (Keyboard: Logi K950, Mouse: Logi M750) from your list of devices.
- Your keyboard and mouse will be paired once the LED stops blinking.

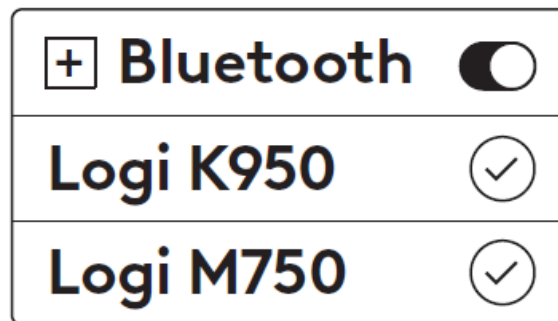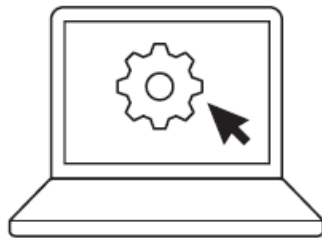



• STEP 3:

Your computer will require you to input a random set of numbers, please type them all and press the “Enter” key on your keyboard. Your keyboard is now ready to use.

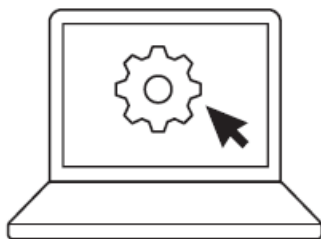

Connect your keyboard and mouse to multiple devices

- There are 3 Easy-Switch keys each on your keyboard and the back of your mouse. Connect one device to each of them.
- When you go through the steps above, the first Easy-Switch key on the keyboard and mouse should be connected to one device already.

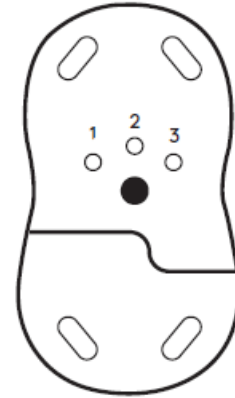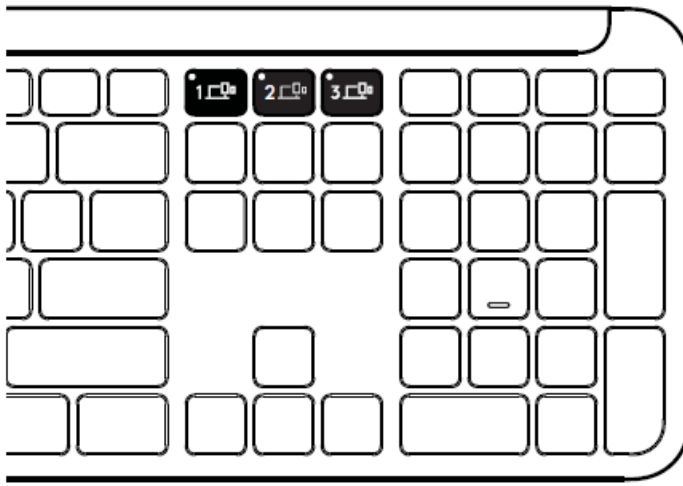


• STEP 1:

To connect to a second device, press the second Easy-Switch key for 3 seconds to put it on pairing mode. The LED light will start blinking.

• STEP 2:

- Continue with any of the pairing methods above based on how you connected to your first device.
- Use the image on the left as an example, if you've connected your first device with a Logi Bolt receiver, your second device can be paired via Bluetooth®.
- NOTE: Please be advised that you can use Bluetooth® connection on all the Easy-Switch keys, but the Logi Bolt receiver can only be used in one of them.
- Use the same process to pair an additional device to the third Easy-Switch key.

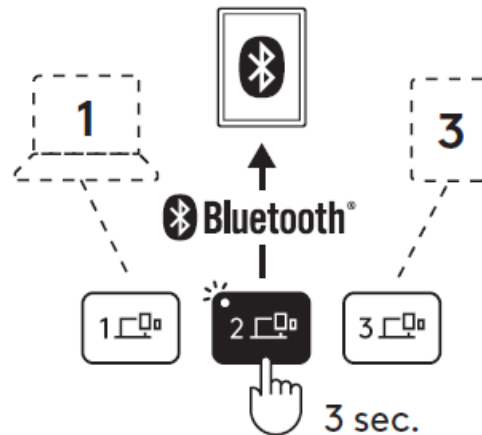


DONGLE COMPARTMENT

If you are not using your Logi Bolt USB receiver, you can safely store it inside your keyboard.



• STEP 1:

 - Remove the battery door from the bottom side of your keyboard.
- The dongle compartment is located next to the batteries.

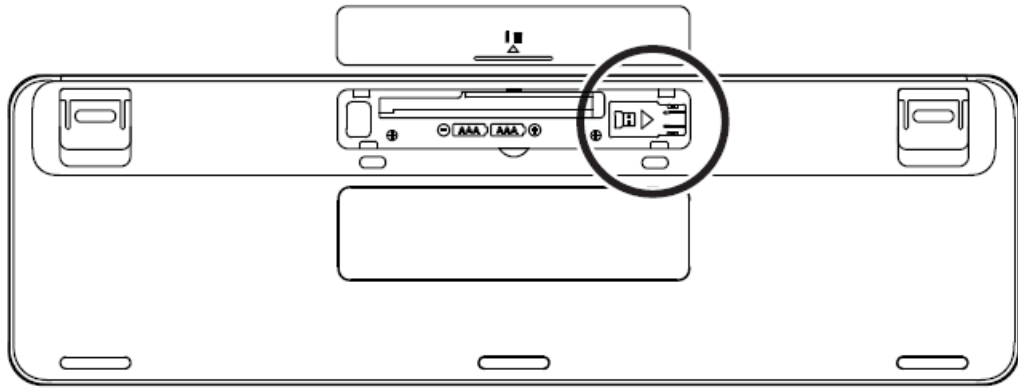






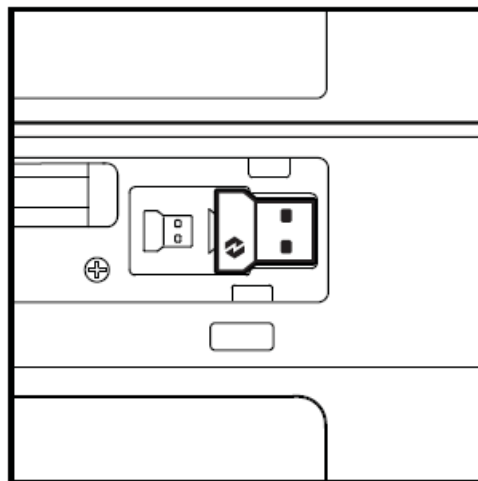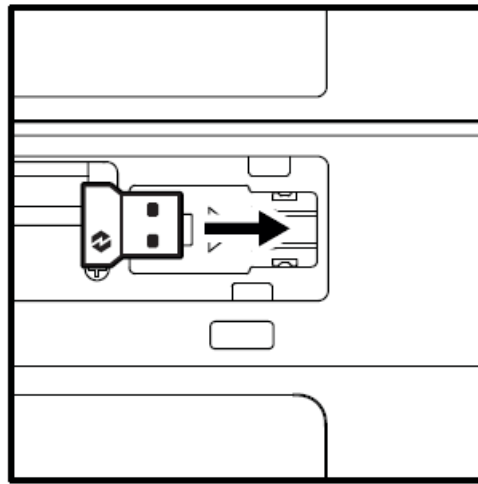

- **STEP 2:**



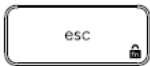




Place your Logi Bolt receiver in the compartment and slide it to the right side of the compartment to secure it tight.










KEYBOARD FUNCTIONS

You have a full range of useful productive tools on your keyboard that will help you save time and work faster:

F-Row Keys								
								
Main function	Windows	Escape	Brightness down	Brightness up	Task view	App switch	Dictation* ¹	Emoji* ²
	macOS				Mission control	Launchpad		Emoji
Secondary function		Fn lock	F1	F2	F3	F4	F5	F6

F-Row Keys								
								
Main function	Windows	Mute mic	Previous track	Play / Pause	Next track	Mute volume	Volume down	Volume up
	macOS							
Secondary function		F7	F8	F9	F10	F11	F12	—

Hot Keys								
								
Main function	Windows	Input language switch	Easy-Switch			Calculator	Snipping tool	Search
	macOS							
Secondary function		Insert	—			—	Contextual menu	Screen lock* ³

Most of these keys work without the need to install the software (Logi Options+), except for:

- **Mute microphone key:** Install Logi Options+ for it to work on Windows and macOS as a system mute mic; works out of the box on ChromeOS. It works out of the box on Microsoft Teams and Webex on Windows
- **Calculator key:** Install Logi Options+ for it to work on Mac; works out of the box on Windows and ChromeOS.

1. **For Windows:** The dictation key needs Logi Options+ App installed to work on Korean For macOS: The dictation key needs Logi Options+ installed to work on Macbook Air M1 and 2022 Macbook Pro (M1 Pro and M1 Max chip)
2. **For Windows:** The Emoji key needs the Logi Options+ App installed for France, Turkey, and Belgium keyboard layouts
3. **For macOS:** The screen lock key needs Logi Options+ App installed for France keyboard layouts

MULTI-OS KEYBOARD

Your keyboard is designed to work with multiple operating systems (OS): Windows, macOS, and ChromeOS.


For Windows and macOS keyboard layout

- If you are a Windows user, the special characters will be on the upper side of the key.

NOTE: Windows layout is compatible with Linux and Android as well.


- If you are a Mac user, the special characters and keys will be on the lower side of the keys.

NOTE: macOS layout is compatible with iOS and iPadOS as well.

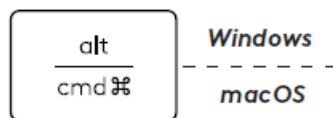


For ChromeOS keyboard layout

If you are a Chrome user, you will find one dedicated Chrome function, the Launcher key, on top of the start key. Make sure you have selected the ChromeOS layout (FN+C) when you connect your keyboard to your device.

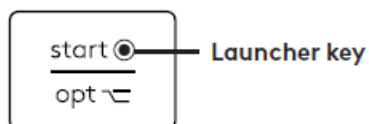


BATTERY STATUS NOTIFICATION

- When the battery level is between 6% to 100%, the LED colour will stay green.
- When the battery level is below 6% (from 5% and below), the LED will turn red. You can continue using your device for 1 month when the battery is low.

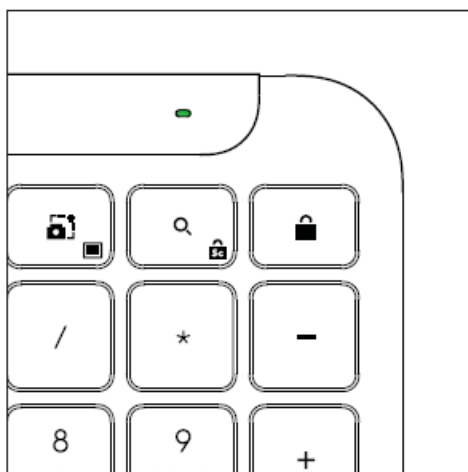

NOTE:

 Battery life may vary based on user and computing conditions.

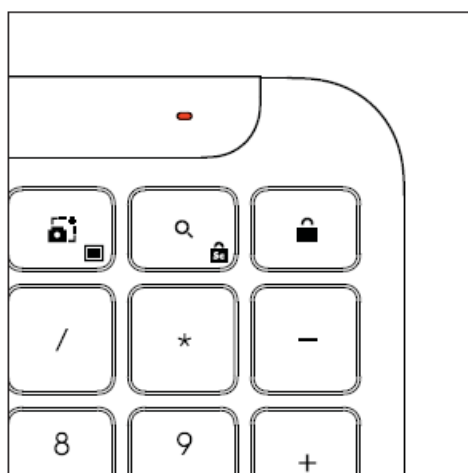

DIMENSIONS

Signature Slim K950 for Business

- Height: 134.8 mm (5.31 in)
- Width: 433.8 mm (17.08 in)
- Depth: 23.1 mm (0.91 in)
- Weight: 685 g (24.16 oz) with batteries

For MK950 Signature Plus M750 for Business

- Height: 108.2 mm (4.26 in)
- Width: 61 mm (2.4 in)
- Depth: 38.8 mm (1.52 in)
- Weight: 101.3 g (3.57 oz) with batteries

For MK955 Signature Plus M750 L for Business

- Height: 118.7 mm (4.67 in)
- Width: 66.2 mm (2.61 in)
- Depth: 42 mm (1.65 in)
- Weight: 115.4 g (4.07 oz) with batteries

USB-A Receiver:

- Height: 18.7 mm (0.74 in)
- Width: 14.4 mm (0.57 in)
- Depth: 6.1 mm (0.24 in)
- Weight: 1.7 g (0.06 oz)

SYSTEM REQUIREMENTS

Logi Bolt USB Receiver

- Windows 11 or later 1
- macOS 11 or later 2
- ChromeOS2
- Linux2

Bluetooth® Low Energy Wireless (BLE) Technology

- Windows 11 or later 1
- macOS 11 or later 1
- iPadOS 14 or later 2
- iOS 14 or later 2, 3

- ChromeOS2
- Linux2
- Android 9.0 or later 2
 1. Customize your device by installing the Logi Options+ App available on Windows and macOS at app.logi.com
 2. Logi Options+ App is currently not supported. The device's basic functions will work without it.
 3. The mouse is not supported by iOS.

Certified for

Works With Chromebook

TECHNICAL SPECIFICATIONS

Wireless technology

- Logi Bolt USB-A receiver
- Bluetooth® Low Energy (BLE) version: 5.1
- Wireless range: up to 10 m/33 ft (with an open line of sight)¹

Keyboard:

- **Battery:** Alkaline, 2 x AAA batteries (included); up to 3 years²
- Full-size layout with number pad
- On/Off power switch
- Tilt legs: 4° (default) or 8° typing angle
- LED lights: Caps Lock, Battery and Easy-Switch keys indicator lights
- Multi-OS printed layout (Windows/Mac/Chrome)
- Easy-Switch Keys (connect up to 3 devices)

Mouse:

- **Battery:** Alkaline, 1 x AA battery (included); up to 2 years².
- SmartWheel technology
- Contoured shape with rubber grips
- **Number of buttons:** 6 (Left/Right-click, Scroll-wheel with middle click, side buttons, DPI button)
- On/Off power switch
- **LED lights:** Battery indicator and Easy-Switch indicator lights

Sensor technology:

- Logitech Advanced Optical
- Nominal value: 1000 DPI
- DPI (Minimal and maximal value): 400-4000 DPI (can be set in increments of 100 DPI)

Customization app

Supported by Logi Options+ on Windows and macOS


- 1. Wireless range may vary depending on the operating environment and computer setup.
- 2. Battery life may vary based on user and computing conditions.

Technical support

- www.logitech.com/prosupport/mk955B
- www.logitech.com/prosupport/mk950B.

© 2024 Logitech. Logitech, Logi, Easy-Switch, Logi Bolt, Logi Options+, the Logitech logo and the Logi logo are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Logitech is under license. Windows are trademarks of the Microsoft group of companies. App Store, Apple, macOS, iOS, and iPadOS are trademarks of Apple Inc. Android and Chrome are trademarks of Google LLC. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

Documents / Resources

	<p>logitech MK955 Signature Slim Wireless Keyboard [pdf] User Guide</p> <p>MK955, MK950, MK955 Signature Slim Wireless Keyboard, MK955, Signature Slim Wireless Keyboard, Slim Wireless Keyboard, Wireless Keyboard, Keyboard</p>
--	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.