

[Skip to content](#)

## **Manuals+**

User Manuals Simplified.



# logitech Mouse User Guide

Home » [Logitech](#) » logitech Mouse User Guide 

## Contents | [hide](#)

- 1 [logitech Mouse](#)
- 2 [DETAILED SETUP](#)
- 3 [Product Overview](#)
- 4 [YOU CAN PAIR TO A SECOND COMPUTER WITH EASY-SWITCH](#)
  - 4.1 [MagSpeed adaptive scroll-wheel with SmartShift](#)
  - 4.2 [Switch modes manually](#)
  - 4.3 [Horizontal Scroll](#)
  - 4.4 [Back/Forward buttons](#)
  - 4.5 [App-Specific Settings](#)
  - 4.6 [Adjust the feel of the scroll wheel](#)
  - 4.7 [Assign gestures to the top button](#)
  - 4.8 [Flow between two computers](#)
- 5 [Charging MX Anywhere 3](#)
  - 5.1 [Check Battery Status](#)
- 6 [File Downloads](#)
- 7 [References](#)
- 8 [Related Manuals](#)



logitech Mouse

#### DETAILED SETUP

- **Make sure the mouse is turned on.**  
The On/Off switch is located on the bottom of the mouse.



The number 1 LED on the bottom of the mouse should be blinking fast.

**NOTE:** If the LED is not blinking fast, do a long press of three seconds on the Easy-Switch button on the mouse bottom.

- There are two ways you can connect your mouse:
  - **Use the wireless USB receiver**  
Plug the receiver into a USB port on your computer.
  - **Connect directly via Bluetooth**  
Open the Bluetooth settings on your computer to complete the pairing.  
Search for new devices and click on MX Anywhere 3 to connect.  
Click here for more details on how to do this on your computer.  
If you experience issues with Bluetooth, click here for Bluetooth troubleshooting.
- **Install Logitech Options Software.**  
Download Logitech Options to customize your mouse and benefit from advanced shortcuts and all the possibilities this mouse has to offer. To download and learn more about the full range of features, go to [logitech.com/options](https://logitech.com/options)

## Product Overview



1. Mag Speed scroll wheel
2. Mode shift button for the scroll wheel — shift between line-by-line scrolling and free spinning
3. Battery status LED
4. Silicone side grips
5. USB-C charging port
6. On/Off button
7. Darkfield 4000DPI sensor
8. Easy-Switch and connect button
9. Back/Forward buttons

### **YOU CAN PAIR TO A SECOND COMPUTER WITH EASY-SWITCH**

Your mouse can be paired with up to three different computers using the Easy-Switch button to change the channel.



1. A short press on the Easy-Switch button will let you switch channels (from one computer to another). Select the channel you want and go to the next step.
2. Press and hold the Easy-Switch button for three seconds. This will put the mouse in discoverable mode so that it can be seen by your computer. The LED will start blinking fast.
3. Choose how you want to connect your mouse to your computer, Bluetooth, or USB:
  - o **Bluetooth:** Open the Bluetooth settings on your computer to complete the pairing. More details [here](#).
  - o **USB receiver:** Plug the receiver into a USB port, open Logitech Options, and select: Add devices > Setup Unifying device, then follow the instructions.



#### MagSpeed adaptive scroll-wheel with SmartShift

The speed-adaptive scroll wheel shifts between two scrolling modes automatically. As you scroll faster, it will automatically shift from line-by-line scrolling to free-spinning.

- **Line-by-line (ratchet) mode** — ideal for precise navigation of items and lists.
- **Hyper-fast (free-spin) mode** — near-frictionless spinning, letting you fly through long documents and web



pages.


### Switch modes manually

You can also manually switch between modes by pressing the mode shift button.



By default, mode shift is assigned to the button on top of the mouse.

In Logitech Options software, you can decide to disable **SmartShift** if you prefer to stay in one scrolling mode and always shift manually. You can also adjust the **SmartShift** sensitivity, which will change the speed required to automatically shift into free spinning.

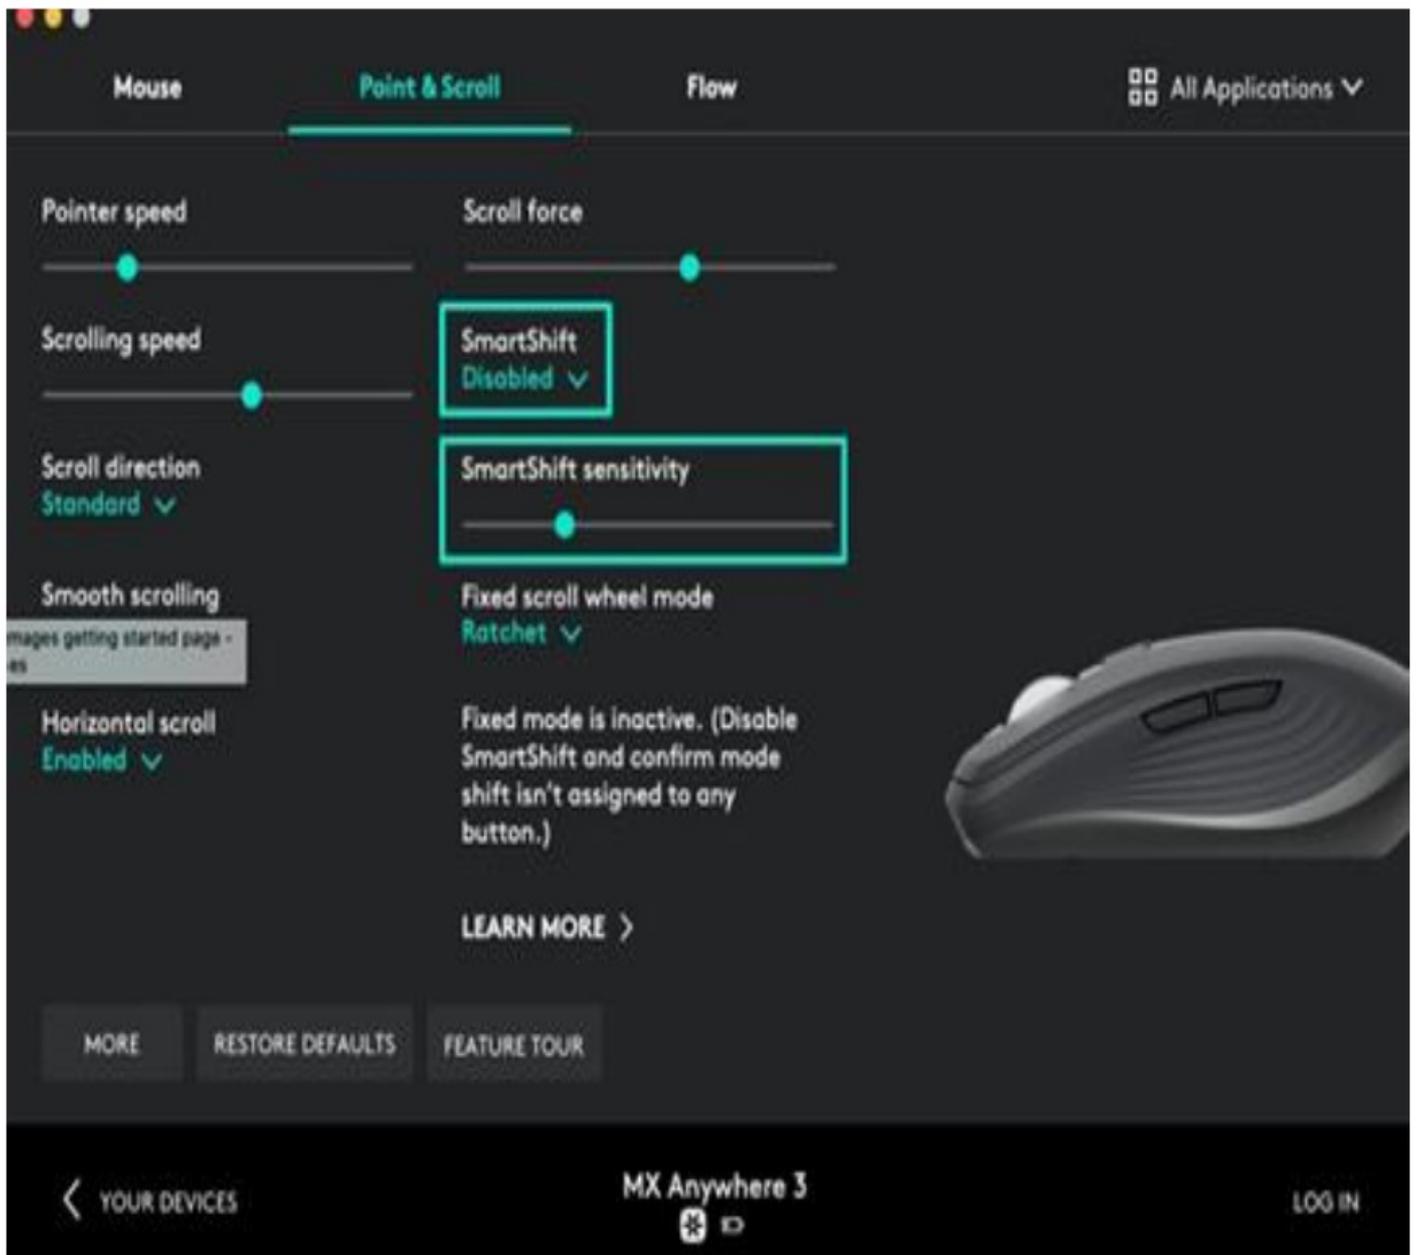

Horizontal Scroll



You can scroll horizontally with your MX Anywhere 3!

This is done with a two-button combination: Press and hold one of the side buttons and scroll with the wheel simultaneously.

**NOTE:** The horizontal scroll is ON by default in your Logitech Options software. You can customize this feature in the Point & Scroll tab in Logitech Options.

For more detailed information on Horizontal scroll, [click here](#).

#### **Back/Forward buttons**

The back and forward buttons enhance navigation and simplify tasks.



#### **To move back and forward:**

- Press the back or forward button to navigate web or document pages, depending on the location of the mouse pointer.

**NOTE:** On a Mac, enabling the back/forward buttons requires installation of Logitech Options software.

In addition to enabling the buttons for use with Macs, Logitech Options software lets you assign other useful functions to the buttons, including undo/redo, OS navigation, volume up/down, and more.

#### **App-Specific Settings**


Your mouse buttons can be assigned to perform different functions for different applications. For instance, you can assign the side buttons to control volume in Spotify, copy/paste in Microsoft Excel, or undo/redo in Adobe Photoshop.

When you install Logitech options, you can install predefined app-specific settings that will adapt the mouse button behavior to the selected applications.

**Here are the app-specific settings we have created for you:**




With these settings, the wheel mode-shift button retains the same functionality across all applications. Each of these settings can be customized manually, for any application.

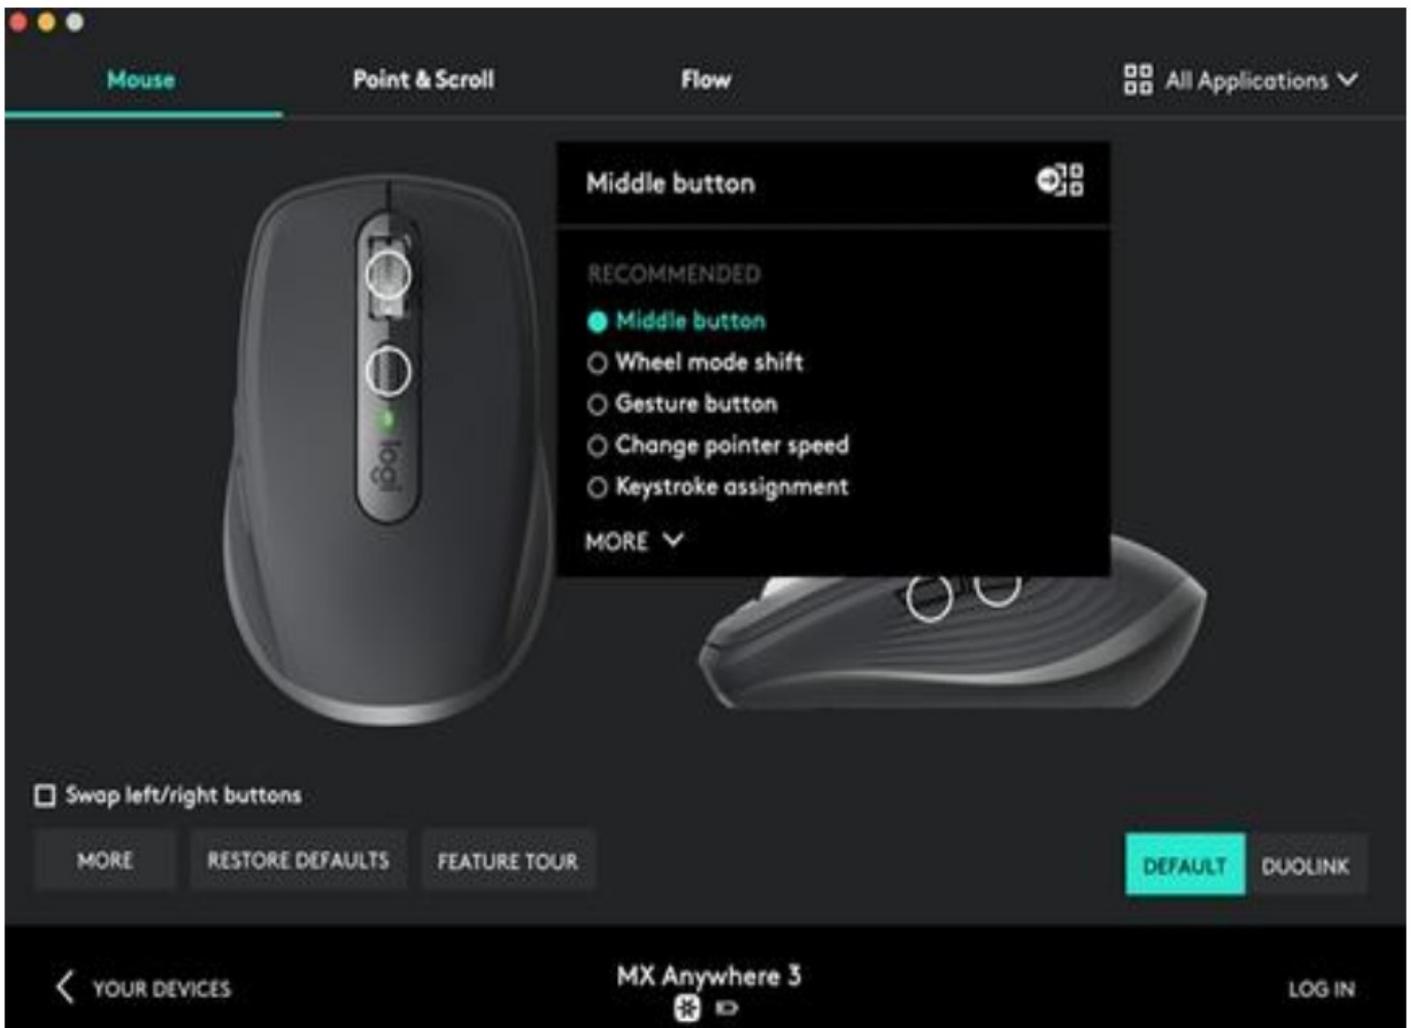

## Adjust the feel of the scroll wheel

When you scroll in Ratchet mode, you can adjust the feel of your scroll wheel on the “Point & Scroll” tab in Logitech Options.


- A lower force will make the ratchet very subtle and smooth.
- A higher force will make every ratchet very firm and precise.

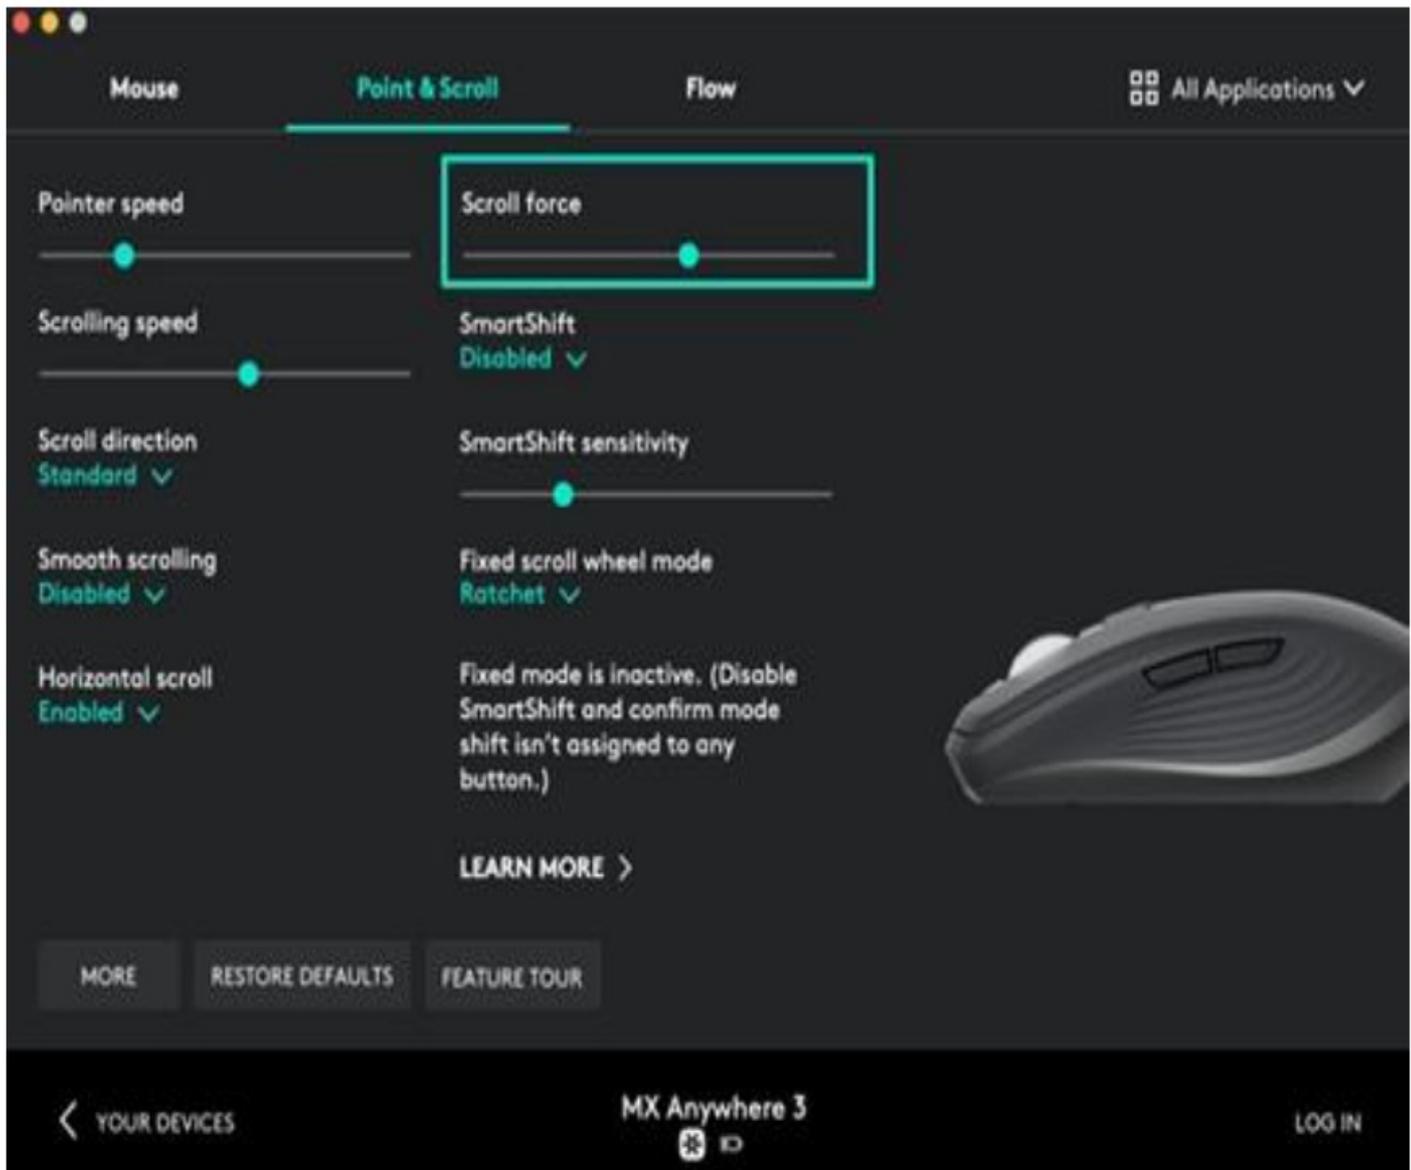

## Assign gestures to the top button

If you want more advanced functionality, you can assign the top button of the mouse to be the “**Gesture Button**”. This will transform your top button into a powerful multi-function button allowing you to use gestures for desktop navigation, app management, pan, zoom, and more.

On the Mouse tab, select the top button below the wheel and click on Gesture Button.

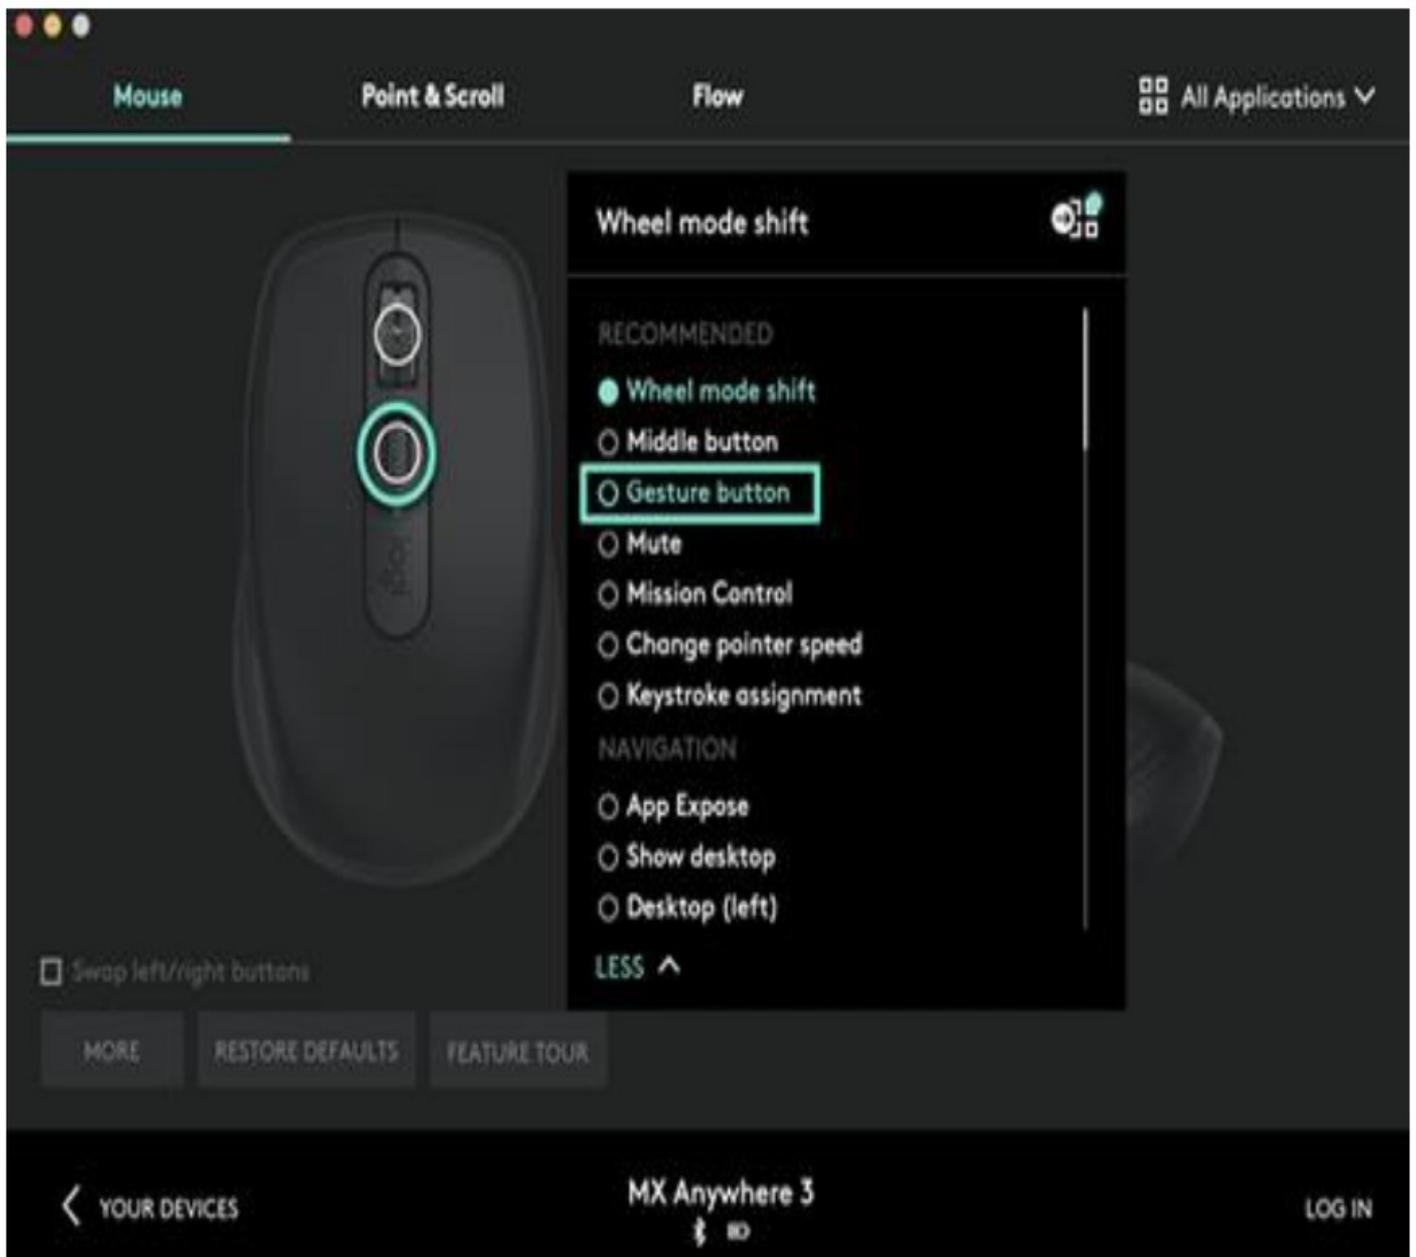

By default, the gesture buttons will allow you to navigate between windows and desktops.

**Gesture button**  Hold the gesture button while moving the mouse.

**RECOMMENDED**

- Wheel mode shift
- Middle button
- Gesture button**
- Mute
- Mission Control
- Change pointer speed
- Keystroke assignment

**NAVIGATION**

- App Expose
- Show desktop
- Desktop (left)

LESS

- Windows navigation**
- Media control
- Pan
- App navigation
- Zoom/Rotate
- Custom



- Mission Control

Click the gesture button.

[LEARN MORE >](#)

In order to perform the gestures, you will need to hold the button while you move the mouse.

**Flow between two computers**

You can work on multiple computers with a single MX Anywhere 3.

With Logitech Flow, you can use the mouse cursor to move from one computer to the next. You can even copy and paste between computers, and if you have a compatible Logitech keyboard, such as MX Keys, the keyboard will follow the mouse and switch computers at the same time.

Mouse
Point & Scroll
Flow



**WELCOME TO LOGITECH FLOW**

Seamlessly switch between computers by moving your cursor to the edge of the screen and quickly copy-paste text, images, and files between them.

ENABLE FLOW
HOW TO SETUP

You will need to install Logitech Options software on both computers and follow these instructions.

### Charging MX Anywhere 3



- Connect one end of the provided charging cable to the USB-C port on the mouse and the other end to a USB power source.

A minimum of a three-minute charge gives you enough power for a full day of use. Depending on how you use the mouse, a full charge can last up to 70 days\*.

\* Battery life may vary depending on user and operating conditions.

#### Check Battery Status



The LED on the top of the mouse indicates battery status.

You can install Logitech Options software to receive battery status notifications, including low-charge warnings.

LED Color	Indications
Green	From 100% to 10% charge
Red	10% charge or below



Pulsing green      While charging

## File Downloads



User Guide [Download](#) [optimized]  
Mouse [Download](#)

## References

- [logi How does Horizontal Scroll work? – Logitech Support + Download Sustainability Navigation](#)
- [logi Set up and enable Logitech Flow for use with a mouse – Logitech Support + Download Sustainability Navigation](#)
- [logi Download Logitech Options to Increase Work Productivity](#)
- [logi Connect your Logitech Bluetooth device – Logitech Support + Download Sustainability Navigation](#)
- [logi Get Started](#)
- [logi Bluetooth troubleshooting for Logitech Bluetooth Mice, Keyboards and Presentation remotes – Logitech Support + Download Sustainability Navigation](#)

## Related Manuals

1. [Logitech X Pro Superlight Mouse Setup Guide](#) Logitech X Pro Superlight Mouse Setup Guide PACKAGE CONTENTS Mouse...
2. [Logitech Wireless Mouse / USB CU0019 User Manual](#) Logitech Wireless Mouse / USB CU0019 User Manual Complete Setup...
3. [Logitech Pro X Superlight Mouse User Manual](#) Logitech Pro X Superlight Mouse User Manual – Optimized PDF...
4. [Logitech Lightspeed G502 Wireless Gaming Mouse Setup Guide](#) G502 LIGHTSPEED Wireless Gaming Mouse Souris gaming sans fil SETUP...
5. [logitech G305 Lightspeed Wireless Gaming Mouse Setup Guide](#) G305 LIGHTSPEED™ Wireless Gaming Mouse Setup Guide FAVOR DE...
6. [Logitech Wireless Mouse M525 User Manual](#) Logitech Wireless Mouse M525 User Manual Box Content Assembly Features...