

MX Master 3S Welcome Logitech Support Instruction Manual

Home » Logitech » MX Master 3S Welcome Logitech Support Instruction Manual

Contents

- 1 MX Master 3S Welcome Logitech
- 2 Getting Started MX Master 3S
- **3 LEARN MORE ABOUT YOUR PRODUCT**
- 4 Documents / Resources
 - 4.1 References
- **5 Related Posts**

logitech

MX Master 3S Welcome Logitech Support



Getting Started – MX Master 3S

DETAILED SETUP

1. Make sure the mouse is turned on. The number 1 LED under the mouse should be blinking fast.

NOTE: If the LED is not blinking fast, do a long press of 3 seconds.

- 2. Choose how you want to connect:
 - Use the included LOGI BOLT wireless receiver: Plug the receiver into a USB port on your computer
 - Connect directly via Bluetooth:

Open the Bluetooth settings on your computer to complete the pairing. Click here for more details on how to do this on your computer. If you experience issues with Bluetooth, click here for Bluetooth troubleshooting.

3. Install Logitech Options+ Software.

Download the Logitech Options+ version to use all the possibilities this mouse has to offer. To download and learn more about the possibilities, click here.

- 4. Choose between two ways to connect your keyboard to your computer:
 - · Bluetooth:

Open the Bluetooth settings on your computer to complete the pairing. You can find more details here

USB receiver:

Plug the receiver to a USB port, open Logitech Options+, select: Add devices > Setup Logi Bolt device, and follow the instructions.

LEARN MORE ABOUT YOUR PRODUCT

Product Overview



- 1. MagSpeed scroll wheel
- 2. Mode shift button for the scroll wheel
- 3. Gesture button
- 4. Thumb wheel
- 5. Battery status LED
- 6. USB-C charging port
- 7. On/OFF button
- 8. Darkfield 8000 DPI sensor
- 9. Easy-Switch & connect button

MagSpeed adaptive scroll-wheel




The speed-adaptive scroll wheel shifts between two scrolling modes automatically. As you scroll faster, it will automatically shift from line-by-line scrolling to free-spinning.

- Line-by-line (ratchet) mode ideal for precise navigation of items and lists.
- Hyper-fast (free-spin) mode near-frictionless spinning, letting you fly through long documents and web pages.



By default, mode shift is assigned to the button on top of the mouse. In the Logitech Options+ Software, you can decide to disable smart-shift if you prefer to stay in a single scrolling mode and always shift manually. You can also adjust the smartshift sensitivity, which will change the speed required to automatically shift into free spinning.

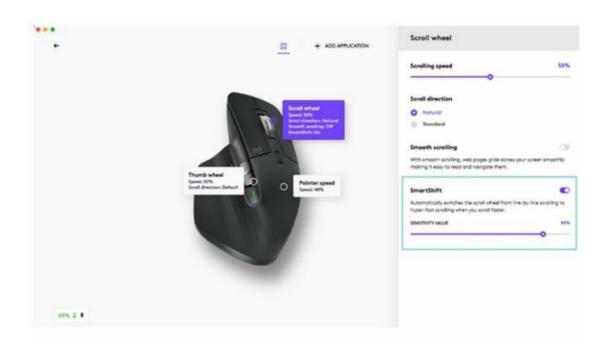



Scroll side to side effortlessly with a stroke of your thumb. Install Logitech Options+ software to extend thumb wheel capabilities and more:

- · Adjust thumbwheel scrolling speed, and direction
- Enable app-specific settings for the thumbwheel
 - Zoom in Microsoft Word and PowerPoint
 - Adjust brush size in Adobe Photoshop
 - Navigate your timeline in Adobe Premiere Pro
 - Switch between tabs in the browser
 - Adjust volume
 - Assign custom keystrokes to the wheel rotation (up and down)

Gesture Button

Install Logitech Options + software to enable gestures.



To use the gesture button:

• Hold down the Gesture button while moving the mouse left, right, up, or down.

Gesture Button		Windows 10		Mac OS
Single press	0	Task View	0	Mission Control
Hold and move down	1	Start Menu	1	Mission Control
Hold and move up	ļ	Show/hide desktop	1	App Expose
Hold and move right	\rightarrow	Switch between desktops	\rightarrow	Switch between desktops
Hold and move left	+	Switch between desktops	←	Switch between desktops

You can use gestures for desktop navigation, app management, pan and more. You can assign up to five different actions to the Gesture button. Or map gestures to other MX Master 3S buttons, including the middle button or manual shift button.

Back/Forward buttons

Conveniently located, the back and forward buttons enhance navigation and simplify tasks.



To move back and forward:


• Press the back or forward button to navigate web or document pages, depending on the location of the mouse

pointer.

NOTE: On the Mac, enabling the back/forward buttons requires installation of Logitech Options+ software. Install Logitech Options+ software to unlock new capabilities for the back/forward buttons In addition to enabling the buttons for use with Macs, Logitech Options+ software lets you map other useful functions to the buttons, including undo/redo, OS navigation, zoom, volume up/down, and more.

Darkfield 8000 DPI sensor

Install Logitech Options+ software to enable the new capabilities of the Darkfield 8000 DPI Sensor By default, the MX Master 3S has a 1000 DPI configuration In the Logitech Options+ Software, you can extend the sensor range to up to 8000 DPI. Enabling this option will allow you to work faster and more precisely, allowing you to adjust the pointer speed to match high resolution monitors.

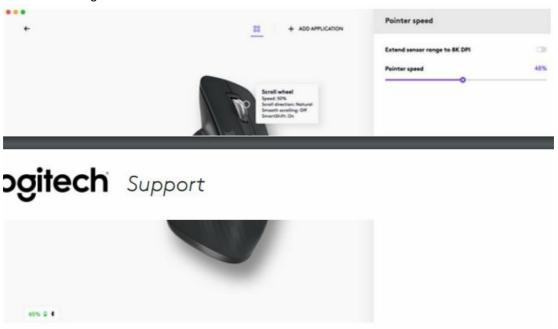

App-Specific Settings

Your mouse buttons can be assigned to perform different functions for different applications. For instance, you can assign the thumb wheel to do horizontal scrolling in Microsoft Excel and zoom in Microsoft PowerPoint. When installing Logitech options+, you will have the possibility to install predefined app-specific settings that will adapt the mouse button behavior to be optimized in selected applications. Here are the app specific settings we have created for you:



Flow

Work on multiple computers with a single MX Master 3S. With Logitech Flow, you can use the mouse cursor to move from one computer to the next. You can even copy and paste between computers, and if you have a

compatible Logitech Keyboard, such as MX Mechanical, the keyboard will follow the mouse and switchcomputers at the same time. You will need to install Logitech Options+ software on both computers and follow these instructions.

Battery



RECHARGE MX MASTER 3S

Connect one end of the provided charging cable to the USB-C port on the mouse and the other end to a USB power source.

A minimum of 3 minutes charging gives you enough power for a full day of use. Depending on how you use the mouse, a full chargecan last up to 70 days*.

• Battery life may vary depending on user and operating conditions.

CHECK BATTERY STATUS

Three LED light on the side of the mouse indicate battery status.



How to clean your device

To clean your MX Master 3S, you can use a ratio of 70% Isopropyl alcohol to 30% water, as found in common cleaning solutions. Other alcohols cause damage, and bleach is not recommended by the CDC.

STILL NEED HELP?

Want to ask other users with the same product a question? Join the conversation.

SUPPORT COMMUNITY

LOGITECH SUPPORT

• Business Support Home

- · Support Home
- Downloads & Apps
- Spare Parts
- MyHarmony Support
- Ultimate Ears Support
- · Community Forums
- Compliance Certificates
- · Warranty Information
- Privacy + Security
- Accessibility
- · Contact Us
 - 2021 Logitech. All rights reserved

Documents / Resources



<u>logitech MX Master 3S Welcome Logitech Support</u> [pdf] Instruction Manual MX Master 3S Welcome Logitech Support, MX Master 3S, Welcome Logitech Support, Logitech Support, Support

References

- Logitech Harmony Support
- Compliance Certification Search | Logitech
- Logitech Product Privacy Policy | Your Privacy is Our Priority
- Image: Terms of Use Logitech Website
- Ultimate Ears Speaker Support Ultimate Ears Support
- Software Logitech Support + Download
- Spare Parts Logitech Support + Download
- Bluetooth troubleshooting for Logitech Bluetooth Mice, Keyboards and Presentation remotes –
 Logitech Support + Download
- Logitech Support + Download
- Set up and enable Logitech Flow for use with a mouse Logitech Support + Download
- Getting Started MX Master 3S Logitech Support + Download
- Submit a request Logitech Support + Download
- Connect your Logitech Bluetooth device Logitech Support + Download
- Logi Options+ (Plus): Customization App for Logitech Devices
- Accessibility

User Manual

Manuals+,