



Logitech PTZ PRO2 Camera User Guide

[Home](#) » [Logitech](#) » Logitech PTZ PRO2 Camera User Guide 

Contents

 
- [1 Logitech PTZ PRO2 Camera](#)
- [2 Know your product](#)
- [3 Set up your product](#)
- [4 Video](#)
- [5 Troubleshooting tips](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



Logitech PTZ PRO2 Camera



Know your product

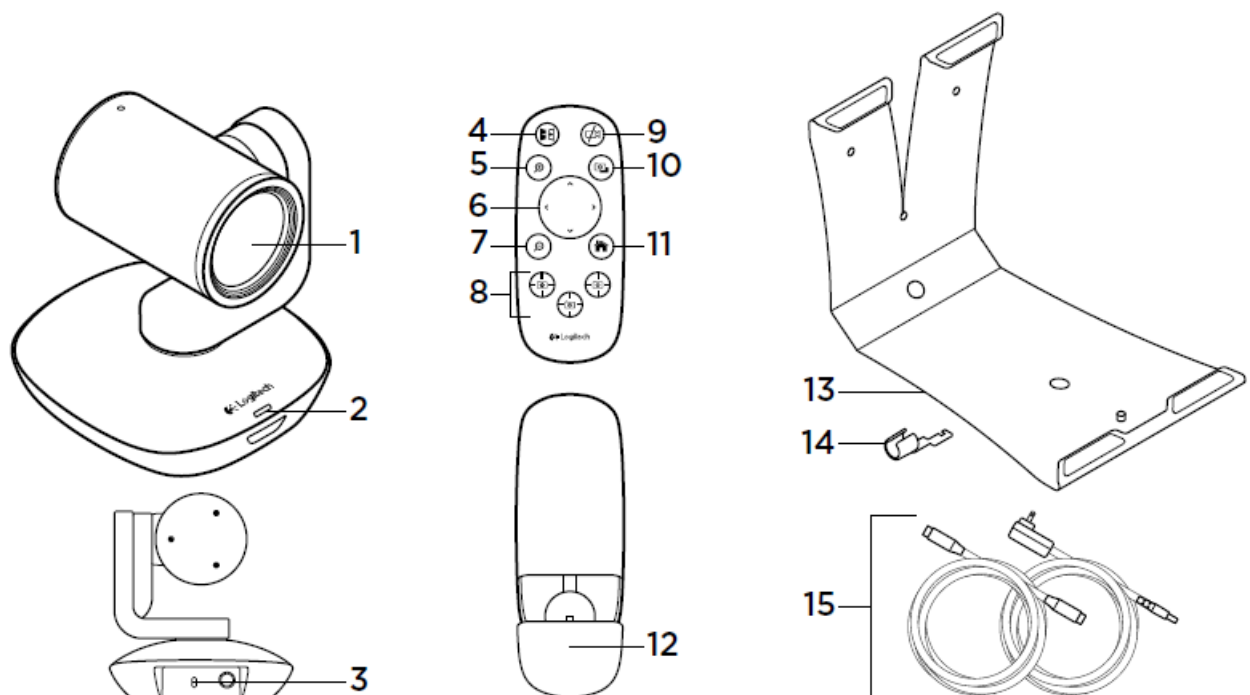


Camera Remote Accessories

1. 10X lossless zoom
2. Camera LED
3. Kensington® Security Slot
4. Mirror
5. Zoom in

6. Pan and tilt
7. Zoom out
8. Camera presets 1, 2, and 3
9. Video mute
10. Far end control
11. Home
12. Remote battery door
13. Camera mount
14. Cable lock
15. Cables

 Set up your product

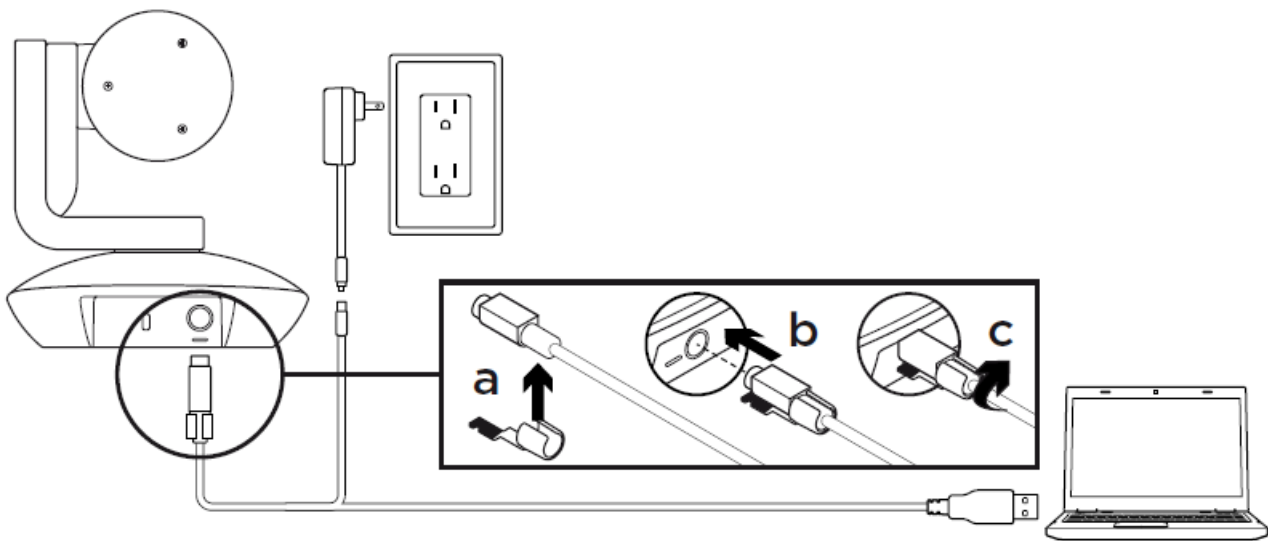

1. Set up camera on table, or using mount on table or wall.
2. Connect PTZ Pro camera (refer to diagram above).
3. Attach cable lock before plugging in cable to the camera port.
4. Connect to external power.
5. To start video from your PC or Mac application, connect the USB cable to your USB port.
6. The camera LED will flash to show that connection is taking place, and when completed, the camera head will rotate.
7. If these activities do not take place, try again and then consult Troubleshooting or call technical support.
8. Start your video call from your application. The LED on the camera will alight when streaming.

Visit Product Central

Discover your product's full potential. Get valuable information and usage tips by browsing easy-to-use FAQs. Find answers to product questions and get help setting up your product. See if there's software available for download that can enhance your product experience. To enjoy all the benefits of your Logitech product, visit www.logitech.com/support/ptz and take advantage of Logitech's wide range of useful support services:

- Troubleshooting
- Diagnostics

 
- Firmware upgrades
- Support community
- Software downloads
- In-box documentation
- Warranty information
- Spare parts (if available)

Use your product

Video

- **Starting the video:** The video is controlled by the application and will start once the camera is selected and the video is started in the application. An LED will light when the video is streaming.
- Pan and tilt the camera using the controls on the remote control. Press once for incremental or press and hold for continuous pan or tilt. Caution: Do not manually rotate webcam head. Doing so may damage unit.
- Zoom the camera up to 10X by pressing the zoom button.
- **Home:** Select the Home button to return the default, out-of-box home position.
- **Camera Presets:** You can set up to 3 Camera Preset positions. First, position the camera using the remote control, and then press and hold one of the Camera Preset buttons for 3 seconds to save that position. You may return to your defined position at any time by pressing the Preset button once. Use Preset 1 as your own defined “home” position. When the camera is reconnected to the PC, it will return to the position set in Preset 1. If no position is set for Preset 1, the camera will return to the default home position. All three Presets are by default set to the out-of-box home.
- **Far end control:** By selecting this key and downloading the application from www.logitech.com/support/ptz, you may control the pan, tilt and zoom of any Logitech ConferenceCam product or C930e Webcam in supported applications. Camera selection and pan, tilt and zoom tools are also available from the downloadable application for PC as well as ability to disable this feature locally. Please visit the download page listed for more information.

Mounting your camera

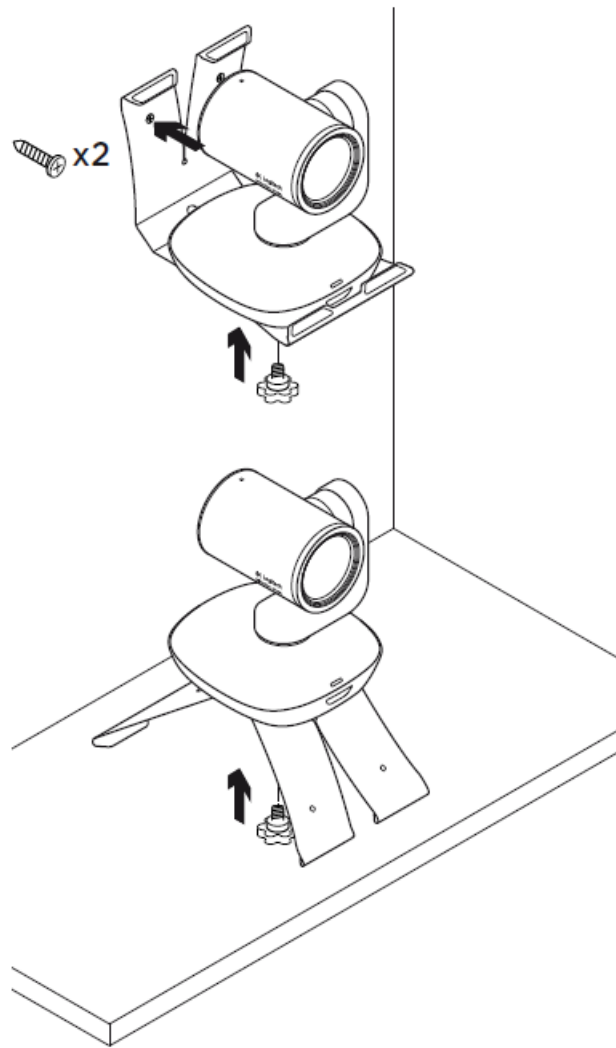

Changing the remote control battery

The PTZ Pro remote control runs on a Li-ion CR2032 battery. Battery life will vary based on usage.

Troubleshooting tips

Please visit www.logitech.com/support/ptz for troubleshooting tips, information on software tools and for a diagnostic tool to help troubleshoot issues you may have with your PTZ Pro.

What do you think?

Please take a minute to tell us. Thank you for purchasing our product. www.logitech.com/ithink

© 2015 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. Bluetooth® is a registered trademark of Bluetooth SIG, Inc. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

Documents / Resources



[Logitech PTZ PRO2 Camera](#) [pdf] User Guide
PTZ PRO2 Camera, PTZ PRO2, Camera

References

- [Logitech | Defy Logic - Tools to Create a Better Tomorrow](#)