

logitech®

SR0197 Macaron
Mini Roll



logitech SR0197 Macaron Mini Roll Instruction Manual

[Home](#) » [Logitech](#) » logitech SR0197 Macaron Mini Roll Instruction Manual 

Contents

- [1 Logitech SR0197 Macaron Mini Roll](#)
- [2 Specifications](#)
- [3 Basic Controls](#)
- [4 GET TO KNOW YOUR MINI ROLL](#)
- [5 FAQs](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

logitech®

Logitech SR0197 Macaron Mini Roll



Specifications

- **Model:** Mini Roll
- **Charging:** USB-C cable
- **Battery Level Check:** Simultaneously press the + or – buttons
- **Additional Feature:** Party Up with Auracast™
- **Power On:** No need to connect to the phone

Basic Controls

Get familiar with the basic controls of your Mini Roll:

- Short Press: Play/Pause
- Double Press: Skip to the next track
- Triple Press: Go back to the previous track
- Short Press + or -: Adjust volume

Battery Check

To check the battery level, simultaneously press the + or – buttons.

Charging

Charge your Mini Roll using a USB-C cable. Remember to only charge when the speaker is clean and dry.

Joining Party Up

To join the Party Up feature, follow the instructions on your Mini Roll.


Hook Installation

Ensure that the hook is fully inserted into the hole on the speaker for proper installation.

Power On

Your Mini Roll can be powered on without the need to connect to a phone.


GET TO KNOW YOUR MINI ROLL

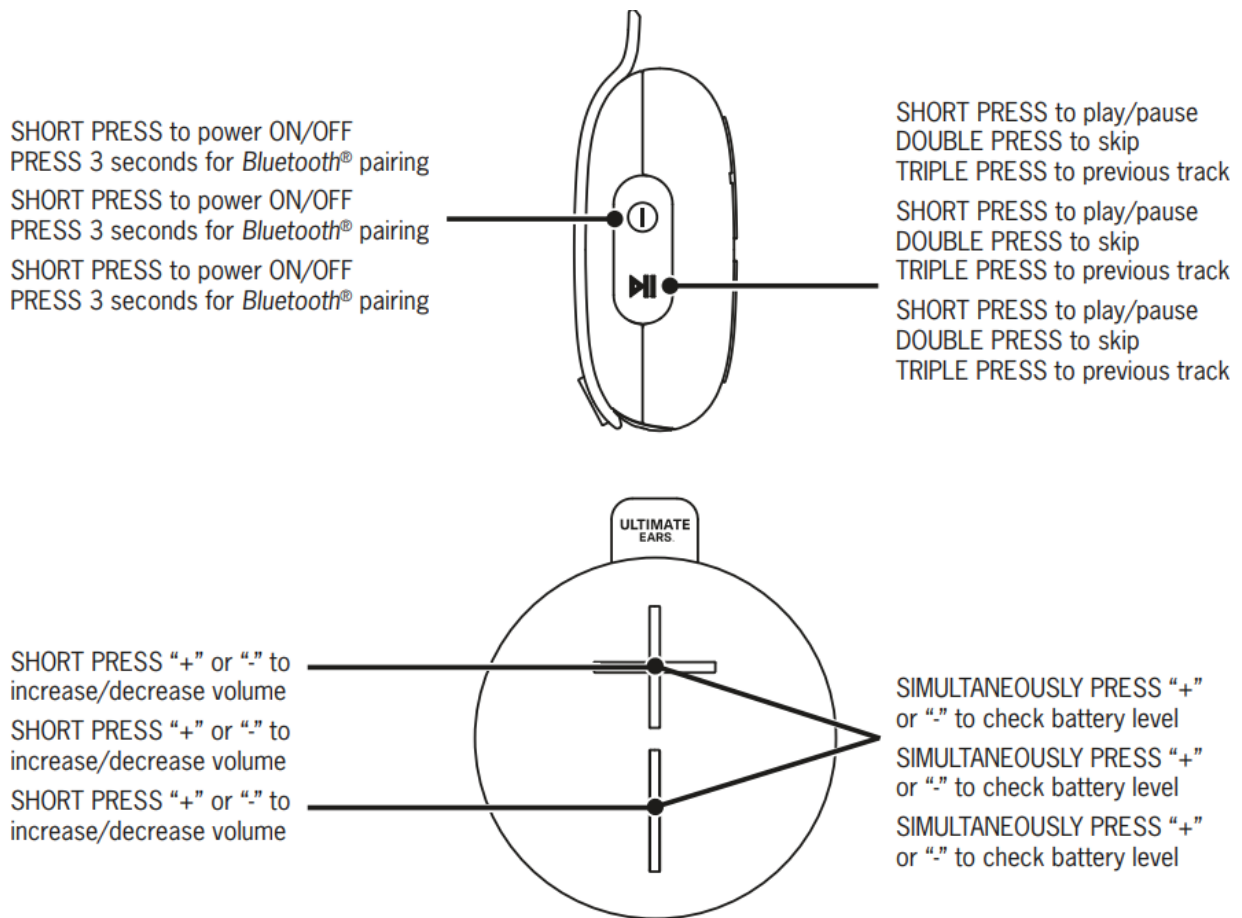


PARTY UP UNLIMITED MINI ROLL WITH AURACAST™ | PARTY UP UNLIMITED MINI ROLL WITH AURACAST™ | PARTY UP UNLIMITED MINI ROLL WITH AURACAST™

Long Press 3 seconds on the play/pause button to turn the Party Up ON/OFF. Please note that when you turn on Party Up and play music, the device is in Broadcast Mode and your MINI ROLL will connect to other MINI ROLLS. | Long Press 3 seconds on the play/pause button to turn Party Up ON/OFF. Please note that when you turn on Party Up and play music, the device is in Broadcast Mode and your MINI ROLL will connect to other MINI ROLLS. | Long Press 3 seconds on the play/pause button to turn Party Up ON/OFF. Please note that when you turn on Party Up and play music, the device is in Broadcast Mode and your MINI ROLL will connect to other MINI ROLLS.


PRIMARY MINI ROLL

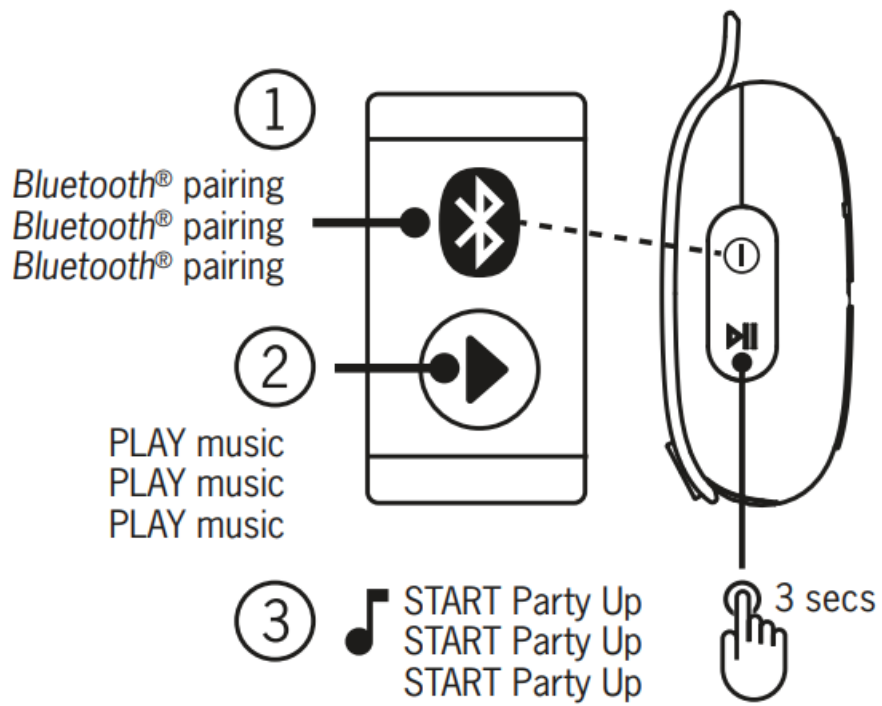

ADDITIONAL MINI ROLLS

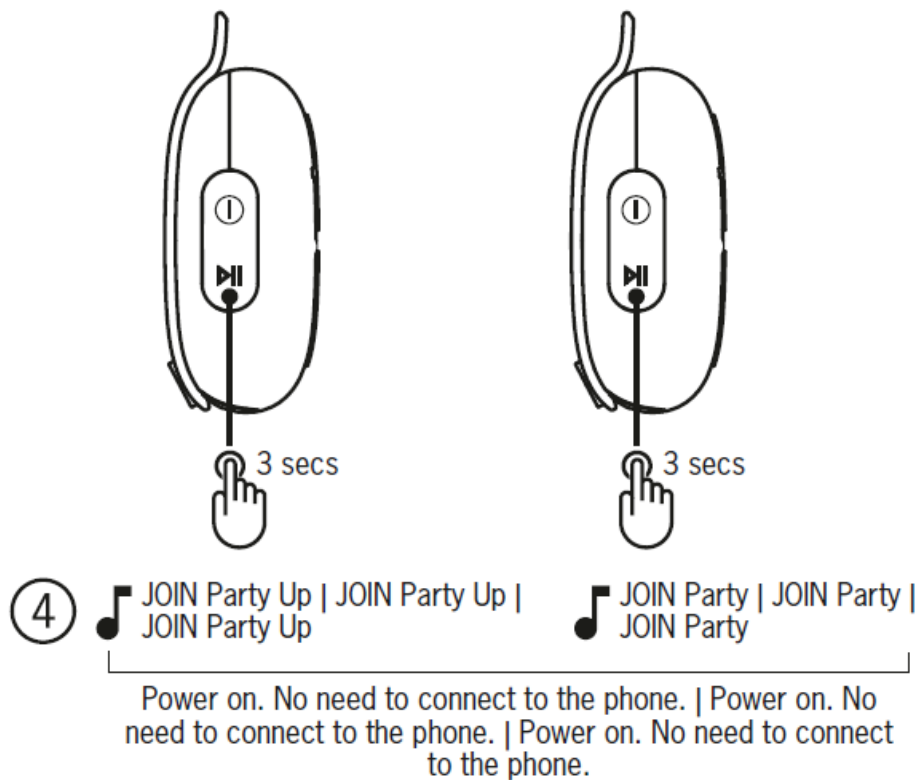

- ENSURE the hook is fully inserted into the hole in the speaker
- ENSURE the hook is fully inserted into the hole in the speaker

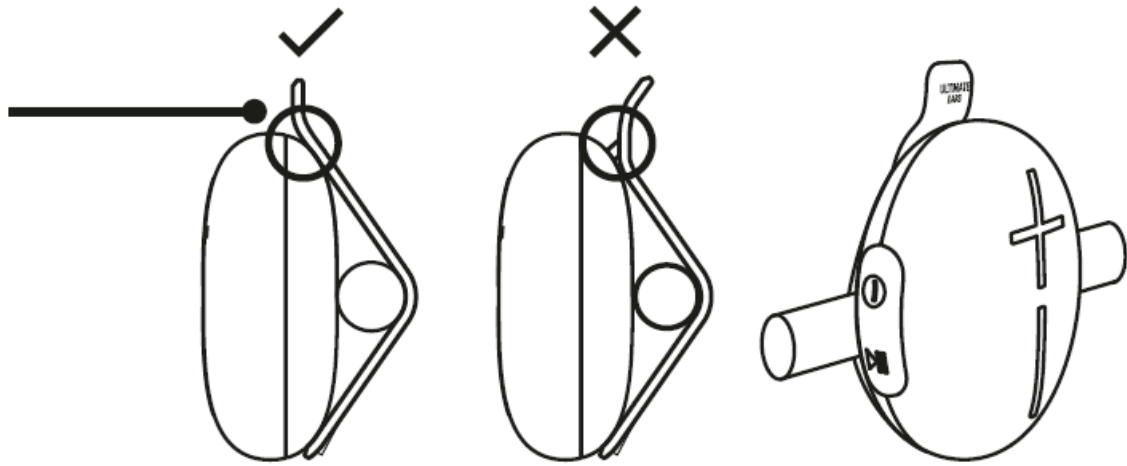

- ENSURE the hook is fully inserted into the hole in the speaker

Charge with USB-C cable.

ONLY CHARGE WHEN THE SPEAKER IS CLEAN AND DRY.

Charge with USB-C cable.

ONLY CHARGE WHEN THE SPEAKER IS CLEAN AND DRY.

Charge with USB-C cable.


ONLY CHARGE WHEN THE SPEAKER IS CLEAN AND DRY.

For full user guide, visit [MY.ULTIMATEEARS.COM/MINIROLL](https://my.ultimateears.com/miniroll) I, visit [MY.ULTIMATEEARS.COM/MINIROLL](https://my.ultimateears.com/miniroll).

- Project Macaron Mini Roll – QSG
- Date 29 May 2024
- File Name PDM-620-012903 OOD Macaron Mini Roll qsg LOC v2.ai
- P/N 620-012903 Rev. OOD
- Print size 101.6mm x 101.6mm
- Trim size 101.6mm x 101.6mm
- Fonts News Gothic Std

USE SOY OR VEGETABLE INKS

Inks

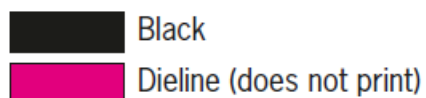

- Finish Matte PP Lamination Notes

FAQs

Q: How do I skip tracks?

A: Double press the Mini Roll to skip to the next track.

Q: How can I adjust the volume?

A: Use short presses of the +/- buttons to increase or decrease the volume.


Q: How do I check the battery level?

A: Simultaneously press the + or - buttons to check the battery level.

Q: Can I charge the Mini Roll with any USB-C cable?

A: Yes, you can charge the Mini Roll with a USB-C cable, but ensure the speaker is clean and dry before charging.

Documents / Resources

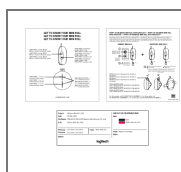

[logitech SR0197 Macaron Mini Roll](#) [pdf] Instruction Manual
SR0197, SR0197 Macaron Mini Roll, Macaron Mini Roll, Mini Roll, Roll

References

- [logi MINIROLL Bluetooth Speaker | Ultimate Ears](#)
- [Ultimate Ears Portable Speakers, Bluetooth Speakers, Wireless Speakers](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.