



logitech VR0019 Camera and Speakerphone Unit Instructions

[Home](#) » [Logitech](#) » logitech VR0019 Camera and Speakerphone Unit Instructions 

Contents

- [1 logitech VR0019 Camera and Speakerphone](#)
- [2 Important Safety, Compliance and Warranty Information](#)
- [3 Safe Usage Guidelines for Products](#)
- [4 FCC statement](#)
- [5 IC statement](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



logitech VR0019 Camera and Speakerphone



Important Safety, Compliance and Warranty Information

POWER SUPPLY WARNING! The power supply is for indoor use only. Only use the power supply included with your product. Do not attempt to repair or use a damaged power supply. Do not immerse the power supply in water or subject it to physical abuse. Inspect the power supply regularly for cable, plug, and casing damage.

BATTERY WARNING!: Improperly replaced batteries may present a risk of leak or explosion and personal injury.

Risk of fire or explosion if the battery is replaced by an incorrect type.


Ensure batteries are installed correctly by following the instructions provided. Mistreated rechargeable batteries may present a risk of fire or chemical burn. Do not disassemble or expose to conducting materials, moisture, liquid, or heat above 54° C (130° F). A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Do not use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Do not leave your battery discharged or unused for extended periods. Do not short circuit. Your device may contain an internal, rechargeable battery that is not replaceable. Battery life varies with usage. Non-operational batteries should be discarded according to local laws. If no laws or regulations govern, dispose of your device in a waste bin for electronics. Keep batteries away from children.

Do not ingest battery, Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention. Never place batteries in your mouth for any reason as they may be swallowed accidentally. Always check medication before ingesting as adults have mistaken button batteries for pills or tablets. Contact the National Battery Ingestion Hotline at (202) 625-3333 (United States).

Perchlorate Material – special handling may apply. See <http://www.dtsc.ca.gov/hazardouswaste/perchlorate/>

Caution.

Connect all power cords to a properly wired and grounded electrical outlet.

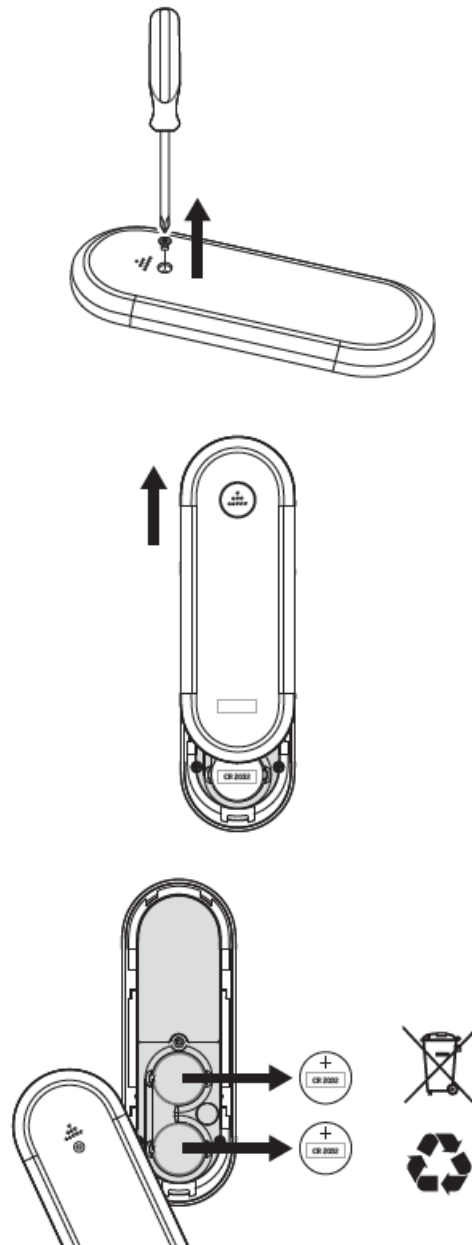

Safe Usage Guidelines for Products

- Do not open or modify the product except for battery removal and replacement.
- Do not disassemble or attempt to service this product.
- Use the product with listed/certified ITE computers and accessories.
- Connect the power supply or power cord to a properly wired and grounded electrical outlet.
- This product is safe under normal and reasonably foreseeable operating conditions.
- If the product is operating improperly, please contact Logitech support.
- The product must be returned to the manufacturer for any service or repair.
- This is not a Children's Product and is not intended for use by children under 14 years old.
- **Warning:** Not suitable for children under 36 months. Small parts. Choking hazard.
- Install the device according to provided instructions. Improper installation of this product may cause damage or injury.
- Mount device properly according to the provided instructions. Improper installation of this product may cause damage or injury.

Logitech Compliance. The product complies with all applicable requirements for Restriction of Hazardous Substances (RoHS) and Waste Electronic and Electrical Equipment (WEEE). For Product Safety, EMC, RF, Energy, RoHS and WEEE information, go to www.logitech.com/compliance. Maintenance is not required for product compliance.

FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and,

if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Warning: Where shielded interface cables or accessories have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC. Changes or modifications to product not expressly approved by Logitech, Inc could void your right to use or operate your product by the FCC.

Radiation Exposure Statement

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Radiation Exposure Statement – Remote This wireless product complies with FCC and IC radiation exposure limits for portable devices. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Caution: (i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems; (ii) high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause

interference and/or damage to LE-LAN devices.

IC statement



CAN ICES-3 (A) / NMB-3 (A)

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.













Warning

This is a class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures. Logitech Limited Hardware Product Warranty – A Summary Logitech warrants that its hardware product shall be free from defects in materials and workmanship for the length of time identified on your product package beginning from the date of the original retail purchase. See support.logitech.com for specific warranty information about your product and procedures to act on a warranty claim. Logitech’s entire liability and your exclusive remedy for any breach of warranty shall be, at Logitech’s option, to repair or replace a functional equivalent of the product, or to refund the price paid, if the hardware is returned to the point of purchase or such other place as Logitech may direct along with a receipt. Warranty protections are in addition to rights provided under local consumer laws and may vary among countries. See full warranty information to know your consumer rights and the additional protections provided by this product warranty. Logitech Address: Logitech, Inc., 7700 Gateway Blvd. Newark, California 94560. Full Warranty Information: support.logitech.com

Documents / Resources

	logitech VR0019 Camera and Speakerphone Unit [pdf] Instructions VR0019, JNZVR0019, VR0019 Camera and Speakerphone Unit, VR0019, Camera and Speakerphone Unit
	logitech VR0019 Camera and Speakerphone Unit [pdf] Instructions VR0019, JNZVR0019, VR0019 Camera and Speakerphone Unit, VR0019, Camera and Speakerphone Unit

References

-  [Logitech Support + Download](#)
-  dtsc.ca.gov/hazardouswaste/perchlorate/
-  [Compliance Certification Search | Logitech](#)
-  [Compliance Certification](#)
-  [Compliance Certification](#)
-  [Compliance Certification](#)
-  [Compliance Certification](#)
-  [Contact Logitech - Corporate Offices & Support Enquiries](#)
-  [Global Recycling Program for Ewaste and Batteries - Logitech](#)
-  [Global Recycling Program for Ewaste and Batteries - Logitech](#)
-  [Global Recycling Program for Ewaste and Batteries - Logitech](#)
-  [RoHS](#)