

Logitech Wired Circle 2 Home Security Camera



Logitech Wired Circle 2 Home Security Camera User Guide

[Home](#) » [Logitech](#) » Logitech Wired Circle 2 Home Security Camera User Guide 

Contents

- 1 Logitech Wired Circle 2 Home Security Camera
- 2 Product Information
- 3 WHAT'S IN THE BOX
- 4 QUICK-AND-EASY SETUP INSTRUCTIONS
- 5 TIPS AND TRICKS
- 6 USAGE GUIDELINES
- 7 MOUNTS AND ACCESSORIES
- 8 FAQ
- 9 Documents / Resources
 - 9.1 References



Logitech Wired Circle 2 Home Security Camera



Product Information

Specifications

- Camera Model: Circle 2
- Mount Type: Swivel mount
- Cable Length: 10 ft (3 m)
- Power Adapter: USB
- Included Accessories: Wall bracket, 4 screws, 2 cable clips, 4 wall anchors

Quick Start Guide

1. Ensure you have a high-speed, Wi-Fi internet connection and a compatible device*
2. Line up the indicators, attach the camera to the swivel mount, and rotate it to your preferred orientation
3. Plug the USB cable into the power supply and plug it into a wall outlet
4. Download the Logi Circle app and follow the onscreen instructions

For additional setup tips and videos, visit logi.com/circle2/setup

Tips and Tricks

- **Camera LED indicator:**
 - Blinking blue: Ready to pair
 - Solid white: Camera connected and ready for use
 - Solid green: Someone watching/Privacy mode viewing
 - Solid red: Camera off/not recording or streaming
- **Reset camera steps:**
 - Locate the circular reset button on the side of the camera
 - Press and hold the reset button for 9 seconds

- Release the button when you see the blinking magenta and green LED ring

Usage Guidelines

Easy Mounting: Screw the bracket onto the wall/ceiling using the included screws and anchors. Snap the base of the mount onto the bracket and then attach the camera to the mount. Adjust the camera to the preferred angle and orientation. When placing it on a ceiling, you can flip the video using the camera menu. For additional installation tips, visit logi.com/circle2/setup

Mounts and Accessories

Circle 2 is a versatile security camera that can be used anywhere at home. To customize your experience, choose from a selection of accessories:

- **Window Mount:** Simply put the Window Mount on the camera and place it on any window pane. Thanks to the Window Ring and unique in-app mode, it's that simple.
- **Plug Mount:** Watch over your home from any wall outlet – in the kitchen, the garage, even down low to see your pet.
- **Weatherproof Extension:** An additional ~15 ft (4.5 m) Weatherproof Extension lets your Circle 2 Camera reach even further.

 
For more help, visit support and FAQs at logi.com/circle2/support. For additional Circle Safe subscription plans, go to logi.com/circle2/subscriptions.

WELCOME TO WHOLE HOME SECURITY

Meet Circle 2, the versatile wired 1080p HD home security camera with night vision and up to 180° field-of-view that you can set up in minutes. Let's get started.


WHAT'S IN THE BOX

1. Circle 2 Camera with Camera Cover
2. Swivel mount with tethered 10 ft (3 m) cable
3. USB power adapter
4. Wall bracket, 4 screws, 2 cable clips, 4 wall anchors

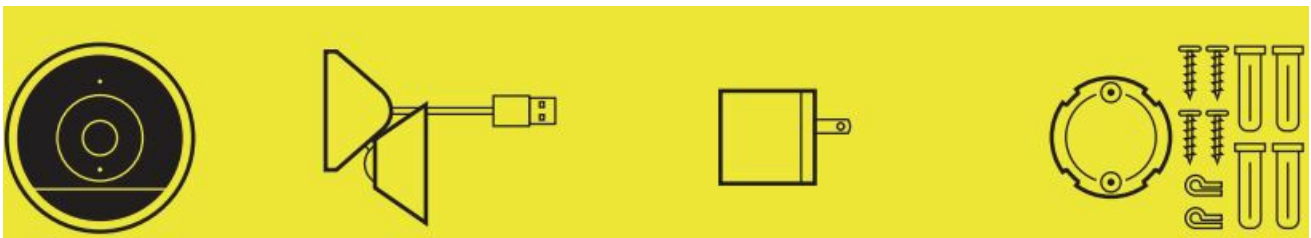

QUICK-AND-EASY SETUP INSTRUCTIONS

 1. Need a high-speed, Wi-Fi internet connection and a compatible device
2. Line up indicators, attach the camera to mount, and rotate to the preferred orientation
3. Plug USB cable into power supply and plug into wall
4. Download the Logi Circle app and follow onscreen instructions

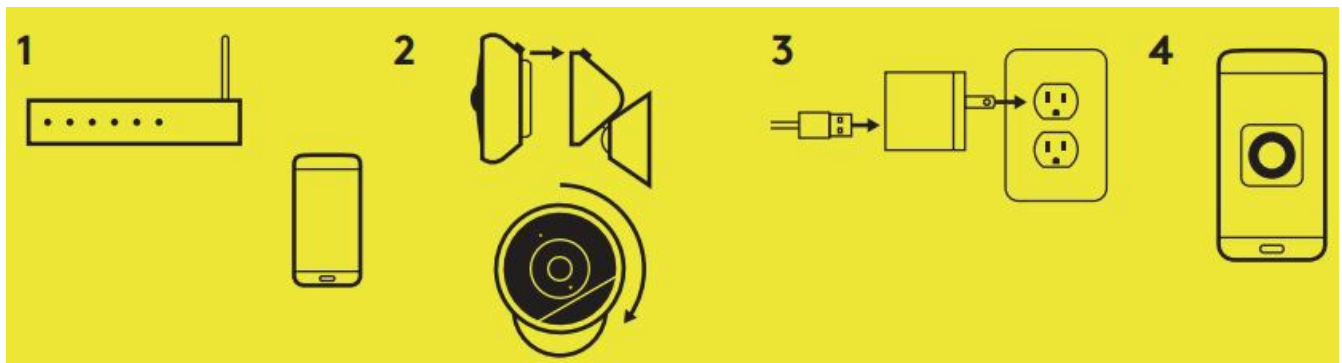

For additional setup tips and videos, visit logi.com/circle2/setup * Operating system and device: iOS 8.1 or later with iPhone 4s or later, iPad mini or later, iPad 3 or later, iPod Touch (5th generation) or later, Android™ 4.4 or newer with Bluetooth® low energy technology

TIPS AND TRICKS


Camera LED indicator

- Blinking blue: Ready to pair
- Solid white: Camera connected and ready for use
- Solid green: Someone watching/ viewing
- Solid yellow: Privacy mode
- Solid red: Camera off/ not recording or streaming



Reset camera steps

Locate circular reset button on side of camera

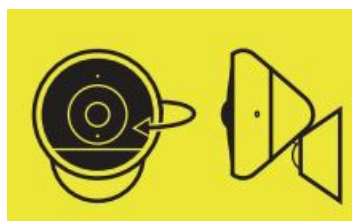

Press and hold the reset button for 9 seconds and release when you see the blinking magenta and green LED ring



USAGE GUIDELINES


Make sure it's in Wi-Fi range

Circle 2 is a Wi-Fi security camera that streams HD video with audio, so it's recommended to be placed in a location that gets the best Wi-Fi reception – even moving the position of your camera a few feet can have a big impact. TIP: try streaming video to help determine optimal placement.




Pick a spot with a clear view

Place Circle 2 anywhere — on shelves, walls, and ceilings. When placing it make sure it's high enough that it's not easy to tamper with but easy enough to get to when required. Around 7–8 ft (2–2.5 m) works best.

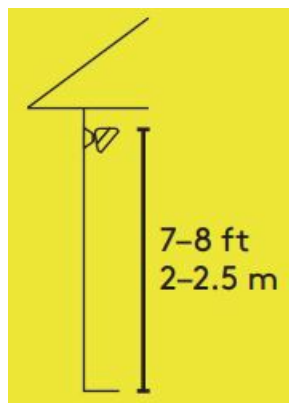


Don't leave it exposed to the sun

Circle 2 is designed to brave the cold and the heat and can operate in daytime temperatures between -20° C to 50° C (-4° to 122° F).* Do not place in direct sunlight as it can cause the camera to heat up and impact performance, cause material degradation, plus it may create unwanted glare in your videos. * 40° C (104° F) in night vision mode For additional installation tips, visit logi.com/circle2/setup

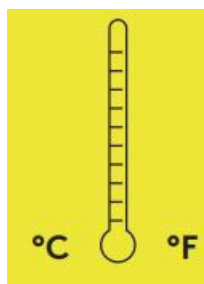

Easy mounting

Screw the bracket onto the wall/ceiling using the included screws and anchors. Snap the base of mount onto the bracket and then attach the camera to the mount. Adjust the camera to the preferred angle and orientation. When placing it on a ceiling, you can flip the video using the camera menu.

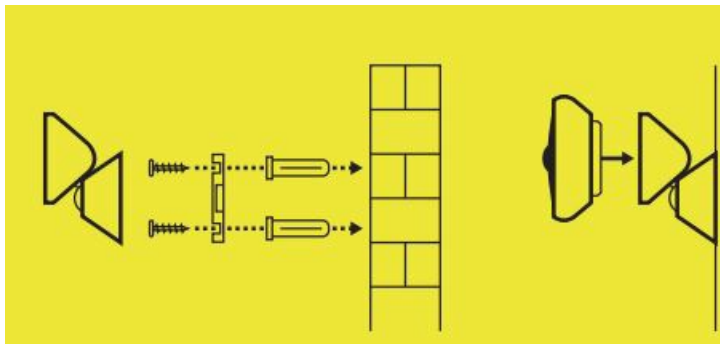


MOUNTS AND ACCESSORIES

Circle 2 is the most versatile security camera that can be used anywhere at home. To customize your experience even more, choose from a selection of accessories that fit your needs.


Window Mount

Simply put the Window Mount on the camera and place it on any window pane. Thanks to the Window Ring and unique in-app mode, it's that simple.

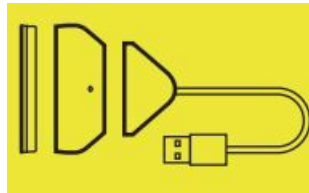


Plug Mount

Watch over your home from any wall outlet — in the kitchen, the garage, even down low to see your pet.

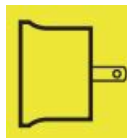

Weatherproof Extension

An additional ~15 ft (4.5 m) Weatherproof Extension lets your Circle 2 Camera reach even further.

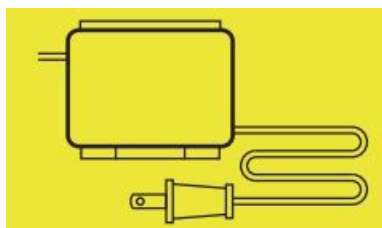

Need more help?

Visit support and FAQs at logi.com/circle2/support For additional Circle Safe subscription plans, go to logi.com/circle2/subscriptions



FAQ

Q: How do I reset the camera?

A: Locate the circular reset button on the side of the camera. Press and hold the reset button for 9 seconds and release when you see the blinking magenta and green LED ring.


Q: How do I mount the camera?

A: Screw the bracket onto the wall/ceiling using the included screws and anchors. Snap the base of the mount onto the bracket and then attach the camera to the mount. Adjust the camera to the preferred angle and orientation.

Q: Can I use the camera on a window pane?

A: Yes, you can use the Window Mount accessory to place the camera on any window pane.

Documents / Resources

	Logitech Wired Circle 2 Home Security Camera [pdf] User Guide Wired Circle 2 Home Security Camera, Wired, Circle 2 Home Security Camera, Home Security Camera, Security Camera, Camera
-------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [🌐 Logi Circle](#)
- [logi Logitech Support + Download](#)
- [📄 Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.