



logitech WIRELESS COMBO Installation Guide

Home » Logitech » logitech WIRELESS COMBO Installation Guide 🖔

WIRELESS COMBO MK320 Setup Guide Guide d'installation

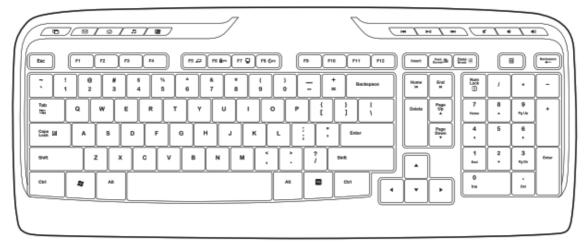

K320

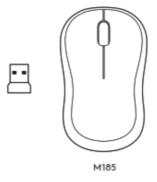


logitech

Contents

- **1 KNOW YOUR PRODUCT**
 - 1.1 MOUSE FEATURES
 - 1.2 KEYBOARD FEATURES
- **2 WHAT'S IN THE BOX**
- **3 CONNECTING THE KEYBOARD AND**
- **MOUSE**
- **4 DIMENSION**
- **5 SYSTEM REQUIREMENTS**
- 6 Documents / Resources
- **7 Related Posts**

KNOW YOUR PRODUCT

MOUSE FEATURES

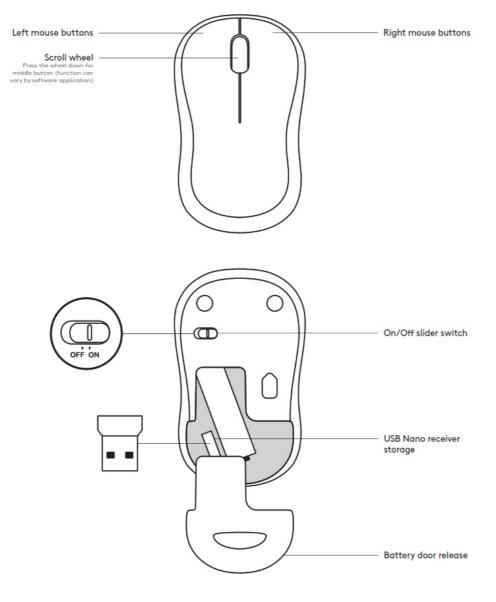


Hot keys				
	Switch applications		Launch e-mail	
企	Home	IJ	Launch media player	
B	Show Desktop	*	Previous track	
►II	Play/pause	▶	Next track	
1/4	Mute	,	Volume down	
■ (i)	Volume up			



FN keys				
FN + F5 &	Search	FN + F6 @ PC	Lock PC	
FN + F7 🖫	My computer	FN + F8 OPC	PC sleep	
FN + Pause Break	Contextual menu	FN + Print Screen	Scroll lock	

To use the FN function, press and hold the FN key, and then press the F-key you want to use



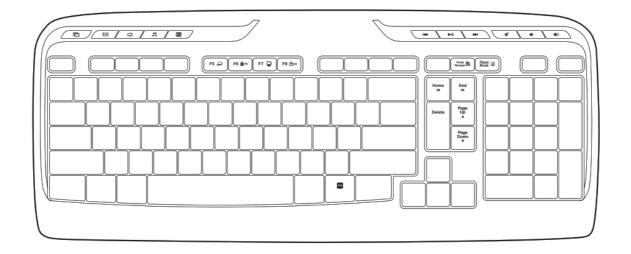

WHAT'S IN THE BOX

- 1 Logitech K330 Keyboard
- 2 Logitech M185 Mouse
- 3 AAA Battery x 2
- 4 AA Battery x 1
- 5 USB Nano receiver
- 6 User documentation














CONNECTING THE KEYBOARD AND MOUSE

www.logitech.com/support/mk320

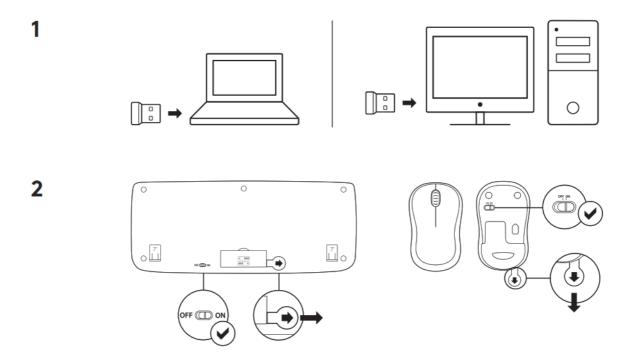

DIMENSION

Keyboard:

Height x Width x Depth: 20 52mm x 446 25mm x 182 96mm

Keyboard Weight(With Battery): 571g Keyboard Weight(Without Battery): 556g

Mouse:

Height x Width x Depth: 38 6mm x 59 8mm x 99 5mm

Mouse Weight(With Battery): 73 4g
Mouse Weight(Without Battery): 50 4g

Dongle:

Height x Width x Depth: 6mm x 14mm x 19mm

Weight: 2g

SYSTEM REQUIREMENTS

Windows®10 or later, Windows® 8, Windows® 7, Windows Vista®, Windows® XP Chrome OS™ USB port Internet connection (for optional software download)

DRIVERS / SOFTWARE DOWNLOADS

Logitech® software offers the capability to reprogram your keyboard F-keys www.logitech.com/support/MK320

© 2020 Logitech, Logi and the Logitech Logo are trademarks or registered trademarks of Logitech Europe S A and/or its affiliates in the U S and other countries Logitech assumes no responsibility for any errors that may

appear in this manual Information contained herein is subject to change without notice

Documents / Resources



Manuals+,