

logitech ZONE WIRELESS Plus Replaceable Earpad Covers Installation Guide

[Home](#) » [Logitech](#) » logitech ZONE WIRELESS Plus Replaceable Earpad Covers Installation Guide 

Contents



- [1 logitech ZONE WIRELESS Plus Replaceable Earpad Covers](#)
- [2 KNOW YOUR PRODUCT](#)
- [3 WHAT'S IN THE BOX](#)
- [4 REPLACING EARPAD COVERS](#)
- [5 DIMENSIONS](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



logitech ZONE WIRELESS Plus Replaceable Earpad Covers




KNOW YOUR PRODUCT

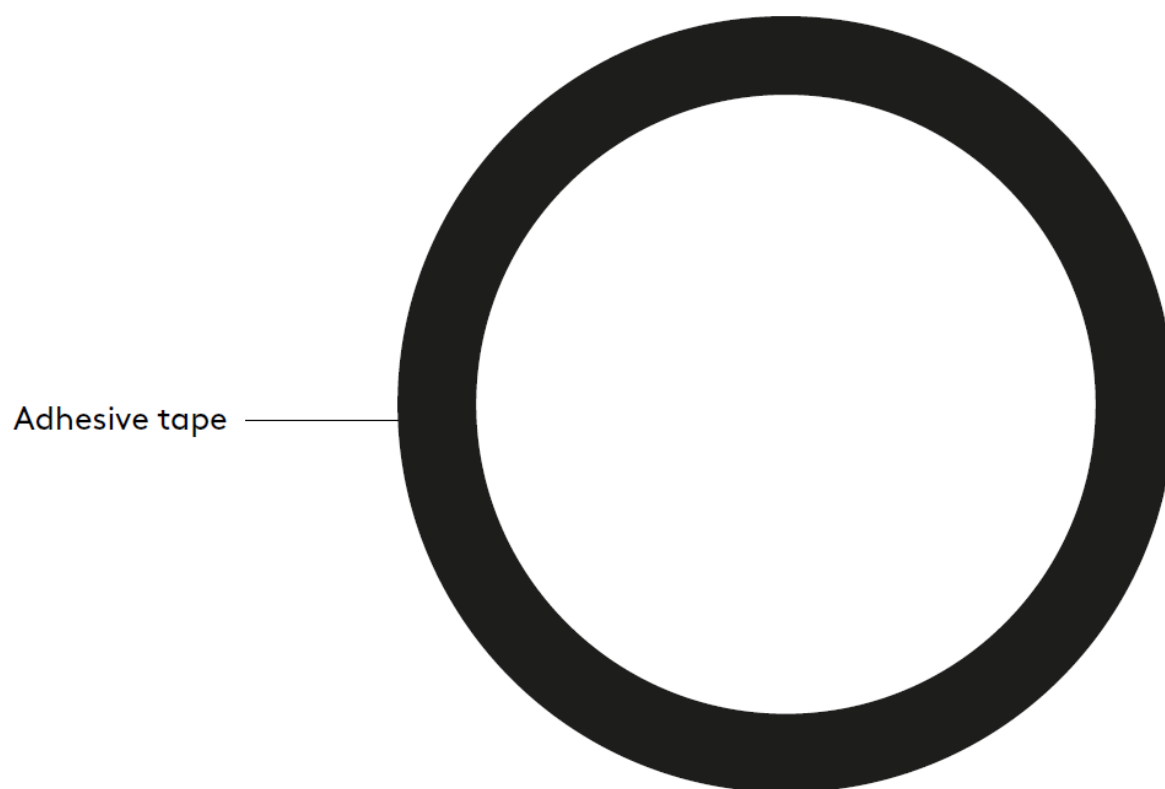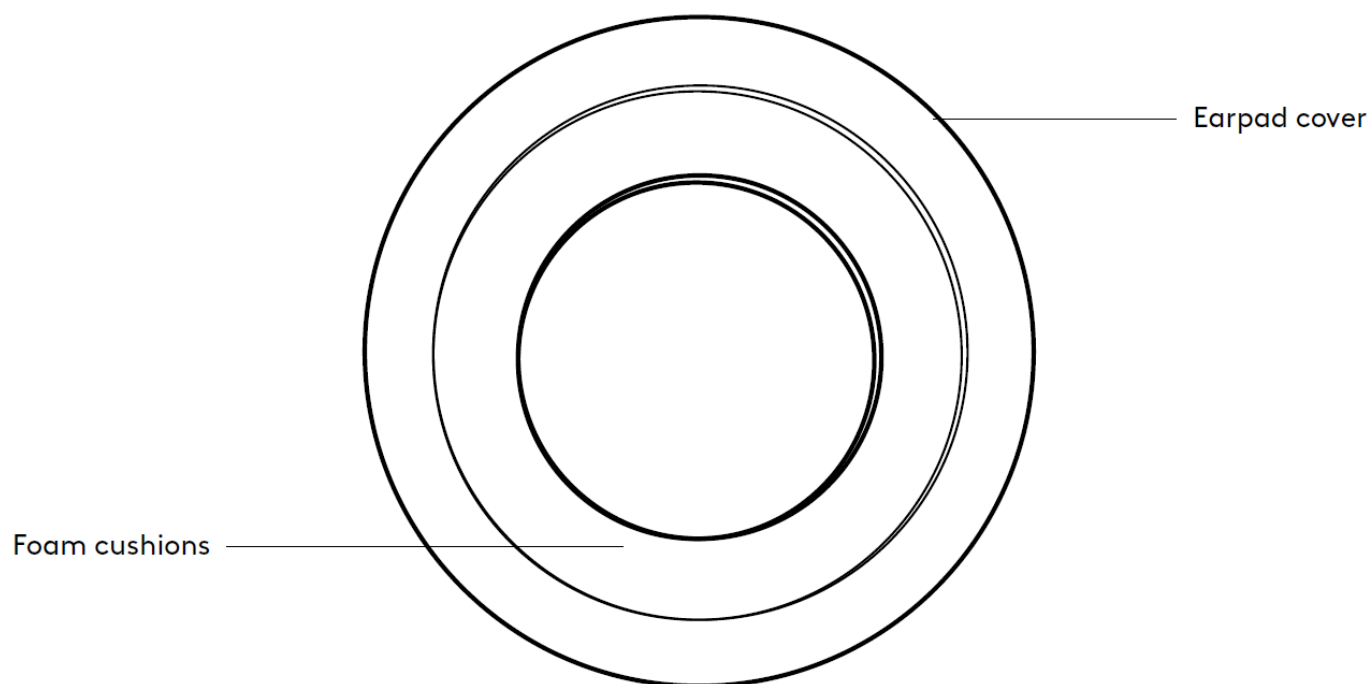


WHAT'S IN THE BOX


1. 1 pair (2 pcs) of replaceable earpad covers
2. 1 pair (2 pcs) of foam cushions
3. 1 pair (2 pcs) of adhesive tapes

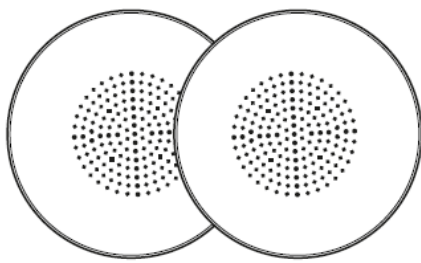

1.

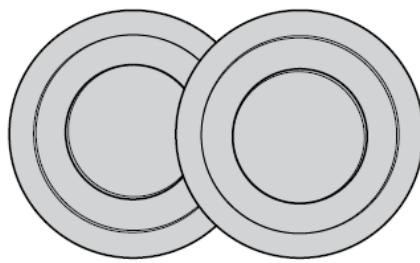


2.

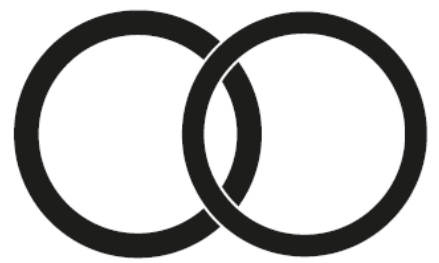


3.

REPLACING EARPAD COVERS


1. Take the existing earpad cover off by carefully pinching the cover.

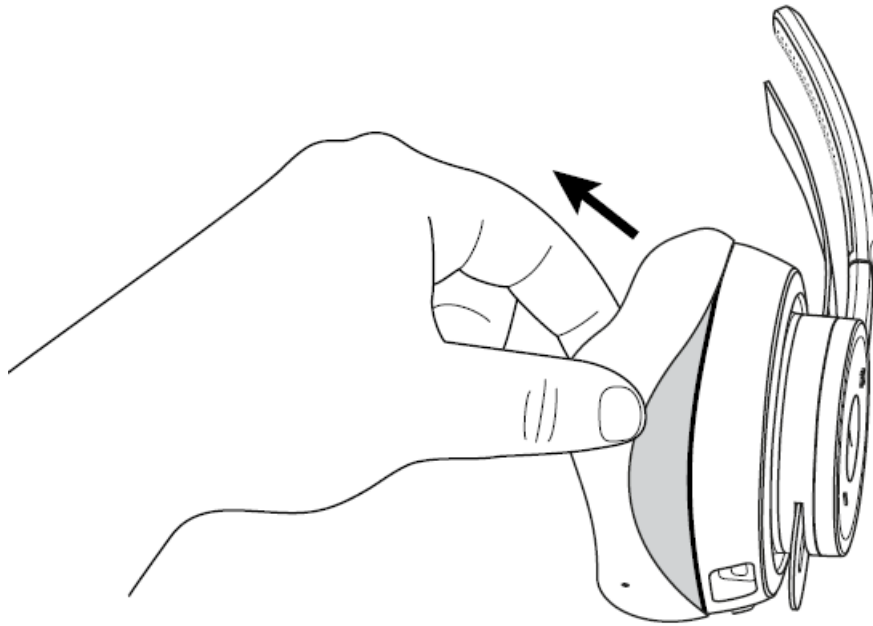

2. Remove the earpad cover slowly until it is completely off.

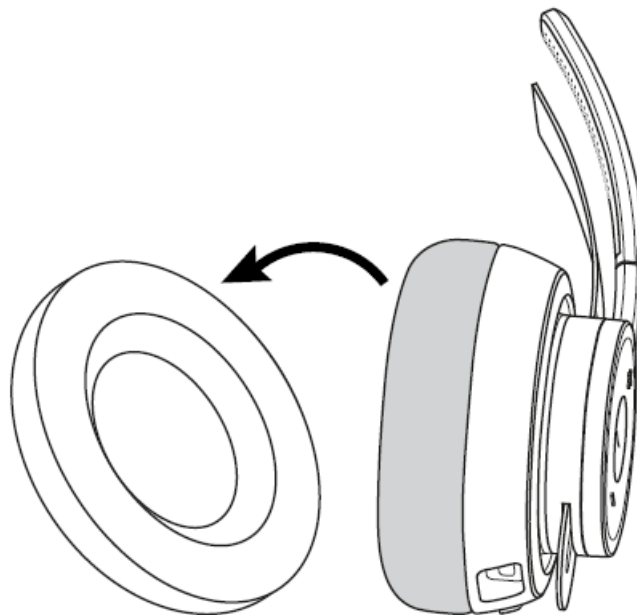


- Make sure not to pinch the foam cushion which can be damaged easily.

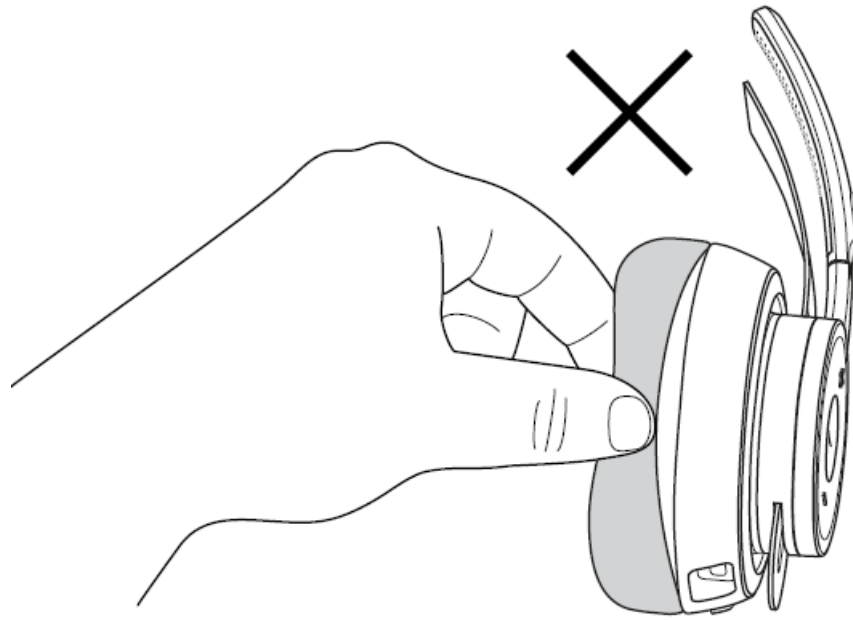


3. If foam cushion is damaged, please follow the steps below.

- Peel the foam cushion off and replace with a new one.

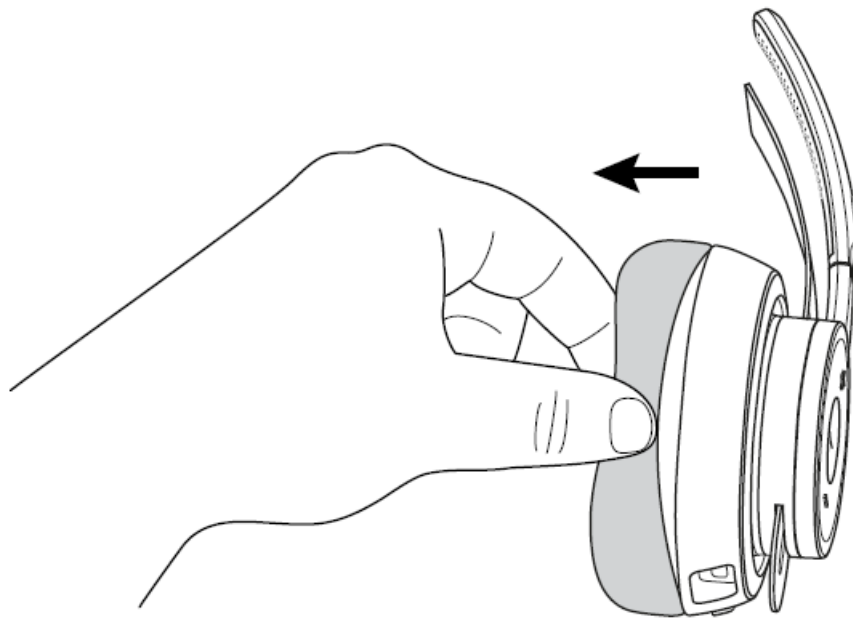


- Place the tape on the top of the ear cup first.

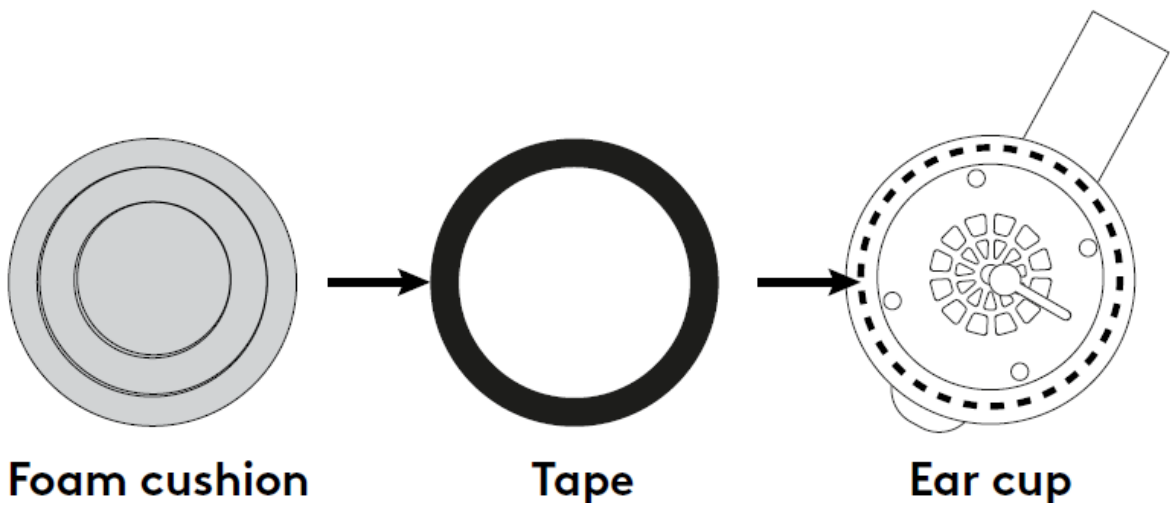


- Then attach the foam cushion to the tape.


4. Grasp the new earpad cover, making sure that the small holes on the side align with the top and bottom of the ear cup. It should align with the USB C port at the bottom.

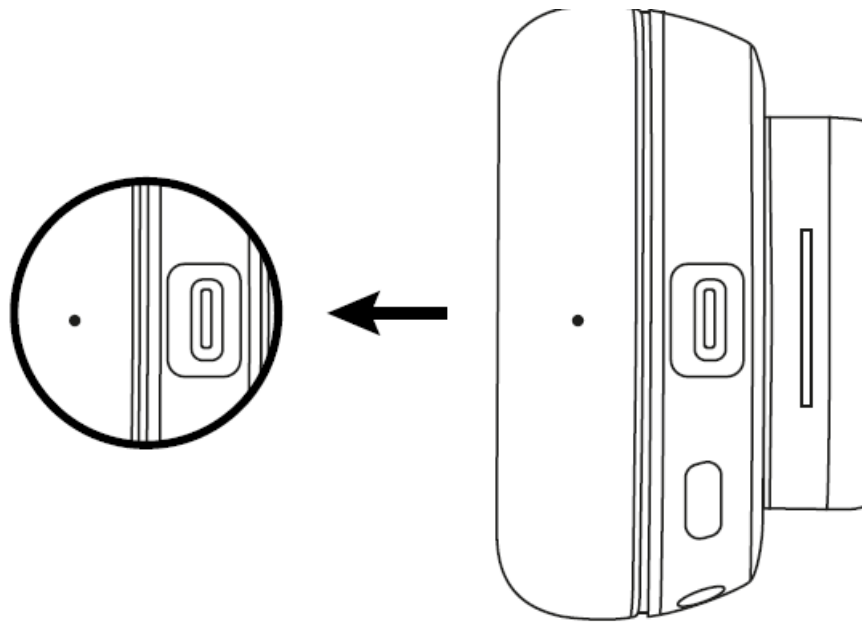

5. Starting from the top, slot the edge of the earpad cover inside the gap. Put the edge of the cover into the gap around the earcan.

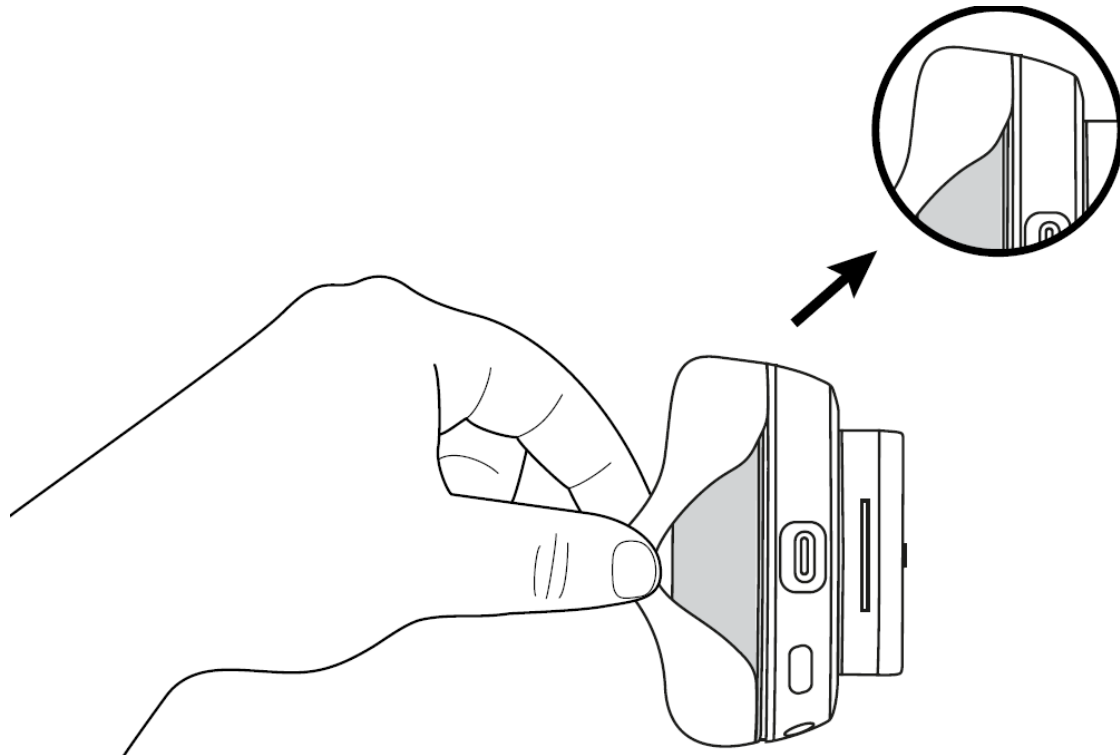

6. After completing, gently pat the earcup several times to push the air out.

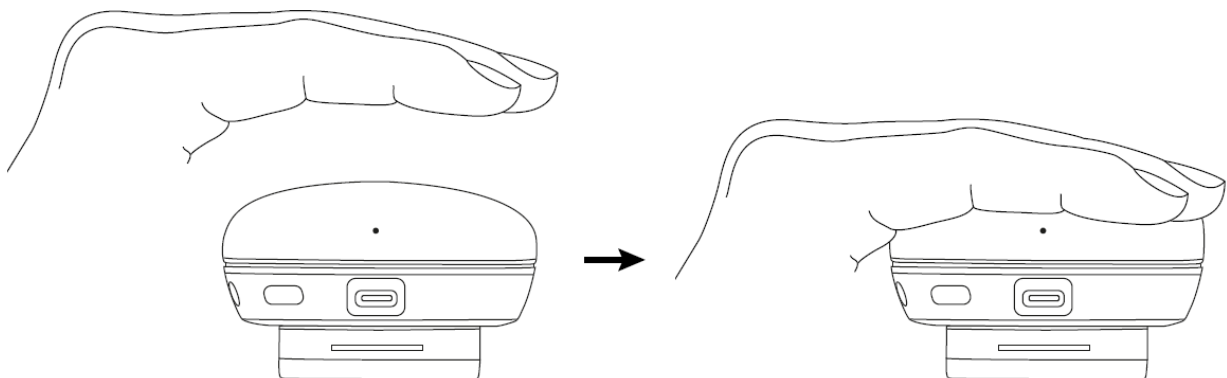

DIMENSIONS

EARPAD COVERS:


Height x Width x Depth: 70.7 mm x 70.7 mm x 16.4mm

www.logitech.com/support/zone-wireless-earpad-covers

© 2020 Logitech, Logi and the Logitech Logo are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.



Documents / Resources

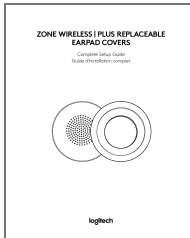 The image shows the front cover of a Logitech manual. At the top, it reads "ZONE WIRELESS PLUS REPLACEABLE EARPAD COVERS". Below this, in smaller text, it says "Complete Setup Guide" and "Quick Installation Manual". In the center, there is a graphic of two overlapping circles, one with a dotted pattern and one with a solid pattern. At the bottom, the Logitech logo is visible.	<p>logitech ZONE WIRELESS Plus Replaceable Earpad Covers [pdf] Installation Guide Zone, Wireless, Plus, Replaceable, Earpad, Covers, logitech</p>
--	---