



# LONPOO LP-42x-US Powered Bookshelf Speaker User Manual

[Home](#) » [LONPOO](#) » LONPOO LP-42x-US Powered Bookshelf Speaker User Manual 

 
# LONPOO

LP-42x-US Powered Bookshelf Speaker  
User Manual

## Contents

- [1 LP-42x-US Powered Bookshelf Speaker](#)
- [2 Acseries](#)
- [3 Controls and Inputs/Outputs](#)
- [4 Specification](#)
- [5 LONPOO WARRANTY CARD](#)
- [6 Documents / Resources](#)
  - [6.1 References](#)

**LP-42x-US Powered Bookshelf Speaker**

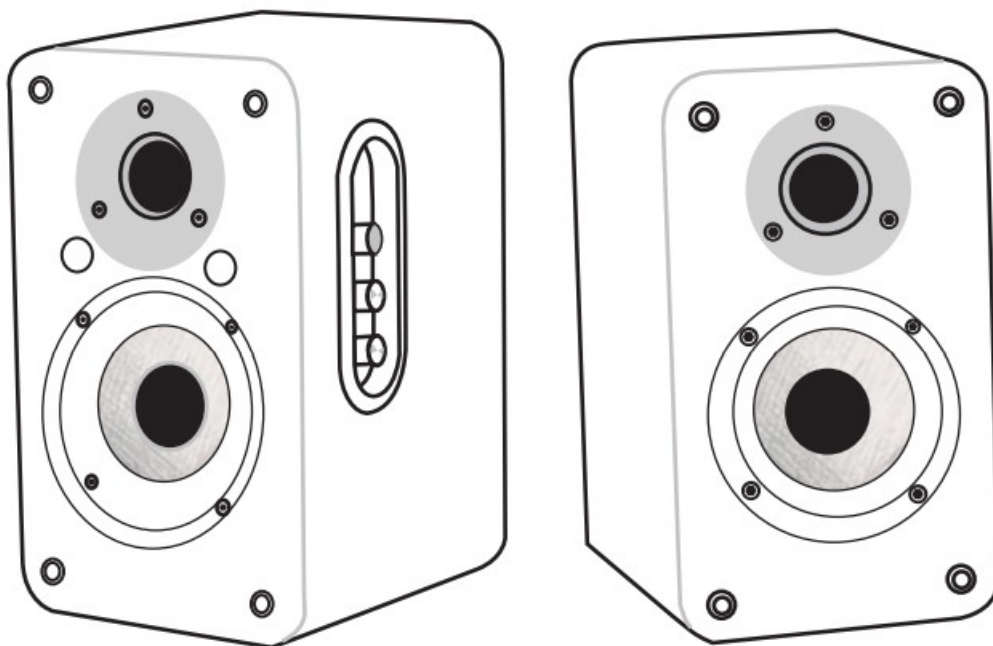

To assure the product to work in best status

Please read the user's manual carefully before operation and keep it well for future use

#### **Welcome**

Congratulations on your purchase of a high-quality product.

Your Active Bookshelf Speaker is designed for reliable and trouble free performance, we wish you great satisfaction in using it.

#### **Safety information**

To prevent fire or shock hazard, do not plug the power cord into an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure. To prevent fire or shock hazard, do not expose this Active Bookshelf Speaker to rain or moisture.

Caution



#### **Risk of Electric Shock do not Open**

**CAUTION:** To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol within a triangle is intended to alert you to the presence of uninsulated dangerous voltage within your Active Bookshelf Speaker enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



The exclamation point within a triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying your Active Bookshelf Speaker.

**WARNING:** To reduce the risk of fire or electric shock, do not expose your Active Bookshelf Speaker to rain or moisture.

**WARNING:** Any use of the controls or an adjustment to the procedures other than those specified herein may result in hazardous radiation.

**CAUTION:** Your Active Bookshelf Speaker should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on it.

#### **Read instructions**

Read all of the safety and operating instructions before you use your Active Bookshelf Speaker.

#### **Retain instructions**

Retain the safety and operating instructions for future reference.

#### **Follow warnings and instructions**

Follow all warnings on your Active Bookshelf Speaker and in the operating instructions. Follow all operating and use instructions.

#### **Placement**

When placing your Active Bookshelf Speaker on a acquired or natural finish, protect your furniture with a cloth or

other protective material.

Avoid exposure to direct sunlight, temperature extremes, and moisture.

### **Ventilation**

Slots and openings in the cabinet and the back or bottom are provided for ventilation, reliable operation, and protection from overheating. These openings must not be blocked or covered. Do not block the openings by placing your Active Bookshelf Speaker on a bed, sofa, rug, or other similar surface.

### **Water and moisture**

Do not use your Active Bookshelf Speaker near water. For example, do not use it near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

Do not let water splash or drip onto your Active Bookshelf Speaker. Do not place objects containing liquids, such as a vase, on top of your Active Bookshelf Speaker.

### **Disconnecting power**

Unplug this apparatus during lightning storms or when unused for long periods of time.

The rating label of the Active Bookshelf Speaker is located on the back.

## **Accessories**



 
Remote Control




optical cable



Power Cord

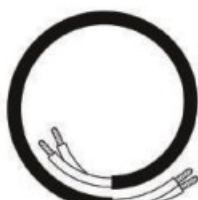


Speaker Cable

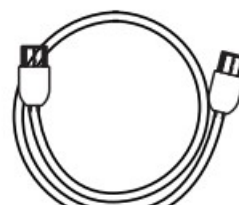 



HDMI Cable

## **Connections**

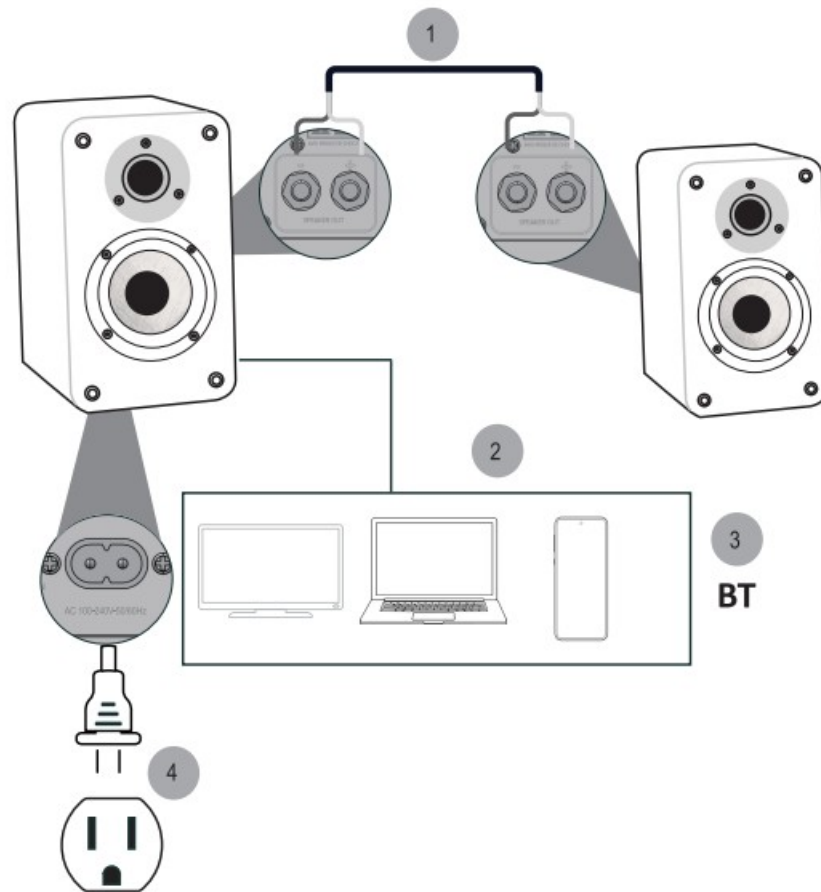 

1. Connect speakers with each other with supplied cable
2. Connect source – TV, Computer, Cell Phone, etc
3. Connect Source – Bluetooth
4. Connect AC mains

## Controls and Inputs/Outputs

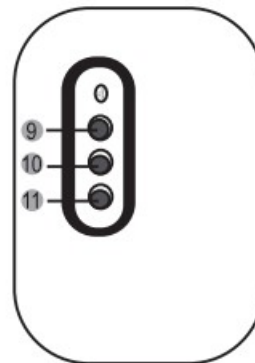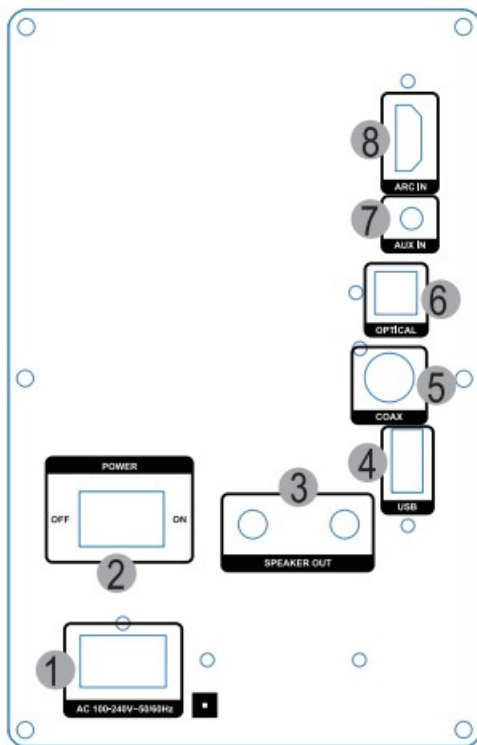  

1. AC in
2. Power ON/OFF
3. Speaker Output
4. USB Input
5. Coaxial Input
6. Optical Input
7. AUX input
8. HDMI (ARC) input
9. Volume+/-/MODE
10. Treble+/-
11. Bass+/-


### Note

 - The Volume knob can be used to adjust volume and change modes. Rotate: Rotating the knob to increase or decrease volume Press: Pressing the knob to change modes (Bluetooth/Optical 1/Coaxial 1/HDMI 1/USB/ AUX)


### Note

- Different LED colour correspond different modes [Red-Standby] [Blue-Bluetooth] [Green-Optical] [White-Coaxial/HDMI /USB/AUX]
- When the LED light is white, you only need to connect the Coaxial cable or HDMI cable or USB or AUX cable directly to play the audio source in the device, and the speaker will automatically switch modes among Coaxial/HDMI/USB/AUX

### Connection-Speaker Output

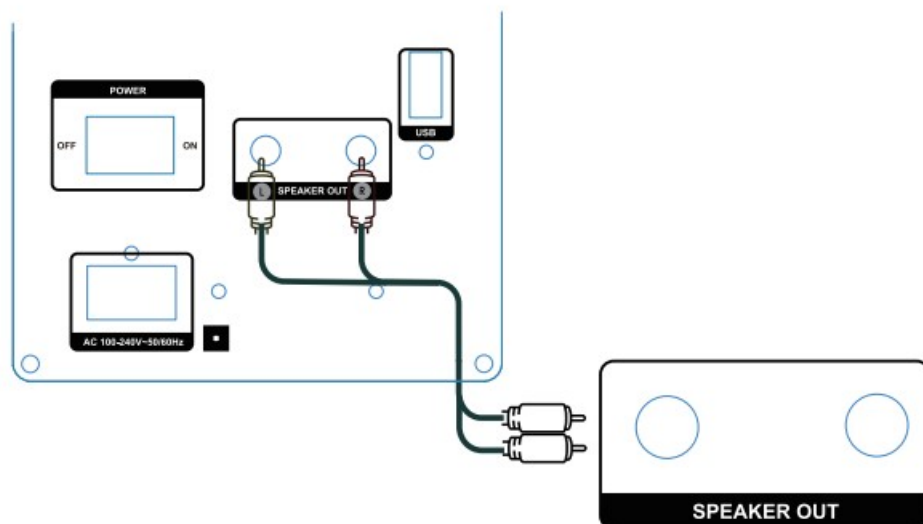

 
**Note:** The speaker cable is included, you can use it to connect to our speaker or other passive speaker

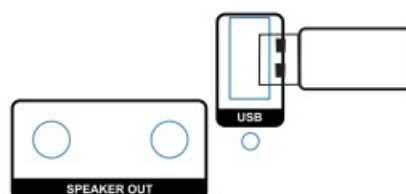

## USB Note

- The USB storage is up to 64GB, supported audio formats are MP3 and WMA
- Insert USB drive directly to play songs, no need to press “Mode” button
 
## Connection-Coaxial Input/Optical Input/HDMI (ARC) Input

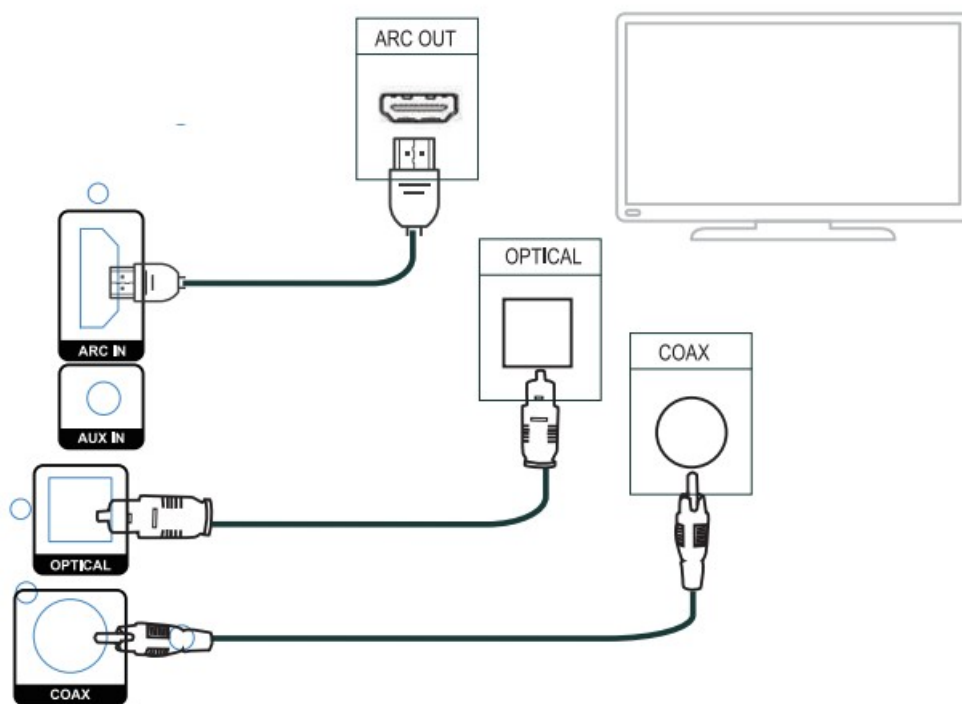

## Note

- The jacks on your TV or other devices need to be output

- To use HDMI mode, only need to connect the HDMI cable to start, no need to press “Mode” button
- To use Coaxial/Optical mode, please press “Mode” button to turn the indicator to white color first

### Note

If there is no sound after connecting, e.g optical, please set up your TV

1. Enter to TV's setting menu
2. Select the “Sound” or “Audio” option
3. Select “S.PDIF” option

 
Most TVs have HDMI{ARC} out and S.PDIF options.

- If connect HDMI, please choose HDMI(ARC) out
- If connect optical or coaxial, please choose S.PDIF
- Different devices may have different setting options


### Connection-AUX Input

#### Note

- Connect AUX cable to play songs in your device directly, no need to press “Mode” button
- The AUX cable is not included

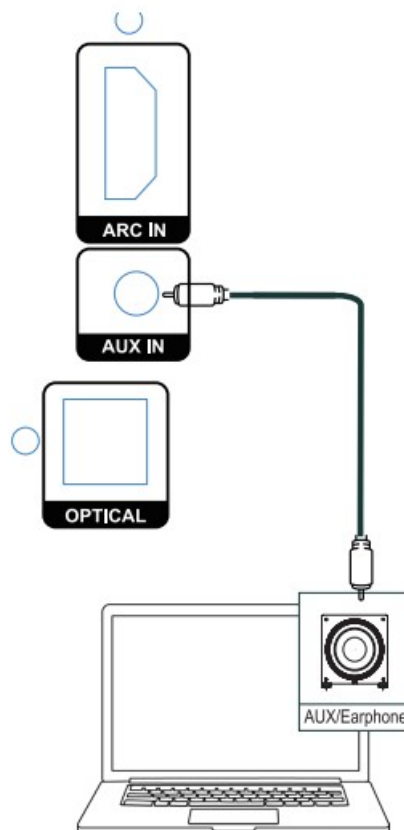


### Connection-Bluetooth

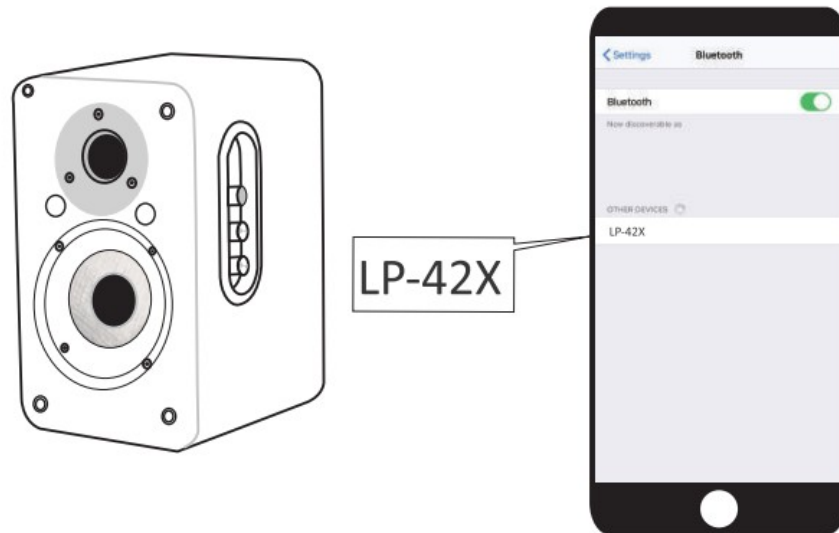 

## Note

- when the LED is blue, you can connect your device via bluetooth, find “LP-42X” in your phone and connect it.
- Bluetooth headphone is not supported
 
## Remote Control

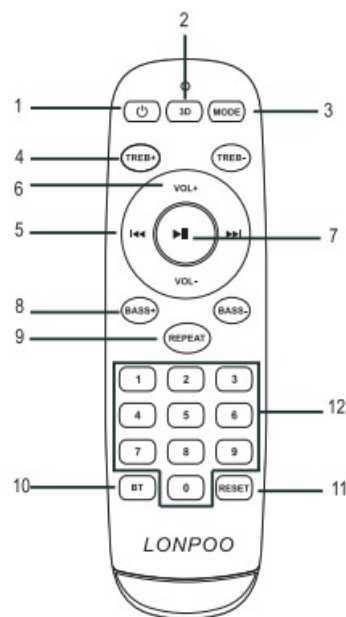

1. Power ON/OFF
2. 3D effect
3. MODES
4. Treble+/-
5. Previous/Next Works in bluetooth/USB mode
6. Volume+/-
7. Play/Pause/Mute In bluetooth/USB mode: play/pause In other modes: mute
8. Bass+/-
9. Repeat

Only in USB mode: one/random/ all repeatedly Long press to resume normal playback



## 10. Bluetooth mode

## 11. Reset

In bluetooth mode, press “reset” to disconnect the current device and you can connect the second device to speakers via bluetooth.

If the second device fails to pair, long press “reset” button to connect the previous device directly

## 12. Numbers

In USB mode to choose the song track, to choose the 12nd track, press 1 “72

## Specification

### 1. USB

- Specifications: USB2.0
- File system: FAT, exFAT
- Supported file formats: 32-320Kbps (MP3) 40-320Kbps (WMA)
- Compatible: Windows Media Audio, Windows Media Audio (variable bit rate)
- Not Supported: Windows Media Audio Pro ,Windows Media Audio Lossless

### 2. Bluetooth

- System: Ver. 5.0+EDR
- Transmission power: Power Class 2
- Maximum range: about 10m
- Frequency band: 2.4 GHz band
- Supported Profiles: A2DP, AVCTP, AVDTP, AVRCP, HFP, SPP
- Supported codec: MP3.SBC
- Supported content protection: SCMS-T

### 3. Speaker

- Woofer: 2×4”
- Treble: 2×1”
- Output: 100W {2x50W}

### 4. Common part

- Power supply: AC100-240V, 50/60Hz
- Power consumption: 100W
- Output: 100W RMS
- Frequency Response: 40Hz~20KHz
- Impedance: 40
- S/N: 80dB

\*Specifications and appearance are subject to change without notice for improvement.

## LONPOO WARRANTY CARD

### 12 Months Warranty

Thank you for choosing LONPOO.

LONPOO warrants your new product to be free from defects in materials and workmanship for a period of twelve (12) months, from the date of receiving. This warranty is in addition to your rights under Amazon's return and refund policies which apply to your purchase.

LONPOO will provide you with your choice of a full refund or exchange (where possible) for this product if it becomes defective within the warranty period. LONPOO will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse, or neglect.


Please contact our Customer Service with your order ID and description of the problem, for warranty claim or any difficulties with your product:

Email: [service@lonpoo.com](mailto:service@lonpoo.com)

Amazon Buyer-Seller LONPOO: Go to Your Orders then find your order in the list, click LONPOO link below the product title, click the Ask a Question button. Phone:0086-13825278958

**Always there to support you**  
Get support at:  
[www.lonpoo.com](http://www.lonpoo.com)  
Question?  
Contact Lonpoo : [service@lonpoo.com](mailto:service@lonpoo.com)

**Documents / Resources**

	<p><a href="#">LONPOO LP-42x-US Powered Bookshelf Speaker</a> [pdf] User Manual</p> <p>LP-42x-US Powered Bookshelf Speaker, LP-42x-US, Powered Bookshelf Speaker, Bookshelf Speaker, Speaker</p>
--	--

**References**

- [User Manual](#)