



LONPOO LP-D01 Stereo Portable Top-Loading CD Player Boombox Bluetooth FM Radio Instruction Manual

[Home](#) » [LONPOO](#) » LONPOO LP-D01 Stereo Portable Top-Loading CD Player Boombox Bluetooth FM Radio Instruction Manual 

LONPOO LP-D01 Stereo Portable Top-Loading CD Player Boombox Bluetooth FM Radio Instruction Manual

Contents

- [1 Warnings and Precautions](#)
- [2 Features](#)
- [3 In the Box](#)
- [4 Powering the Unit](#)
- [5 Tuning the FM Radio](#)
- [6 Playing a CD](#)
- [7 Using the Auxiliary Input](#)
- [8 Locations of Controls](#)
- [9 Control Definitions](#)
- [10 FCC Statement](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

Warnings and Precautions



This symbol, located on the back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the Product’s enclosure that may constitute a risk of electric shock to persons.



This symbol, located on the back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is opened and the CD player's lid is damaged. Invisible laser radiation is present when the CD player is open and the system's interlock has failed or has been damaged. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to damage or bypass the safety switches.

CAUTION: TO PREVENT ELECTRIC SHOCK, ENSURE TO INSERT 2 PIN PLUG CORRECTLY INTO THE MATCHING SOCKET OR ADAPTOR.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING: To prevent fire or shock hazards, do not expose this unit to rain or moisture.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Do not mix old and new batteries.

DO not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

Features

- CD player: CD, CD-R/RW
- FM radio
- Auxiliary input
- Programmable CD tracks
- 4-digit blue LCD
- Built-in speakers
- AC power: detachable AC cord
- DC power: requires 4 C batteries, not included

 
In the Box

- Detachable AC Cord
- Documentation

Powering the Unit


AC Power

Plug the detachable AC cord into a standard AC outlet (100-240V~ 50/60Hz)

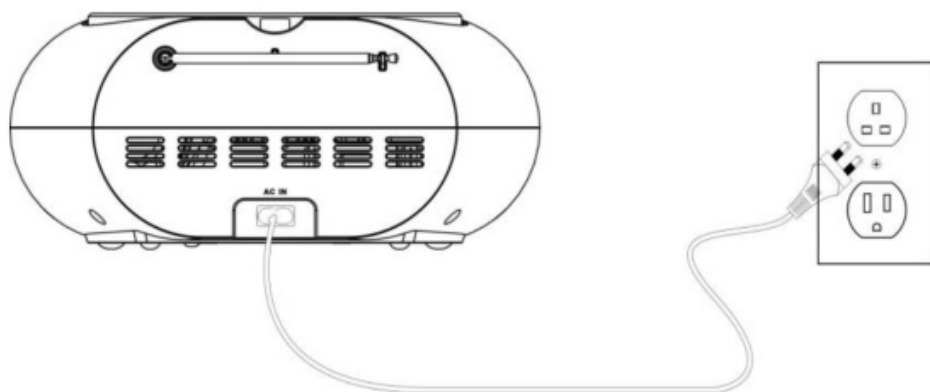

Battery Power

 Requires 4 C batteries, not included.

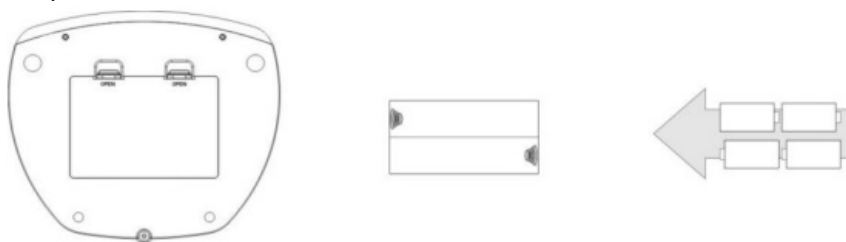

Tuning the FM Radio

- **Step 1:** Adjust the **Function Button** to FM mode.
 - Extend the FM antenna to improve FM radio reception.
- **Step 2:** Short press **PREV** or **NEXT** to jump to the previous or next available station.

Playing a CD


- **Step 1:** Open the CD door, and place a CD or CD-R/RW INTO THE PLAYER.
- **Step 2:** Adjust the **Function** to CD mode.
- **Step 3:** Press the **Play/Pause Button** to begin playing the loaded CD.

Using the Auxiliary Input

Audio Source	Required Connector
MP3 Player	mini-phone 3.5mm Cable (not included)

- **Step 1:** Connect a mini-phone 3.5mm Cable (not included) to the **Auxiliary Input** on the unit and the audio output on an MP3 player.
- **Step 2:** Adjust the Function to AUX IN mode.
 - Audio played through the connected MP3 player will now be heard through the unit.

 Locations of Controls

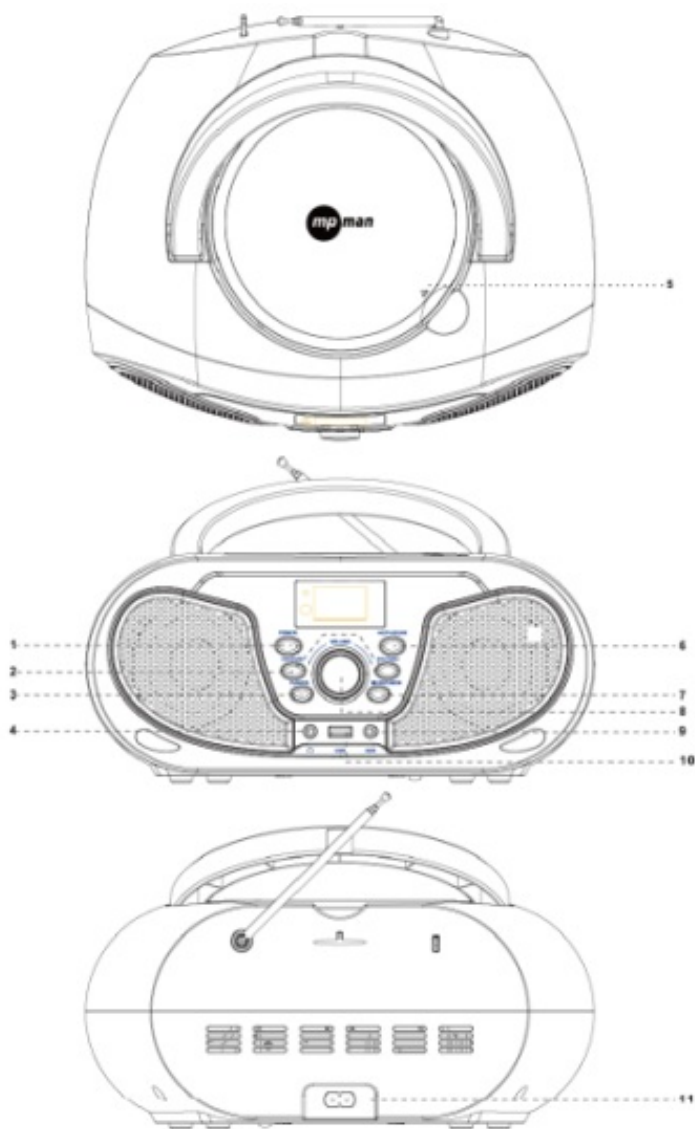

Control Definitions

1. POWER

In standby mode, press to turn the unit on. Press again to turn the unit off.

2. PREV/TUN-/NEXT/TUN+

- **Radio mode:** Press once to go to the next or previous station; press for a few seconds to scan the stations.
Press once to switch between the sound sources:Radio/CD/USB/AUX.
Press and hold to switch between the EQ
- **functions:** ROCK/POP/FLAT/CLASS/JAZZ.
- **CD/USB mode:** Press once to go to the next or previous song; press for a few seconds to fast forward or rewind.
- **BT mode:** press the up or down once short dance music
- **AUX mode:** This button doesn't work in this mode.

3. FUN/EQ

Press once to switch between the sound sources:Radio/CD/USB/AUX/BT.

Press and hold to switch between the EQ
functions:ROCK/POP/FLAT/CLASS/JAZZ.

4. **PHONES**

5. **OPEN/CLOSE**

6. **PLAY/PAUSE/P+/SCAN**

Press the Play/Pause Button to play or pause a loaded CD.

In Radio mode, press once to select a station; press for a few seconds to auto search.

7. **STOP/REP/MEM**

In USB/CD mode: Press for a few seconds to stop play. Press once to repeat play.

In FM mode: Press to store a station. The unit can save up to 20 channels.

In the AUX/BT mode: This button doesn't work.

8. **VOL+/VOL**

Turn the knob to increase or decrease the volume.

9. **AUX**

Use the Auxiliary input to connect an external audio source (MP3 player) to the unit.

10. **USB**

Press the Mode key on the unit or remote control to select USB mode and plug in an USB.

11. **AC Power Input**

Use the AC Power input to connect the unit to an AC power source.

BT:Use the mode button on the unit to change the mode to BT mode.

Access your devices Bluetooth settings and pair your device to the unit. When the correct mode has been selected,you can then use the backward, Play/pause and forward controls on the unit for music playback.

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This equipment has been tested and found to comply with the limits for a class B digital device,pursuant to part 15 of the FCC Rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses,and can radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications. However,there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-position or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different form that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Documents / Resources

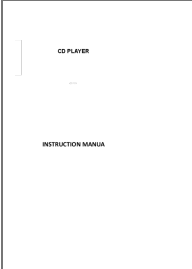	<p>LONPOO LP-D01 Stereo Portable Top-Loading CD Player Boombox Bluetooth FM Radio [pdf] Instruction Manual</p> <p>LP-D01, LPD01, 2A5A6-LP-D01, 2A5A6LPD01, LP-D01 Stereo Portable Top-Loading CD Playe r Boombox Bluetooth FM Radio, Stereo Portable Top-Loading CD Player Boombox Bluetooth F M Radio</p>
--	--