

Lorelli BIANCA Folding Stroller Owner's Manual

Home » lorelli » Lorelli BIANCA Folding Stroller Owner's Manual

Contents

- 1 Lorelli BIANCA Folding Stroller
- **2 SAFETY REQUIREMENT**
- **3 PARTS**
- **4 ASSEMBLING THE STROLLER**
- **5 OPERATING THE STROLLER**
- **6 FOLDING THE STROLLER**
- **7 CAR SEAT INSTALLATION**
- **8 CARE AND MAINTENANCE**
- 9 Documents / Resources
 - 9.1 References



Lorelli BIANCA Folding Stroller



Scan the QR code to get more product information and manual instruction in more languages. Download the QR Scanner App onto your device.



IMPORTANT – READ CAREFULLY AND KEEP FOR FUTURE REFERENCE!

SAFETY REQUIREMENT

- 1. This vehicle is suitable for children with a weight up to 22 kg or 4 years whichever comes first!
- 2. The height of the carried child in the stroller should not exceed 104 cm!
- 3. Use a parking device if you do not hold the stroller in hand!
- 4. Do not leave the stroller on hills or inclined surfaces even if you have activated the parking system!
- 5. Parking devicess shall be engaged when placing and removing the children!
- 6. The shopping basket can take a maximum load of 2 kg!
- 7. Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect

the stability of the vehicle! Maximum load of the accessory bag 1 kg. Do not hang any additional bags!


- 8. Regularly check for loose parts! Make routine inspections, regularly maintain, cl, and/or wash the vehicle!
- 9. The vehicle shall be used only for 1 child!
- 10. Access that is not approved by the manufacturer shall not be used!
- 11. Only spare parts delivered or recommended by the manufacturer/ distributor can be used!
- 12. Make sure that the safety belts are placed properly!
- 13. The stroller should always be used under the supervision of an adult!
- 14. Do not allow children to suspend him/herself or play in the stroller!
- 15. Do not allow children to stand in the stroller!
- 16. Do not allow your child to stand on the seat footrestrest!
- 17. Do not use the stroller on uneven surfaces near fire or other dangerous places!
- 18. Do not use the stroller on stairs and escalators!
- 19. Fold the stroller before going upstairs and downstairs. Mounting the stroller on stairs, pavements, and others with the child in it and pushing the handle causes deformation of the stroller and is out of warranty repair!
- 20. Adjusting the backrest must be made only by a person who ead carefully the instruction rules for adjusting!
- 21. Any additional baggage left in the stroller may cause it to become unstable!
- 22. The person who assembles the stroller must be familiar with its functions!
- 23. The front bar can not be used as a carry handle!
- 24. The car seat Aria Luxe is compatible with a stroller "BIANCA" using adaptors included in the set!
- 25. The chassis of this vehicle is compatible with a carrycot "BIANCA"

WARNING

- 1. WARNING! Never leave the child unattended!
- 2. WARNING! Ensure that all the locking devices are engaged before use!
- 3. WARNING! To avoid injury ensure that the child is kept away when unfolding and folding this product!
- 4. WARNING! Do not let the child play with this product!
- 5. WARNING! Always use the restraint system!
- 6. WARNING! Check that the pram body seat unit or car seat attachment devices are correctly engaged before use!
- 7. WARNING! This product is not suitable for running or skating!
- 8. WARNING! No additional mattress/cushionn shall be added.
- 9. WARNING! Always use the crotch belt in combination with the waist belt! To prevent injury from a fall or a slip always use the shoulder straps!
- 10. WARNING! Keep away from fire!
- 11. WARNING! The carrycot is intended for a child who cannot sit up unassisted, turn over, or get up on their hands and knees. Child maximum weight: 9 kg.
- 12. WARNING! When using the car seat: This car seat is not meant to replace a cot or a bed for sleeping. If your child needs to sleep, you need to place them in a suitable carrycot, c,to, or bed.
- 13. WARNING! The images on the front page and inside the manual are for illustrative purposes and may differ from the actual product.
- 14. WARNING! Before using the product for the first time, remove all advertising material from it as well as the materials used to attach them to the product.


PARTS

Picture 1

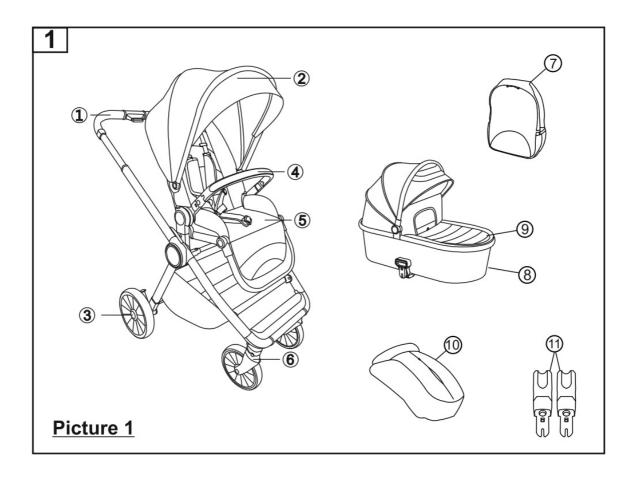


- 1. Stroller chassis
- 2. Canopy
- 3. Rear wheels
- 4. Bumper bar
- 5. Summer seat
- 6. Front wheels
- 7. Accessory bag
- 8. Carrycot
- 9. Carrycot cover
- 10. Seat footmuff
- 11. Car seat adapters


ASSEMBLING THE STROLLER

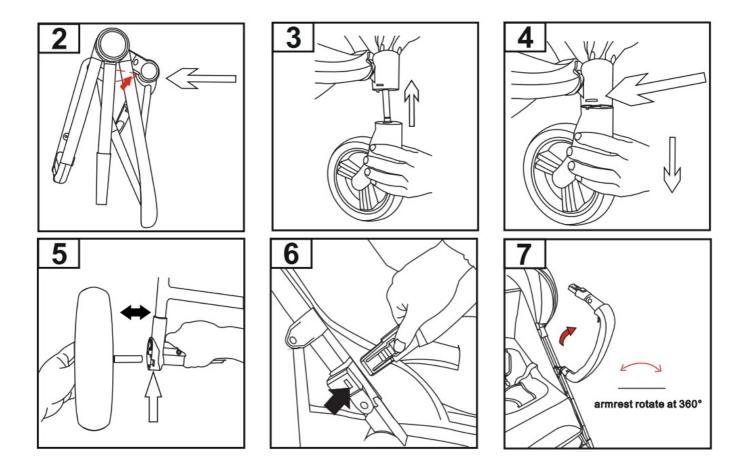


- 1. Take out the stroller from the box.
- 2. Unfold the stroller in the following sequence: Unfasten the locking mechanism of the frame (Picture 2); With one hand hold the frame, with the other lift the hand, and the stroller will unfold and lock in place automatically.
- 3. Install the front wheels by pressing them up until they lock in place. (Picture 3) Ensure that they are securely locked in place. To remove it, press the button on the console and pull the wheel down (Picture 4).
- 4. Place the rear wheels (Picture 5). To remove, pull the button on the rear axle and pull out the wheel (Picture 5).
- 5. Install the seat to the frame of the stroller by centering the adapters on the frame holes. If you hear a click, it means that the seat is fixed in place. To remove, press the buttons on both sides of the seat at the same time and pull upwards. The seat can be installed to face the front or the rear.
- 6. Install the bumper bar. Center the plastic elements on the bumper bar and insert them into the two holes in the seat until they lock in place (Picture 6). To remove the bumper bar, press the buttons on both sides and pull or twist (Picture 7).


OPERATING THE STROLLER

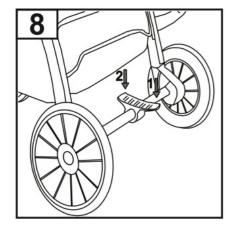


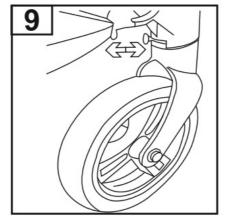



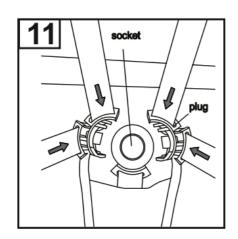


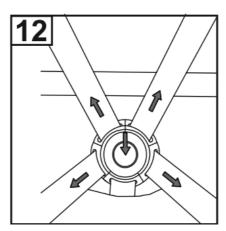


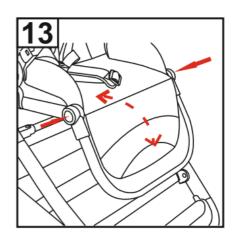

- 1. To lock the stroller in place, use the brakes on the rear wheels by pressing down the brake pedal, located on the rear axle. To release the brake, push the pedal up with your foot (Picture 8). Attention! The brake does not guarantee optimal power when on steep inclines! Never leave the stroller on an inclined surface with a child sitting or lying in the stroller! WARNING! The brake on your stroller is a type of parking device. To activate the brake, bear in mind that the stroller must be stationary. Carefully press he brake pedal, while gently pushing the stroller front and back to synchronize the braking device and for more secure activation of the mechanism.
- 2. When the stroller is moving on rough and uneven surfaces, you can use the straight-line moving option by pressing the button on the front console to the side to lock the front wheels (Picture 9). To release them, press the button in the opposite direction.
- 3. You can place the child in the stroller after unlocking just one side of the bumper bar and twisting it down. (Picture 7). Place the child in the stroller and fix the bar in place again.
- 4. To adjust the canopy, grab its upper part and pull it down to the desired position (Picture 10).
- 5. When using the seat, it is MANDATORY to put the child's safety harness on!
- 6. Attach the shoulder and abdominal straps and place them in the central locking buckle (Picture 11). Adjust the length of the harness straps by pulling from the buckles. To release the harness, press the central buckle button (Picture 12).
- 7. Adjusting the footrest To change the position of the footrest, press the buttons on both sides simultaneously and adjust it to the desired position (Picture 13). ATTENTION! Failure to observe this instruction will damage the locking mechanisms and will not be subject to warranty!
- 8. To adjust the backrest, pull up the handle for unlocking the mechanism located on the back and place it in the desired position (Picture 14). To straighten the backrest, push the back up ATTENTION! If you try to adjust the backrest without unlocking the mechanism and apply excessive force, the unlocking mechanism may become deformed, which is not subject to warranty!
- 9. If you want, attach the footmuff to the summer seat by tucking it under the footrest and its upper part under the bumper bar, then fasten it.
- 10. Adjusting the height of the stroller handle press and hold the round button on the underside of the handle, while simultaneously pushing the oblong button inward, then you have a choice of four positions (Picture 15).



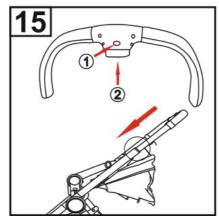


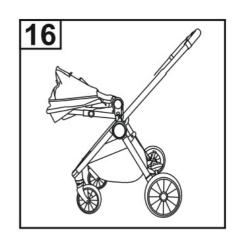



FOLDING THE STROLLER

A: Folding the stroller when the seat is placed in the direction of travel:

- 1. Remove the cover from the seat.
- 2. Apply the stroller's brakes.
- 3. Adjust the stroller handle to the highest position.
- 4. Fold the canopy as much as possible.
- 5. Activate the backrest mechanism and push the back as far forward as possible until it is fully folded (Picture 16).
- 6. Grasp the footrest with one hand while holding the backrest mechanism activated with the other hand. Move the footrest together with the backrest to the side of the handle to the lowest position (Picture 17). Attention: Keep the backrest mechanism activated the entire time while folding.
- 7. Adjust the handle to the lowest position.
- 8. Unlocking the folding mechanism with one hand grasp the frame after the telescopic pipe of the handle and with the other the mechanism as if you are adjusting the handle. After the two buttons on the handle have been activated, sharply press the handle inside the frame with sufficient force until the folding mechanism is fully unlocked.
- 9. After making sure that the folding mechanism is released, push the handle down so that it is fully retracted to the frame and is locked in place (Picture 18).

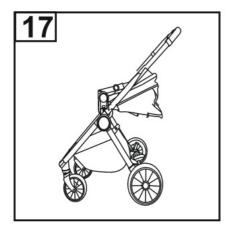

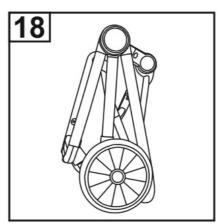

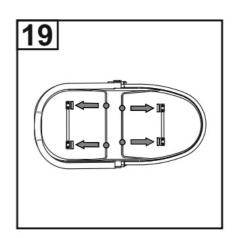

B: Folding the stroller when the seat is placed against the direction of travel:

1. Remove the cover from the seat.

- 2. Apply the stroller's brakes.
- 3. Adjust the stroller handle to the highest position.
- 4. Fold the canopy as much as possible.
- 5. Activate the mechanism of the backrest up and fold it towards the handle of the stroller (to the lowest position Picture 17). Attention: Keep the backrest mechanism activated the entire time while folding it towards the handle.
- 6. Adjust the handle to the lowest position.
- 7. Unlocking the folding mechanism with one hand grasp the frame after the telescopic pipe of the handle and with the other the mechanism as if you are adjusting the handle. After the two buttons on the handle have been activated, sharply press the handle inside the frame with sufficient force until the folding mechanism is fully unlocked.d
- 8. After making sure that the folding mechanism is released, push the handle down so that it is fully retracted to the frame and locked in place (Picture 18).

CARRYCOT

ATTENTION: For the correct preparation of the carrycot for a newborn after removing it from the transport box, perform the following actions:

- 1. Place the cot on a comfortable table and remove the mattress and fabric liner.
- 2. Push the metal fasteners to the outside of the carrycot until it snaps on both sides (Picture 19).
- 3. Fasten the fabric liner and replace the mattress.
- 4. Adjust the position of the baby's head in one of four possible positions by moving the mechanism from the bottom under the carrycot.
- 5. Lift the metal part of the canopy until it clicks. To fold, simultaneously press the two buttons on the outsideofn the base (Picture 20).
- 6. Install the carrycot on the stroller, fixing it in the designated places on the frame (Picture 21). The click means that the carrycot is locked in place. To remove, simultaneously press the buttons on both sides of the carrycot and pull up. The carrycot should only be installed facing the parents. ATTENTION: Always check that the carrycot is securely attached and then locked in place by gently pulling it up and to the side.
- 7. Finally, place the footmuff and fasten it with a zipper and buttons onto the carrycot.








CAR SEAT INSTALLATION

- Installing the car seat insert the adapters (included in the set) into the holders on both sides of the frame, bearing in mind the difference between the left and right sides (Picture 22). A clicking sound means the adapters are locked.
- 2. Place the seat on the frame in the opposite direction of travel and push it until you hear a click (Picture 23). Be sure the seat is properly installed.
- 3. Remove the seat by pressing simultaneously the buttons on both sides and pulling up. Another option to move the seat is together with the adapters by simultaneously pressing the buttons on the adapters and pulling up accordingly (Picture 24).



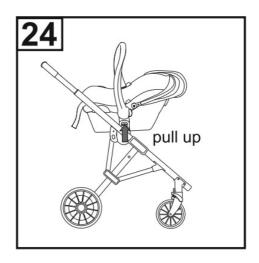

CARE AND MAINTENANCE

- 1. To clean the metal parts, wipe with a damp cloth and dry thoroughly with a dry cloth.
- 2. To clean the plastic parts, use a cloth, water ,and a il d detergent.
- 3. To clean the textile parts, use an upholstery cleaner.
- 4. When the stroller is in storage never place other items on top of it.
- 5. Always dry and air out the stroller if it gets wet!
- 6. Periodically clean the wheel axles and plastic elements.
- 7. Always clean the axles of the wheels and the plastic elements after using the stroller on sand or other dusty surfaces!

DO NOT GREASE the wheel axles or other moving parts of the stroller! Clean them only! Periodically check for loose or damaged parts and if there are any, immediately replace them with new ones!



• Didis Ltd. Bulgaria, Shumen, 6 Trakia-iztok Street

• Phone: +359 54 850 830

• e-mails: home.market@didis-ltd.com

• export@didis-ltd.com

Documents / Resources



<u>Lorelli BIANCA Folding Stroller</u> [pdf] Owner's Manual 10022012507, BIANCA Folding Stroller, BIANCA, Folding Stroller, Stroller

References

- Lorelli Baby and children products with proven quality
- User Manual

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.