



LOREX 4K Motorized Varifocal HD IP Dome Security Camera with Smart Motion Detection and Listen in Audio User Guide

[Home](#) » [Lorex](#) » LOREX 4K Motorized Varifocal HD IP Dome Security Camera with Smart Motion Detection and Listen in Audio User Guide 



4K Motorized Varifocal HD IP Dome
Security Camera with Smart Motion
Detection and Listen-in Audio
Quick Start Guide



LNE9282B SERIES

lorex.com

Contents

- [1 Package Contents](#)
- [2 Dimensions](#)
- [3 Cable Extension Options](#)
- [4 Safety Precautions](#)
- [5 Installation Tips](#)
- [6 Audio Settings](#)
- [7 Important Installation Guidelines](#)
- [8 Disclaimers](#)
- [9 Installing the Camera](#)
- [10 Connecting the Camera](#)
- [11 Setup Diagram](#)
- [12 Adjusting Zoom and Focus](#)
- [13 Troubleshooting](#)
- [14 Using the RJ45 Cable Gland \(Optional\)](#)
- [15 Documents / Resources](#)
- [16 Related Posts](#)

Package Contents


- 4K Motorized Varifocal HD IP Dome Security Camera with Smart Motion Detection and Listen-in Audio
- Mounting Kit*
- Mounting Template*
- CAT5e Ethernet Extension Cable with Pre-attached RJ45 Cable Gland*
- Allen Key*

* Per camera in multi-camera packs.

ATTENTION:

It is recommended to connect the camera to the NVR or an external PoE switch. If using a DC power adapter (not included) with the camera, a **REGULATED** power supply is **REQUIRED** for use with this camera. Use of a non-regulated, non-conforming power supply can damage this product and voids the warranty.

Dimensions

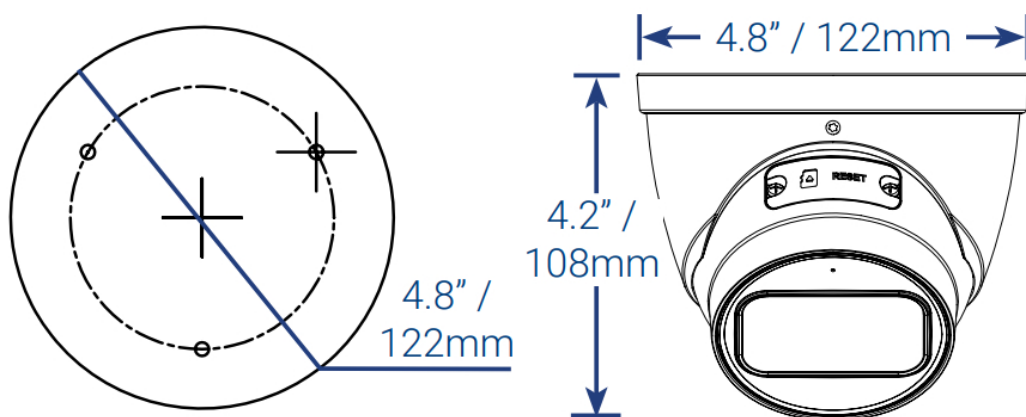

Cable Extension Options

Extend the cable run for your camera. Additional extension cables sold separately. See table below:

| Cable Type | Max Cable Run Distance | Max # of Extensions |
|----------------------------------|------------------------|---------------------|
| CAT5e (or higher) Ethernet cable | 300ft (92m) | 3 |

- You can use an RJ45 coupler or switch (not included) to connect the male End of the Ethernet cable together.
- To extend the cable run beyond 300ft (92m), a switch will be required (sold separately).

Safety Precautions

- Read this guide carefully and keep it for future reference.
- Follow all instructions for safe use of the product and handle with care.
- Use the camera within the given temperature, humidity, and voltage levels noted in the camera's specifications.
- Do not disassemble the camera.
- Do not point the camera directly towards the sun or a source of intense light.
- Use only the supplied regulated power supply provided with the product. The use of a non-regulated, non-conforming power supply can damage the product and void the warranty.
- Periodic cleaning may be required. Use a damp cloth only. Do not use any harsh, chemical-based cleaners.
- The supplied cable is rated for surface mounting only. Cables for in-wall and floor-to-floor installations are sold separately (CMR type). These and other cables are available at lorex.com.

Installation Tips

- Point the camera where there is the least amount of obstructions (i.e., tree branches).
- Install the camera where vandals cannot easily reach.
- Secure cabling so that it is not exposed or easily cut.
- This camera is rated for outdoor use. Installation in a sheltered location is recommended.

Audio Settings

ATTENTION:


Audio recording and listen-in audio are disabled by default. Audio recording and/or use of listen-in audio without consent is illegal in certain jurisdictions. Lorex Corporation assumes no liability for use of its products that does not conform with local laws.

To enable audio recording and listen-in audio:

1. From Live View, right-click and click Main Menu. Enter the system user name (default: admin) and password.
2. Click Camera and select Recording.
3. Under Channel, select the channel where the audio-capable camera is connected.
4. Under Main Stream, click the More Setting button.
5. In the More Setting window: A. Enable Audio Encode for audio recording and listen-in audio.

NOTE: Listen-in audio requires a monitor with speakers or speakers connected to the NVR. B. Select the format that will be used to record audio. ACC is recommended.

6. Click OK to save changes.

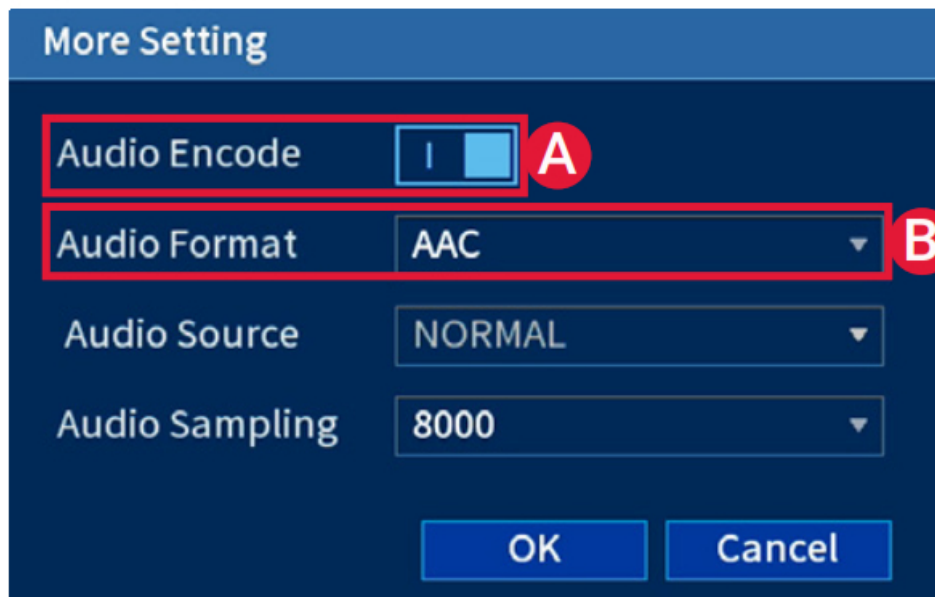

NOTE: These instructions are based on the current NVR interface. For the most up-to-date instructions, see your NVR's instruction manual on lorex.com.

Important Installation Guidelines

Optimizing Person and Vehicle Detection Accuracy:


- Angle the camera so that objects of interest appear in the bottom $\frac{2}{3}$ of the camera image.
- Choose a location where objects of interest will be no further than 50ft (~15m) from the camera.



Lower accuracy for objects further away than 50ft (~15m) and/or in the top $\frac{1}{3}$ of the image.

Optimal accuracy for objects within 50ft (~15m) and in the bottom $\frac{2}{3}$ of the image.

- Angle the camera between 30~60° down from the level position.
- Install the camera between 8-16ft (2.5-5m) off of the ground.

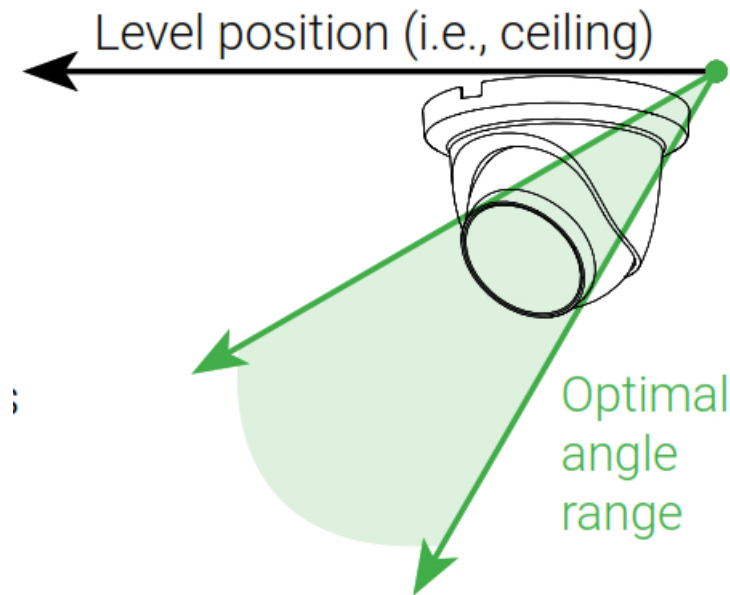

NOTE: Accuracy of person and vehicle detection will be influenced by multiple factors, such as the object's distance from the camera, the size of the object, and the height and angle of the camera. Night vision will also impact the accuracy of detection.

Additional Installation Tips:

- Point the camera where there is the least amount of obstructions (e.g., tree branches).
- Install the camera where vandals cannot easily reach.
- Secure cabling so that it is not exposed or easily cut.
- This camera is rated for outdoor use. Installation in a sheltered location is recommended.

Disclaimers

- For a full list of compatible recorders, visit lorex.com/compatibility.
- Not intended for submersion in water. Installation in a sheltered location is recommended.
- This camera includes an Auto Mechanical IR Cut Filter. When the camera changes between Day/Night viewing modes, an audible clicking noise may be heard from the camera. This clicking is normal and indicates that the camera filter is working.


Installing the Camera

ATTENTION:

Test your camera prior to selecting a permanent mounting location by temporarily connecting the camera and cable to your NVR.

Before Installing the Camera


- Decide whether to run the cables through the wall/ceiling (drilling required) or along with the wall/ceiling.

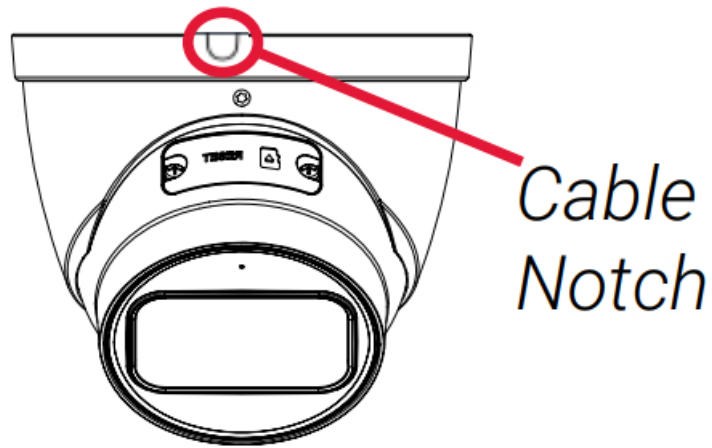

- If you run the cables along with the wall/ceiling, you must run the cable through the cable notch on the base. This will keep the camera base flush to the surface when mounted.


To install your camera:

1.

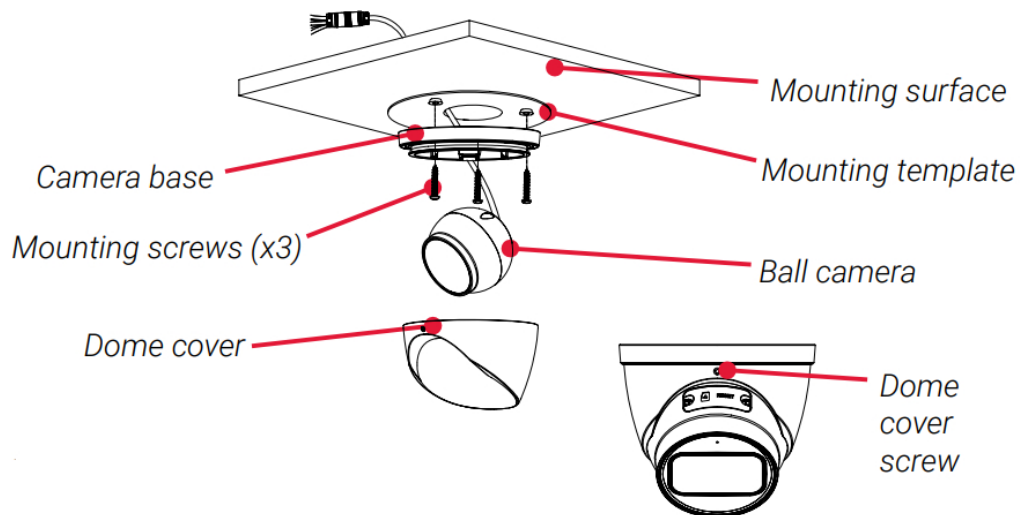


Use the included Allen key to loosen the screw on the dome cover. Do not loosen all the way.

2. Separate the camera base, ball camera, and dome cover.
3. Use the included mounting template to mark holes for the mounting screws and camera cable.
4. Drill holes for the mounting screws and camera cable.
5. Feed the camera cable through the camera base. If you are running the cables against a wall or ceiling, make sure to pass the cable through the cable notch as shown above.
6. Connect the cables as shown in the section 'Connecting the Camera'.
7. Mount the camera base to the mounting surface using the included screws.
8. Place the dome cover over the ball camera.
9. To attach the dome cover to the camera base:

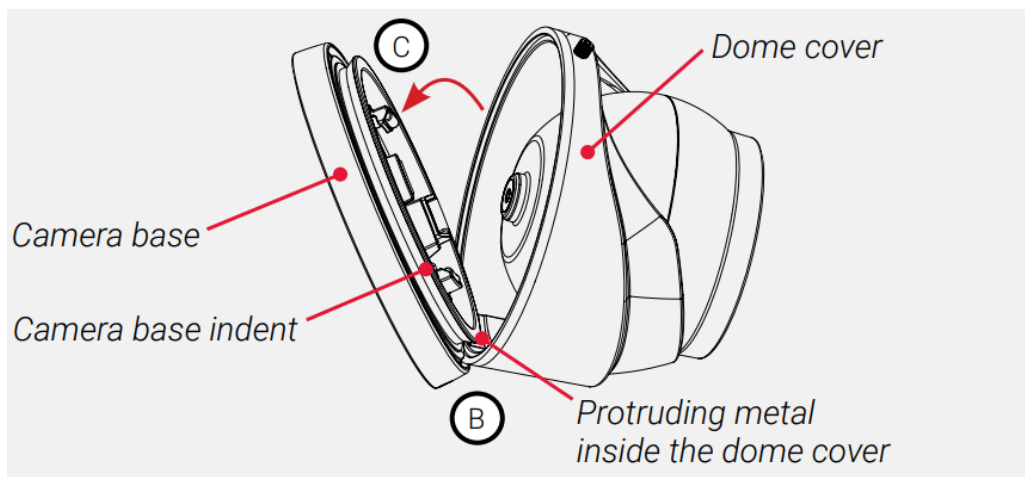


- A.** Angle the dome cover as shown above.
 - B.** Align the protruding metal inside the dome cover with the indent on the camera base.
 - C.** Attach the dome cover onto the camera base. Ensure that the dome cover lays flat against the camera base.
10. Use the included Allen key to tighten the dome cover screw halfway onto the camera base. Do not tighten all the way.
 11. Move the ball camera to the desired position. Tighten the dome cover screw all the way.

Connecting the Camera

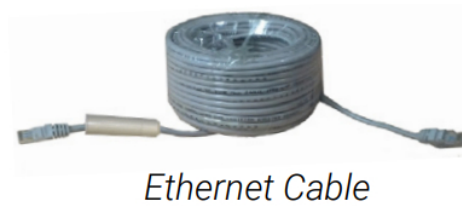

Camera

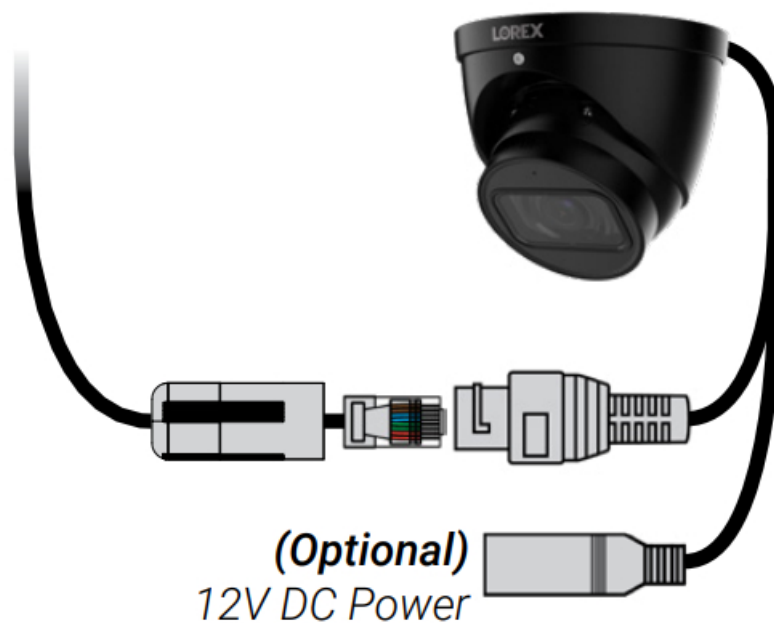

Connect the Ethernet cable to the camera.

NOTES:

- For weatherproofing instructions, see “Using the RJ45 Cable Gland (Optional)”.
- A 12V DC power adapter (model#: CCPWR12V2A, not included) is only required if connecting the camera’s Ethernet cable to a router or switch that does not support PoE.

Connect the other end of the Ethernet cable to the NVR’s PoE ports. The camera may take a minute to power up after being connected.




OR

Connect the other end of the Ethernet cable to a router or switch on your network. See your NVR manual for details on connecting the camera to your NVR using a switch or router.




Setup Diagram

Scenario 1: Connect Cameras to NVR

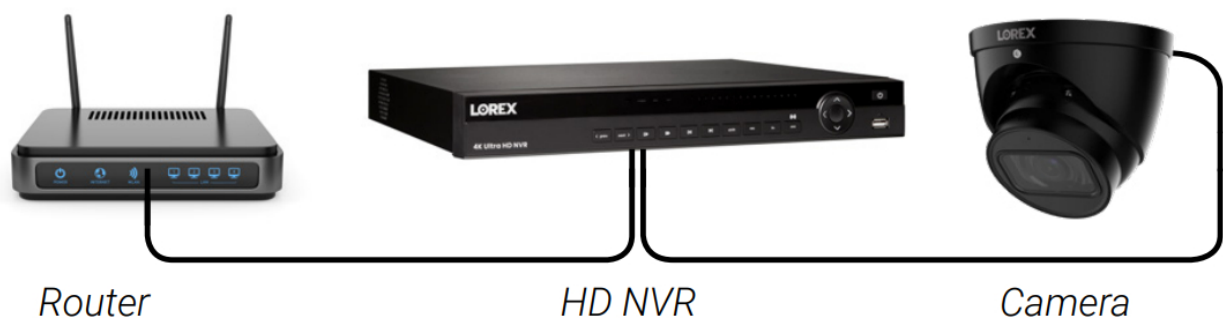

Scenario 2: Connect Cameras to Local Area Network (LAN)

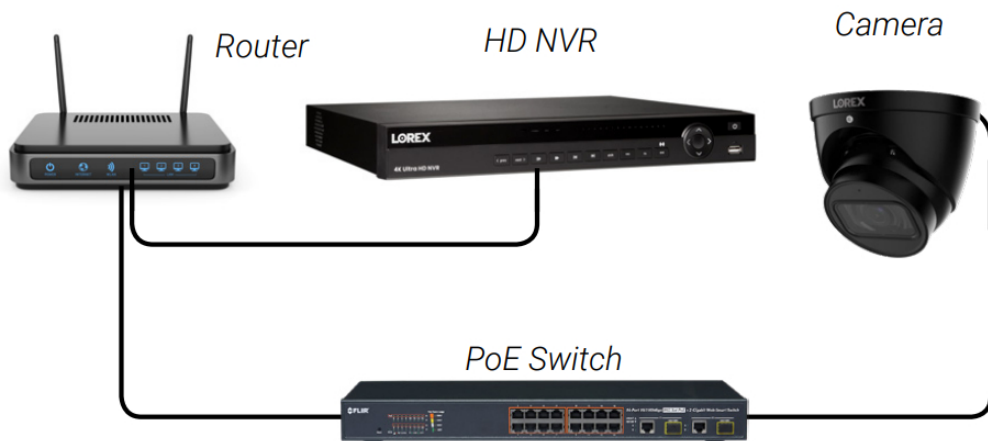


ATTENTION:

This camera is only compatible with select NVRs. For a list of compatible recorders, visit lorex.com/compatibility.

Adjusting Zoom and Focus

Adjust the camera's zoom and focus using a compatible NVR. For more information, see your NVR's instruction manual on lorex.com.

Right-click on the camera's live view and then click AutoFocus. Use the sliders to adjust zoom and focus.

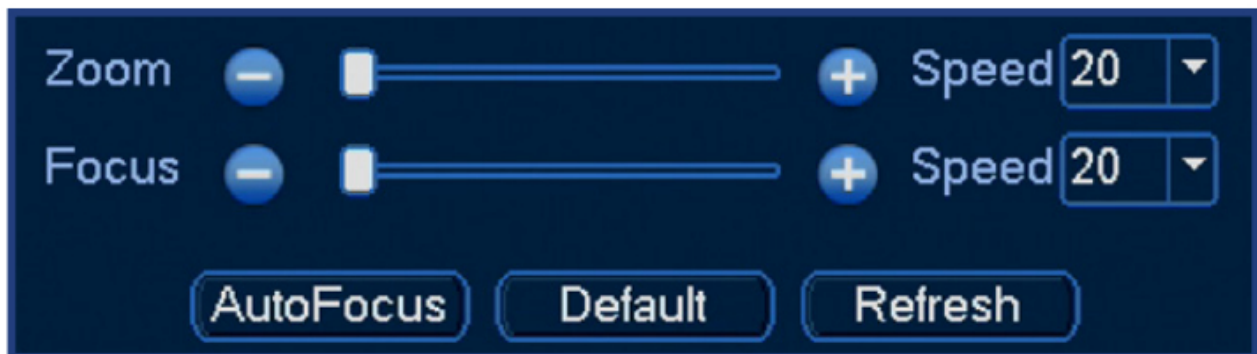

Troubleshooting

| Problem | Solution |
|---------|----------|
| | |

| | |
|---|--|
| No picture / signal | <ul style="list-style-type: none"> • Ensure the camera is connected to a compatible NVR. For full camera compatibility, visit lorex.com/compatibility. • The camera may take up to 1 minute to power up after being connected to the NVR. Wait two minutes before following the steps below. • Ensure the camera is connected to your NVR or to your local network. • If you are not using PoE, you must connect the camera to a 12V DC power adapter (not included). • If the camera is connected to the LAN, you must search your network for cameras using the NVR. See the NVR's instruction manual. • Ensure your NVR is properly connected to a TV/monitor. • There may be an issue with your extension cable run. Connect the camera to the NVR using a different Ethernet cable. |
| The picture is too bright | <ul style="list-style-type: none"> • Ensure your camera isn't pointed directly at a source of light (e.g., sun or spotlight). • Move your camera to a different location. • Check the brightness and contrast settings on the NVR. |
| The picture is too dark | <ul style="list-style-type: none"> • Check the brightness and contrast settings on the NVR. |
| Night vision is not working | <ul style="list-style-type: none"> • The night vision activates when light levels drop. The area may have too much light. |
| The picture is not clear | <ul style="list-style-type: none"> • Check the camera lens for dirt, dust, spiderwebs. Clean the lens with a soft, clean cloth. • Make sure that the cable run is within the limitations specified in the section 'Cable Extension Options'. |
| A bright spot in the video when viewing camera at night | <ul style="list-style-type: none"> • Night vision reflects when pointing a camera through a window. Move the camera to a different location. |
| The picture is in color in dark conditions | <ul style="list-style-type: none"> • This camera comes with an image sensor that is extra sensitive to light, meaning that the camera stays in color mode at low-light conditions. For instructions on how to make your camera switch to night mode, visit lorex.com, and search for "How do I make my camera switch to night mode?" |

| | |
|----------|--|
| No audio | <ul style="list-style-type: none"> • Audio is only supported on Lorex HD NVRs. For a list of compatible recorders, visit lorex.com/compatibility. • Ensure NVR volume is turned on / turned up. • Ensure the audio function on the camera is turned on (see 'Disabling Camera Audio'). • Ensure audio is turned up on the viewing device. |
|----------|--|

The RJ45 cable gland covers the camera's Ethernet connector and the RJ45 plug to provide weather resistance and protection from dust, dirt, and other environmental contaminants.


Using the RJ45 Cable Gland (Optional)

The RJ45 cable gland is pre-attached to the included CAT5e ethernet extension cable.



To use the RJ45 cable gland:


Twist the RJ45 cable gland barrel securely onto the camera Ethernet connector.

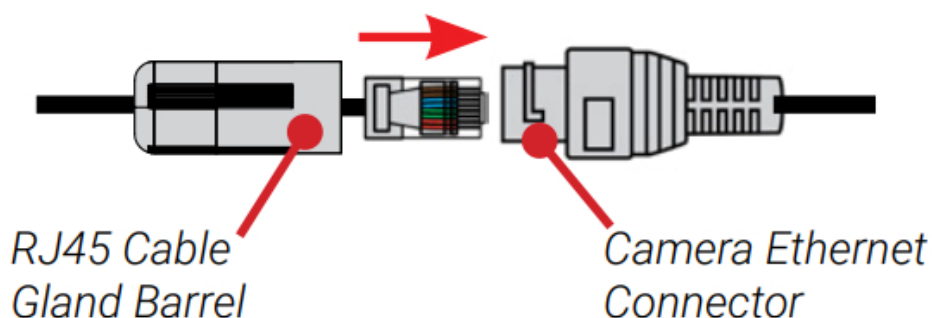

NOTE: The RJ45 cable gland is weather-resistant. Seal the cap with silicone and/or electrical tape for additional sealing if it will be exposed to precipitation regularly.

Copyright © 2020 Lorex Corporation As our products are subject to continuous improvement, Lorex reserves the right to modify product design, specifications, and prices, without notice and without incurring any obligation. E&OE. All rights reserved.

Documents / Resources

| | |
|---|---|
|  | <p>LOREX 4K Motorized Varifocal HD IP Dome Security Camera with Smart Motion Detection and Listen in Audio [pdf] User Guide</p> <p>4K Motorized Varifocal HD IP Dome Security Camera with Smart Motion Detection and Listen i n Audio</p> |
|---|---|

[Manuals+](#).