Manuals+ — User Manuals Simplified.

LOREX ACCHM2 Series Wi-Fi Chimebox User Manual

December 27,

2022

Home » Lorex » LOREX ACCHM2 Series Wi-Fi Chimebox User Manual

LOREX LOGO

ACCHM2 Series

Wi-Fi Chimebox

User Manual

Contents [hide]

- 1 ACCHM2 Series Wi-Fi Chimebox
- 2 Overview
- 3 Setup
- 4 Documents / Resources
 - 4.1 References
- 5 Related Posts

ACCHM2 Series Wi-Fi Chimebox

LOREX ACCHM2 Series Wi Fi Chimebox - FIGURE 1

Overview

LOREX ACCHM2 Series Wi Fi Chimebox - FIGURE 2

- 1. QR Code
- 2. Release Tab
- 3. Power plug
- 4. Slot

- 5. Reset Button*
- 6. Status Indicator

Status Indicator

Device Ready
Ready for network connection
Device malfunction*
Network connection failed*
Firmware update in progress

^{*}Try resetting the device by holding down the reset button.



- Ensure you are on a 2.4 GHz Wi-Fi connection.
- Ensure your 2K Wired/Battery Doorbell and Wi-Fi Chime have the latest firmware version in the device settings.

Setup


1. Download Lorex Home app.





https://app.lorex.com/home/download

2. Attach the plug, and then plug your Chime into an outlet.

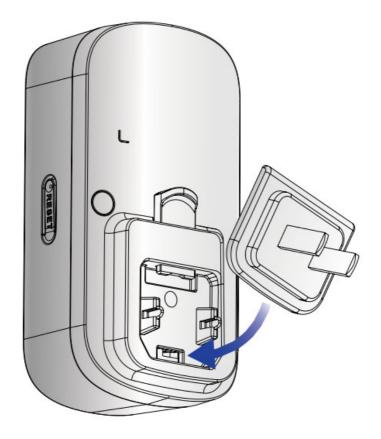

Note

To remove the power plug, lift up on the release tab.

3. Tap in the app, and then follow the in-app instructions to add the Chime.

Need help?

Scan the below QR code for additional support material.



https://help.lorextechnology.com/series/acchm2

Register your product

Please see our full Terms of Service and Limited Hardware Warranty Policy at: lorex.com/pages/warranty

Copyright © 2022 Lorex Technology Inc

As our products are subject to continuous improvement, Lorex reserves the right to modify product design, specifications and prices, without notice and without incurring any obligation. E&OE. All rights reserved.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

ACCHM2_QSG_TRILINGUAL_R1

Documents / Resources



LOREX ACCHM2 Series Wi-Fi Chimebox [pdf] User Manual ACCHM2 Series Wi-Fi Chimebox, ACCHM2 Series, Wi-Fi Chimebox, Chimebox

References

- Lorex Technical Support | LOREX Support
- Lorex Limited Warranty Exceptions, Obligations | Lorex

Related Posts



LOREX ACCHM1 Series Wi-Fi Chime User Guide

ACCHM1 Series Wi-Fi Chime User Guide lorex.com What's included Installation To attach the power plug, hook the power...

LOREX F461AQ 2K Outdoor Wi-Fi Camera User Manual

LOREX F461AQ 2K Outdoor Wi-Fi Camera Package Contents Tools Needed Drill Screwdriver Overview Status Indicator Try resetting the...

LOREX W482CAD Series 2K Wi-Fi Smart Deterrence

Camera User Guide

	LOREX W482CAD Series 2K Wi-Fi Smart Deterrence Camera Package contents
	Note: The following contents is based on
	cloudfront WV2 Wi-Fi Router Instructions
	cloudfront WV2 Wi-Fi Router Instructions Connection Instruction
_	ACCHM2 Series, ACCHM2 Series Wi-Fi Chimebox, Chimebox, Lorex, Wi-Fi Lorex Chimebox —Previous Post
	LOREX F461AQ 2K Outdoor WiFi Camera User Manual Next Post— LOREX LNB9383 4K Motorized Varifocal IP PoE Wired Bullet Camera
_	User Guide _
L	eave a comment
You	ur email address will not be published. Required fields are marked*
Со	mment *
Na	me
Em	ail
We	bsite
П	Save my name, email, and website in this browser for the next time I comment.



Search

Search ...

Search

Manuals+,