

LOREX ACCHM2 Series WiFi Chimebox User Guide

Home » Lorex » LOREX ACCHM2 Series WiFi Chimebox User Guide 🖫

Contents

- 1 LOREX ACCHM2 Series WiFi
- Chimebox
- **2 Product Information**
- 3 Key Features
- **4 Product Usage Instructions**
- **5 Overview**
- **6 Status Indicator**
- 7 Setup
- 8 Register your product
- 9 Documents / Resources
 - 9.1 References



LOREX ACCHM2 Series WiFi Chimebox



The ACCHM2 Series Wi-Fi Chime is a power plug device that functions as a wireless doorbell chime. It can be connected to your home's Wi-Fi network and paired with compatible Lorex doorbell cameras or sensors. The chime emits audible alerts when someone

rings the doorbell or when a sensor is triggered, providing you with instant notifications.

Key Features

- Wi-Fi connectivity for easy integration with your home network
- Supports pairing with Lorex doorbell cameras and sensors
- · Audible alerts for doorbell rings and sensor triggers
- · Reset button for device troubleshooting and factory reset
- Status indicator to display the device's current operational status

*Device malfunction: In case of any issues with the device's functionality, please refer to the troubleshooting section in the user manual or contact customer support for assistance.

Product Usage Instructions

- 1. Scan the QR code provided in the user manual to download and install the Lorex Chime app on your smartphone or tablet.
- 2. Locate the release tab on the chime and slide it to remove the cover.
- 3. Attach the power plug to the chime and then plug it into a standard power outlet.
- 4. If needed, insert a microSD card into the slot for local storage of event recordings (optional).
- 5. Press and hold the reset button for 10 seconds to perform a factory reset (if required).
- 6. The status indicator will light up to indicate the chime is powered on and ready for setup.
- 7. Follow the in-app instructions or refer to the user manual to connect the chime to your Wi-Fi network and pair it with your Lorex doorbell camera or sensor.
- 8. Once connected, you can customize the chime settings, such as volume levels and alert tones, through the Lorex Chime app.


For more detailed information about the product, warranty, and additional support, please visit local.com/pages/warranty.




Overview

- 1. QR Code
- 2. Release Tab
- 3. Power plug
- 4. Slot

- 5. Reset Button*
- 6. Status Indicator

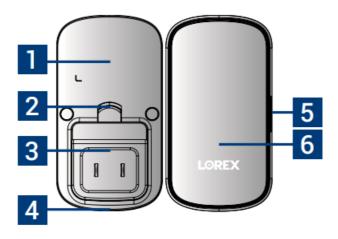

Status Indicator

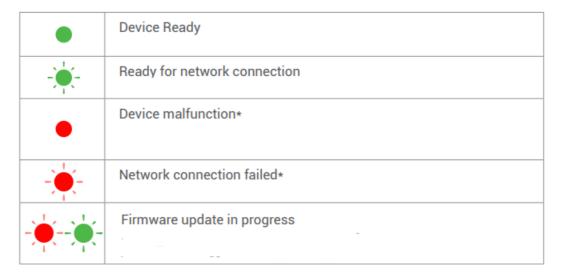

Try resetting the device by holding down the reset button.

IMPORTANT


- Ensure you are on a 2.4 GHz Wi-Fi connection.
- Ensure your 2K Wired/Battery Doorbell and Wi-Fi Chime have the latest firmware version in the device settings.

Setup

1. Download



2. Attach the plug, and then plug your Chime into an outlet.

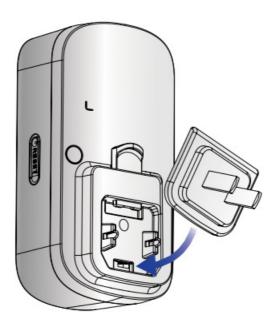

Note

To remove the power plug, lift up on the release tab.

3. Tap in the app, and then follow the in-app instructions to add the Chime.

Need help?

Scan the below QR code for additional support material.



help.lorex.com

Register your product

Please see our full Terms of Service and Limited Hardware Warranty Policy at: lorex.com/pages/warranty

Copyright © 2022 Lorex Technology Inc

As our products are subject to continuous improvement, Lorex reserves the right to modify product design, specifications and prices, without notice and without incurring any obligation. E&OE. All rights reserved.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

Documents / Resources



LOREX ACCHM2 Series WiFi Chimebox [pdf] User Guide 393ACCHM2, ACCHM2 Series WiFi Chimebox, WiFi Chimebox, Chimebox

References

- O Lorex Technical Support | LOREX Support
- Lorex Limited Warranty Exceptions, Obligations | Lorex

Manuals+,