Skip to content

Manuals+

User Manuals Simplified.



LOREX E896AB Series 4K Deterrence Bullet Al PoE IP Wired Camera User Guide

Home » Lorex » LOREX E896AB Series 4K Deterrence Bullet AI PoE IP Wired Camera User Guide

Contents hide

1 LOREX E896AB Series 4K Deterrence Bullet Al PoE

IP Wired Camera

- **2 Package Contents**
- **3 Overview**
- **3.1 Camera Placement Tips**
- **4 Mounting Your Camera**
- **5 Connecting Your Camera**
- **6 Weather-resistant Cap**
- **7 Cable Extension Options**
- **8 Need Help?**
- **9 Register Your Product**
- 10 Documents / Resources
- 10.1 References
- 11 Related Posts



LOREX E896AB Series 4K Deterrence Bullet Al PoE IP Wired Camera



Safety Precautions


- Follow all instructions for safe use and handling of the product.
- Use the camera within given temperature, humidity and voltage levels noted in the camera specifications.
- Do not disassemble the camera.
- Do not point the camera directly at the sun or a source of intense light.
- Periodic cleaning may be required. Use a damp cloth only. Do not use any harsh, chemical-based cleaners.
- The supplied cable is rated for surface mounting only (Non-UL). Cables for in-wall and floor-to-floor installations are sold separately (CMR type). These and other cables are available at Iorex.com.
- It is recommended to connect the camera to the NVR or an external PoE switch. If using a power adapter with this camera, a REGULATED power supply is REQUIRED (not included). Use of a non-regulated, non-conforming power supply can damage this product and voids the warranty.

Disclaimers

- Use the camera only with compatible Lorex recorders. For a full list, visit lorex.com/compatibility.
- · Not intended for submersion in water. Installation in a sheltered location recommended.
- This camera includes an Auto Mechanical IR Cut Filter. When the camera changes between Day/Night viewing
 modes, an audible clicking noise may be heard from the camera. This clicking is normal, and indicates that the
 camera filter is working.
- Audio recording and/or face recording without consent is illegal in certain jurisdictions. Lorex Corporation assumes no liability for use of its products that does not conform with local laws.

Package Contents

· 4K Deterrence Bullet AI PoE IP Wired Camera

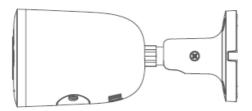




- Mounting Kit*
- Ethernet Extension Cable with Pre-attached Weather-resistant Cap*



Overview

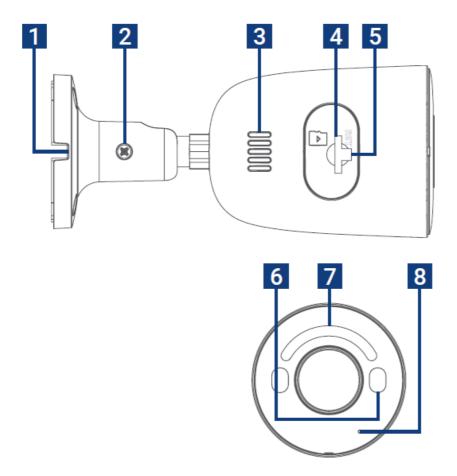


- 1. Cable Notch
- 2. Adjustment Screw
- 3. Speaker and Siren
- 4. MicroSD Card Slot
- 5. Reset Button
- 6. Warning Lights
- 7. Smart Security Lighting*
- 8. Microphone


Camera Placement Tips


- Install the camera in a location that is difficult for thieves and vandals to reach.
- Secure cabling so that it is not exposed or easily cut.
- Point the camera where there is the least amount of obstructions (i.e. tree branches).
- Take into consideration what you want to monitor and where is the best coverage area.
- Place your camera close to the area of interest. The best position is 10ft/3m above ground, angled 15° down. For smart motion detection tips, scan the QR code or visit:



Mounting Your Camera

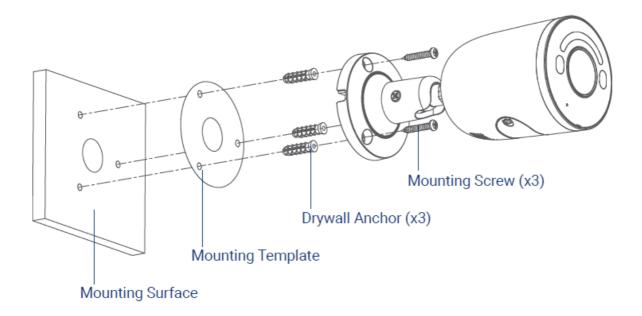

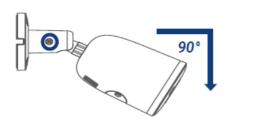

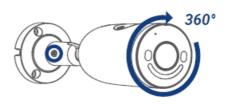


Test your camera prior to selecting a permanent mounting location.


- 1. Use the included mounting template to drill holes for screws. Insert the included drywall anchors.
- 2. Feed the cable through the mounting surface or your camera's cable notch, and then connect the cables as shown in "Connecting Your Camera", pages 7-8.
- 3. Mount the camera stand to the surface using the included screws.
- 4. Loosen the adjustment screw and adjust your camera's position as needed, and then tighten to secure it in place.
- 5. Remove the vinyl film from your camera lens when your installation is complete.

Connecting Your Camera

• Connect your camera directly to your recorder's PoE port using the included Ethernet extension cable.

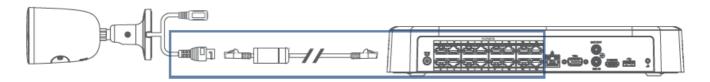

• Connect your camera to a PoE switch on your network using the included Ethernet extension cable. Ensure your switch is connected to the same network as your recorder.

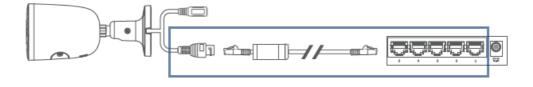

Weather-resistant Cap

The pre-attached weather-resistant cap covers both the camera's Ethernet connector and the Ethernet extension plug to provide protection from weather, dust, dirt and other environmental contaminants. If exposed to regular precipitation, seal the cap with silicone and electrical tape for additional sealing.

Cable Extension Options

To extend the Ethernet cable up to 300ft (91m), an Ethernet coupler or network switch (not included) will be required to connect the cables together. We recommend using UL CMR approved cables available at <u>lorex.com</u>.

- · Cable Type
 - CAT5e (or higher) Ethernet Cable
- Max. Cable Run Distance
 - 。 300ft (91m)
- Max. Number of Extensions
 - 。 🤆

Need Help?

For up-to-date information and resources, scan the QR code or visit:

• E894



E895 help.lorex.com



• E896



- 1. Download product guides
- 2. Watch how-to-videos
- 3. Find related troubleshooting tips & FAQs

Register Your Product

Please see our full Terms of Service and Limited Hardware Warranty Policy at: lover.com/warranty Copyright © 2022 Lorex Technology Inc

As our products are subject to continuous improvement, Lorex reserves the right to modify product design, specifications and prices, without notice and without incurring any obligation. E&OE. All rights reserved.

Documents / Resources



LOREX E896AB Series 4K Deterrence Bullet AI PoE IP Wired Camera [pdf] User Guide E896AB Series 4K Deterrence Bullet AI PoE IP Wired Camera, E896AB Series, 4K Deterrence Bullet AI PoE IP Wired Camera, Bullet AI PoE IP Wired Camera, Bullet AI PoE IP Wired Camera, PoE IP Wired Camera, Wired Camera

References

- O Lorex Technical Support | LOREX Support
- Lorex Limited Warranty Exceptions, Obligations | Lorex

Manuals+,

- home
- privacy