


LOREX N841 Series Smart Motion Detection User Guide

Home » Lorex » LOREX N841 Series Smart Motion Detection User Guide 🖫

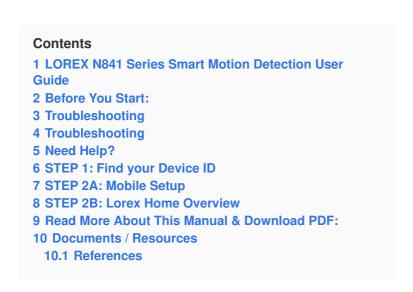

LOREX N841 Series Smart Motion Detection User Guide



Before You Start:

- This guide is for users who wish to view their security system remotely using mobile apps. If you plan to only view and configure the system locally, you may skip this guide.
- Make sure you have a router and high-speed Internet access (not included).
- Connect your recorder to your router using an Ethernet cable (see the Quick Setup Guide [Guide 1/2] for details).
- Ensure your recorder is up-to-date with the latest firmware version.
- Please note that the following minimum upload speeds are required for remote video streaming:
- 5 Mbps for 4K video.
- 3.5 Mbps for lower resolutions.
- Up to 3 devices may connect to the system at the same time

Troubleshooting

If you are having trouble connecting, try the following:

- Restart the recorder by disconnecting and reconnecting the power adapter.
- Ensure the recorder is connected to the router using an Ethernet cable andthen restart the recorder.
- Double-check the username and password.
- Ensure your recorder has the latest firmware.
- Ensure your mobile app is up-to-date.

Troubleshooting

- · Default access information:
- · Default Username: admin
- Password: See the Quick Setup Guide [Guide 1/2] for the password created upon initial setup.

If you have forgotten your password, contact Lorex technical support

Need Help?

Visit us online for up-to-date software and complete instruction manuals



STEP 1: Find your Device ID

The Device ID is printed on a label on the side panel of the recorder.



STEP 2A: Mobile Setup

You must complete initial setup of the recorder detailed in the Quick Setup Guide [Guide 1/2] before mobile set



STEP 2B: Lorex Home Overview

The following is a brief overview of the controls available on the Live View screen of the Lorex Home app. For complete app instructions, see the Lorex Home manual on your product page at lorex.com.

Settings: Configure settings for selected device.

Snapshot: Tap to save a still image of the current live view.

Two-Way Audio: Two-way audio camera only. Tap to speak into the microphone on your mobile device. Sound will be transmitted through the camera's speaker. Tap again to listen in.

Return to Main Menu Pause/Restart Video

Viewing Mode: Switch between single and multi-channel views.

Timeline: Tap to search for and play backrecorded videos.

Switch Stream: Tap to switch to HD*video quality. Tap again for reduced video quality that is optimized for streaming.

Audio: Tap to mute / unmute.

Fullscreen: Tap to view in landscape mod



Manual Recording: Tap to begin manual recording of the current live view. Tap again to stop recording and save the video clip to your mobile device's storage

Siren: Deterrence cameras only. Tap to enable the camera's siren

Warning Light: Deterrence cameras only. Tap to manually enable the white light. PTZ Controls: Pan-Tilt-Zoom cameras only. Open controls to move and configure

PTZ cameras

Read More About This Manual & Download PDF:

Documents / Resources



LOREX N841 Series Smart Motion Detection [pdf] User Guide

N841 Series Smart Motion Detection, N841 Series, Smart Motion Detection, Motion Detection, Detection

References

- Security Cameras Home Security Camera Systems | Lorex
- <u>Manual-Hub.com Free PDF manuals!</u>

^{*} HD resolution will be limited to the maximum screen resolution of your mobile device. Thi will not impact the recording resolution of the NVR.

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.