 


## LORZOR Smart Wallet

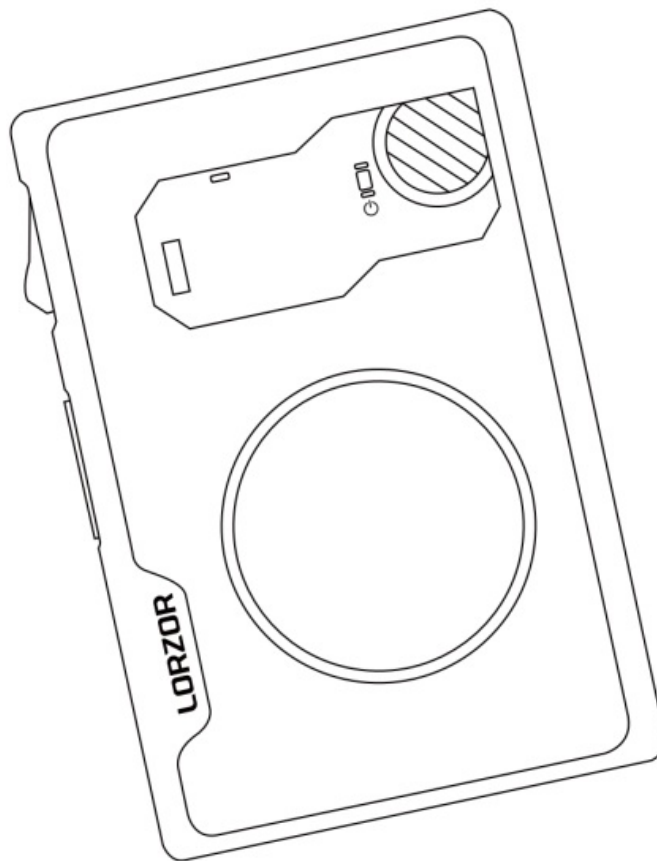

### Contents [ [hide](#) ]

[1 SWITCH BUTTON OPERATION INSTRUCTIONS](#)

[2 HOW TO USE THE “FIND MY” FEATURE](#)

[3 Documents / Resources](#)

[3.1 References](#)

## SWITCH BUTTON OPERATION INSTRUCTIONS



**Power On:** Press and hold the switch button for 5 seconds. The ringtone will sound and the indicator light will flash.

**Check Status:** Double-click the switch button.

If the ringtone sounds, it indicates that the device is powered on. If it is not powered on, press and hold the switch button for 5 seconds to power it on.

**Pairing Mode:** After deleting the device, the ringtone will sound and the indicator light will flash. If the device fails to pair within 10 minutes, click the switch button to re-enter the pairing mode.

**Restore Factory Settings:** Remove it from the “Find My” app.

In the powered-on state, double-click the switch button and then press and hold it for 10 seconds. When the ringtone sounds, the device will restore to factory settings.

**Power Off:** In the powered-on state, press the switch button 5 times within 2 seconds to turn off the device.

**Notes:**

The functions of the LORZOR Smart Wallet, such as tracking, notifications, and playing sounds when you are looking for the wallet, can only be used when the device is powered on.

 
## HOW TO USE THE “FIND MY” FEATURE

### Binding the Device

1. Press and hold the power button for 5 seconds until the ringtone sounds and the indicator light flashes.



2. Enable the Bluetooth function on your phone.

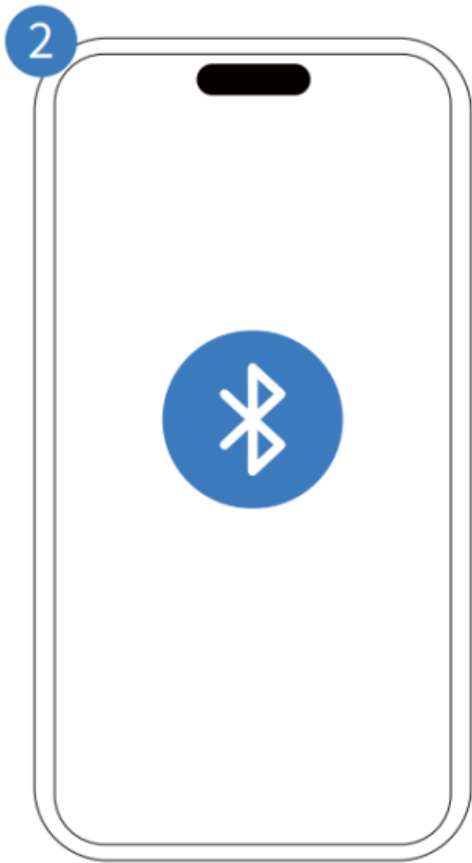

3. Open the “Find My” app on your iPhone.



4. Place the device near your iPhone, tap the “Items” icon in the bottom navigation bar, and then tap the “Add Item” button.



 
5. Tap "Other Supported Item" at the bottom.



6. Tap the "Connect" button below "LORZOR-wallet-T".



7. Enter the name of the item, and then tap the “Continue” button below.

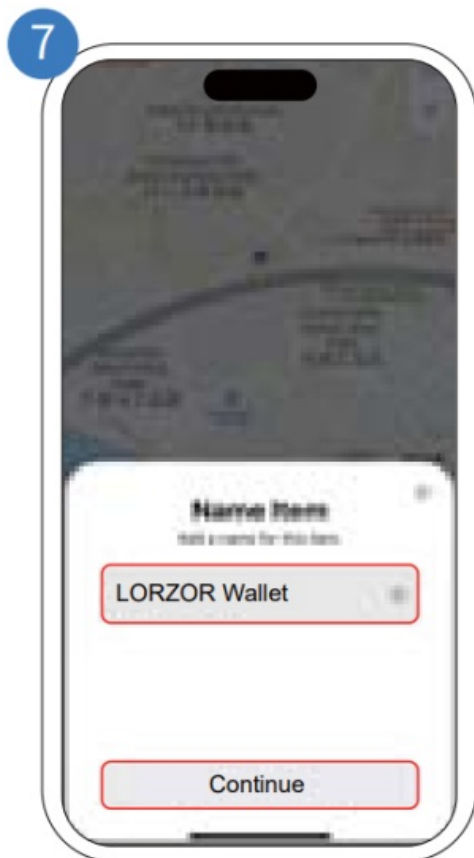


8. First, select an Emoji, and then tap the “Continue” button below.

8



9. Tap the “Agree” button below to complete the association settings between the item and your Apple ID.

 9

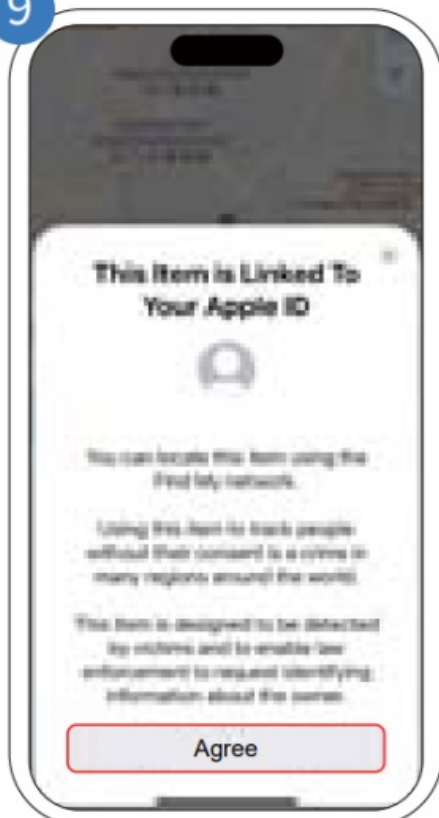

10. After tapping the “Finish” button, the item has been successfully bound to your device. You can view it in the item management interface and perform subsequent operations.




## Enabling “Lost Mode”

 1. In the Items interface, tap your device.



2. Scroll down to find “Lost Mode”, and tap the “Enable” button below.




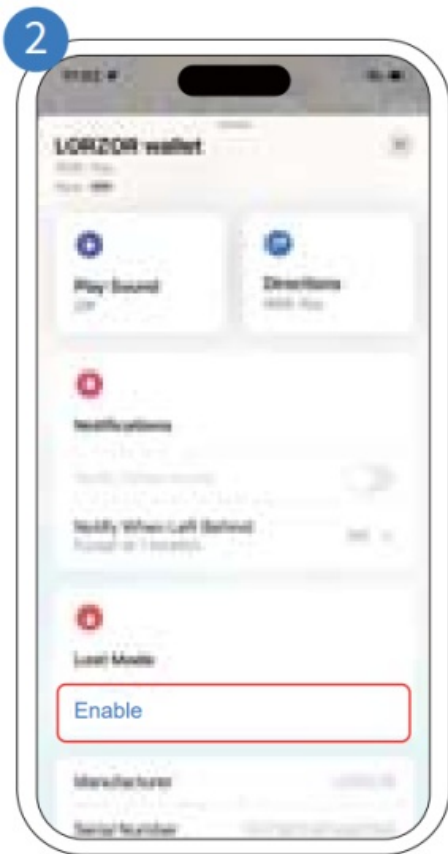


3. Tap “Continue” to proceed to the next step of settings.



 4. Tap “Enter phone number” or “Use an email address”, and then tap the “Next” button in the upper right corner to continue.

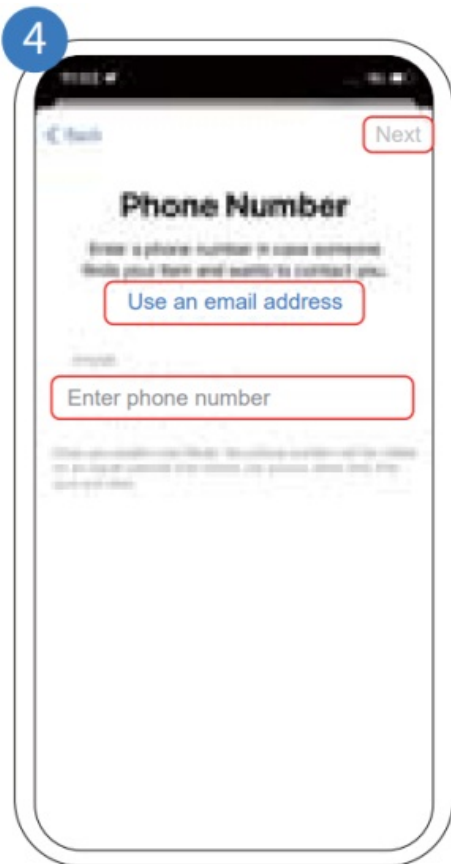

 5. Tap the “Activate” button in the upper right corner to turn on the Lost Mode.

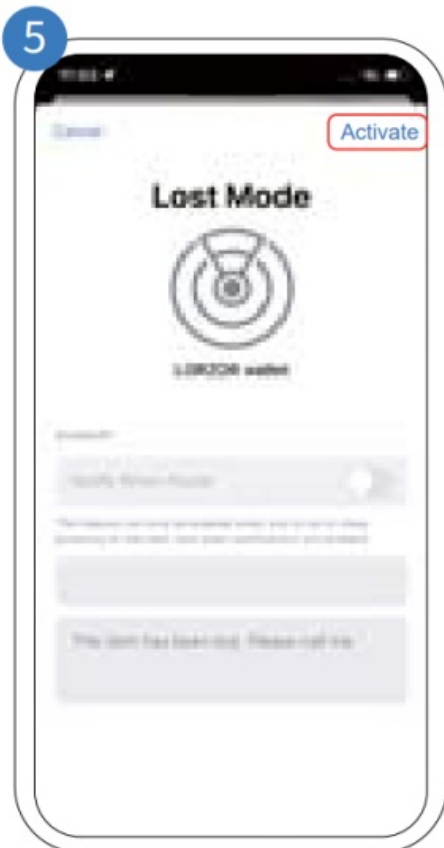


## Enabling “Notifications”

1. In the Items interface, tap your device.



 2. Scroll down to find “Notifications”, and tap the “On” button on the right to turn it on.

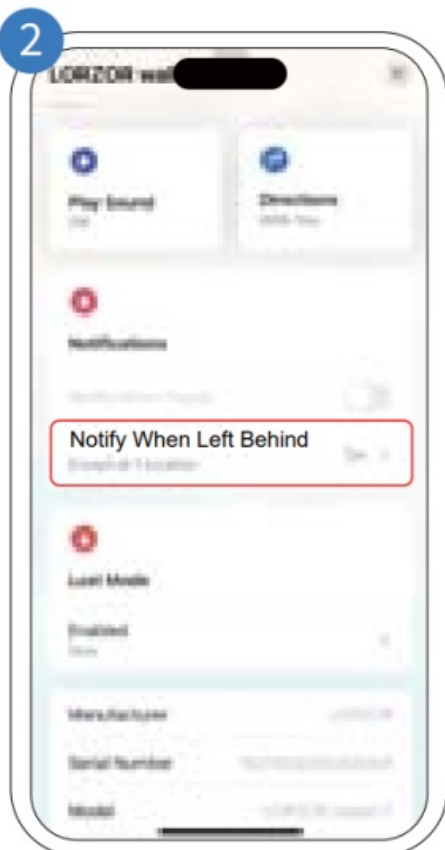


3. Tap the button on the right side of “Notify When Left Behind”, and after turning it on, tap “Done” in the upper right corner to enable the Notifications feature.




## “Play Sound” Feature

 1. In the Items interface, tap your device.



2. Tap the  button to turn on the Play Sound feature, which will help you find the

location of the item.

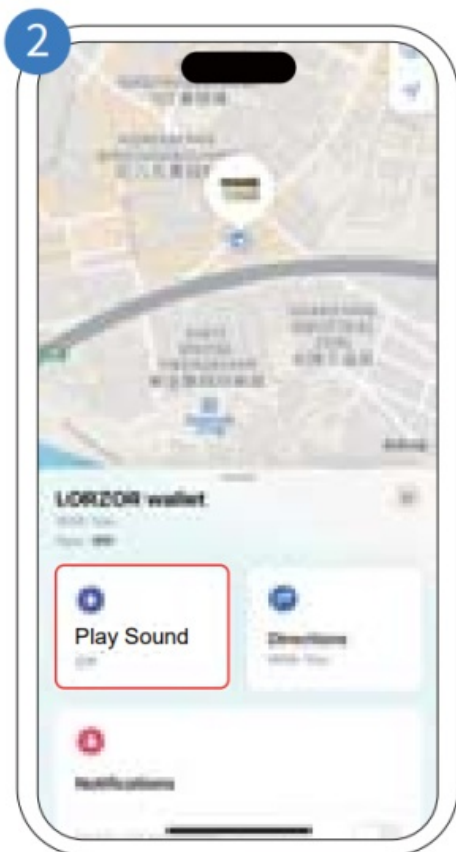


## Remove Item

1. In the Items interface, tap your device.



 2. Scroll down the interface, locate and click “Remove Item”.

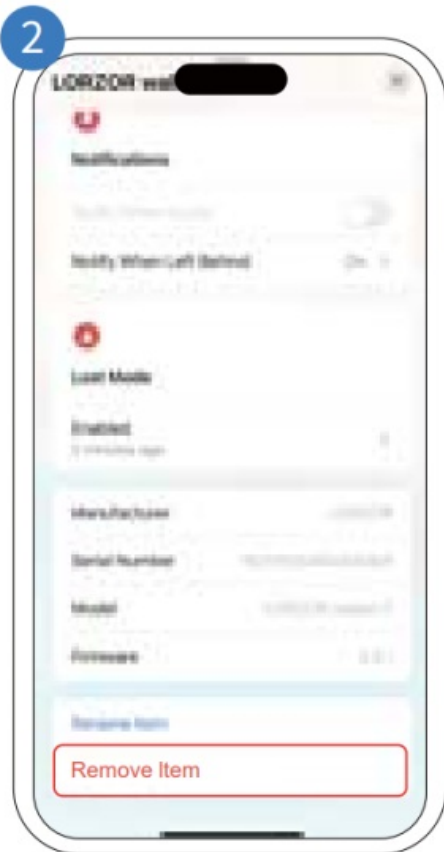

3. Click the “Remove” button to initiate the item removal process.



4. Select the “Remove” button again to finalize the operation.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.




## Documents / Resources

	<a href="#">LORZOR Smart Wallet [pdf]</a> Instruction Manual Smart Wallet, Wallet
---	--

## References

- [User Manual](#)

 LORZOR, Smart Wallet, Wallet

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*



Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.