



# LOVCUBE L08F Digital Photo Frame User Guide

 
[Home](#) » [LOVCUBE](#) » LOVCUBE L08F Digital Photo Frame User Guide 

## Contents



- [1 LOVCUBE L08F Digital Photo Frame](#)
- [2 Package Contents](#)
- [3 Product Introduction](#)
  - [3.1 Front of Frame](#)
  - [3.2 Back of Frame](#)
  - [3.3 Remote Control](#)
  - [3.4 About Button](#)
  - [3.5 Inserting Battery](#)
- [4 Wall-mount your frame](#)
- [5 Quick User Guide](#)
- [6 Getting Start](#)
  - [6.1 Default Screen](#)
  - [6.2 Settings](#)
- [7 One Year Warranty](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



**LOVCUBE**

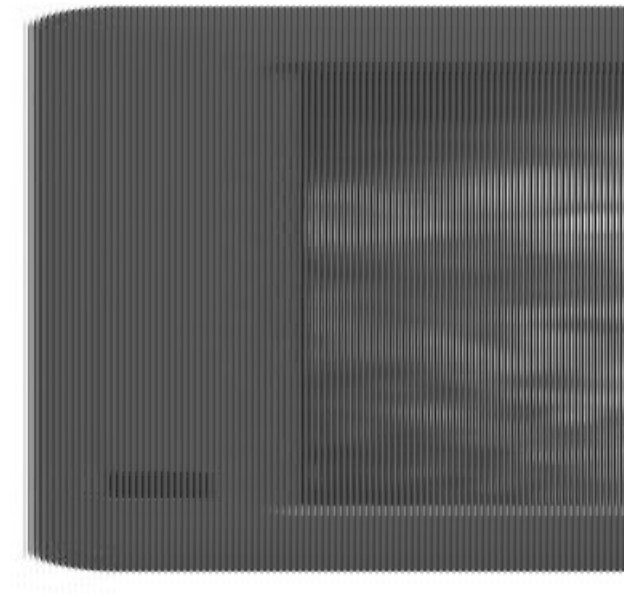


## Package Contents

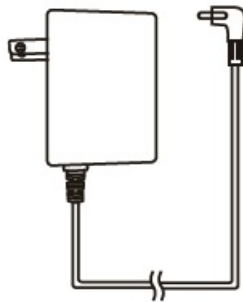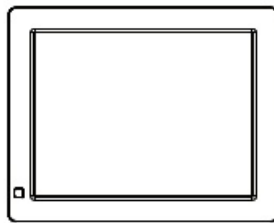  

- 1pc. Digital Photo Frame L08F
- 1pc. User Manual
- 1pc. AC Adaptor
- 1pc. Remote Control with Battery

## Product Introduction

### Front of Frame

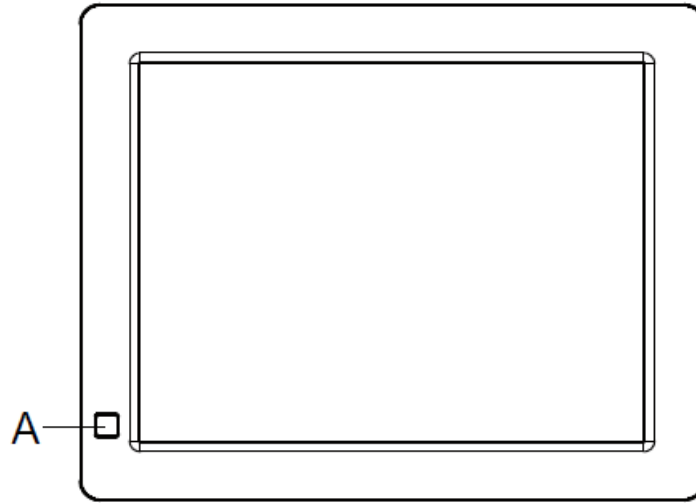


**A: Infrared Sensor**

Receives signals from the remote control.

**Please Note:** Blocking the infrared sensor will cause those functions to fail.

**Back of Frame**

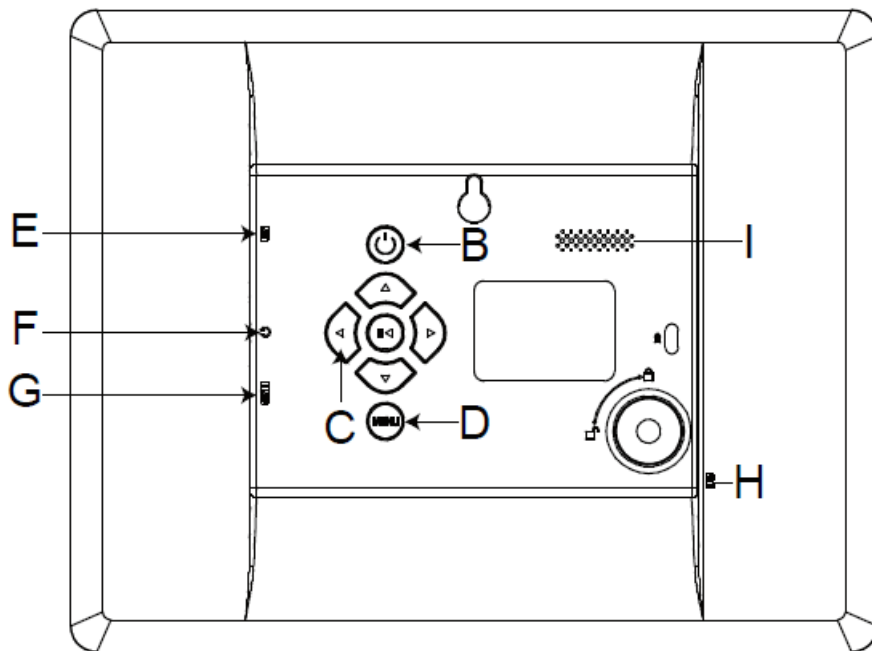

**B: Power Button**

Turns Digital Frame on or puts it into standby.

**C: 4-way Navigation Pad and Play/Pause Button**

Lets you navigate the menu and select functions.

**D: Menu Button**

Lets you go back a step.

**E: SD/SDHC Card Slot**

Connect and view photos and videos from the memory card.

**F: Headphone/Speaker Port**

Connect your headphones or speakers.

**G: USB Port**

Insert a USB storage drive to view photos and videos.

**H: Power Adaptor DC-IN (5V)**

Plug in power cable for power.


**I: Loudspeaker**

Built-in loudspeaker for musics and videos.

**Please Note:** The USB Port functions only for reading USB drives. It will not work for charging or other functions.

**Remote Control**


**Please Note:** Remove the battery stopper before using. Maximum working distance is six meters.

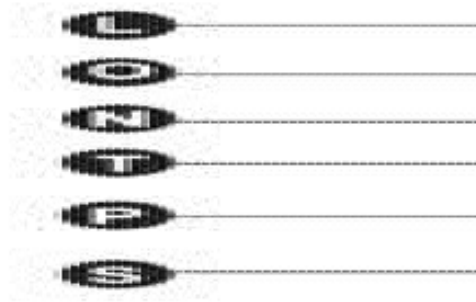


- L: ON/OFF Button – Turns the frame on or puts it into standby
- M: Home – Go back to home menu
- N: or Move cursor left/right Up/Down volume when playing videos, musics
- O: or Move cursor up/down. Quick press to skip to previous or next video. Long press for Fast – forward and rewind
- P: Slideshow -Starts slideshow
- Q: Video – Starts playing videos
- R: Sub-menu – Enter sub-menu
- S: Back – Return to the previous menu
- T: Play – Select/Play/Pause

**About Button**


Press this button, you can enter the quick setting submenu. You can see below menu when pressing it at slideshow mode.

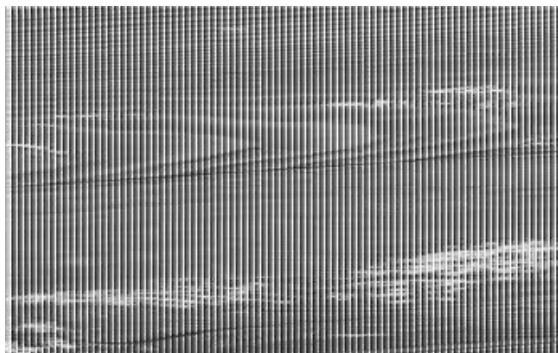

You can see below menu when you pressing it at browser so that you can Copy or Delete the file there.

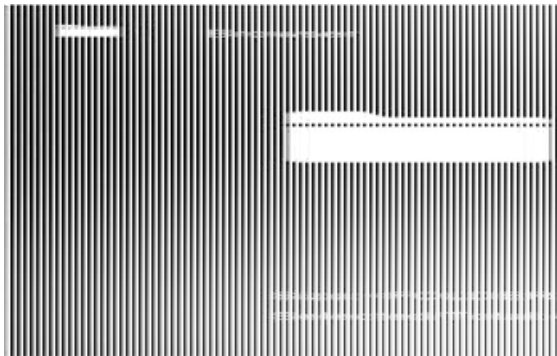

### Inserting Battery

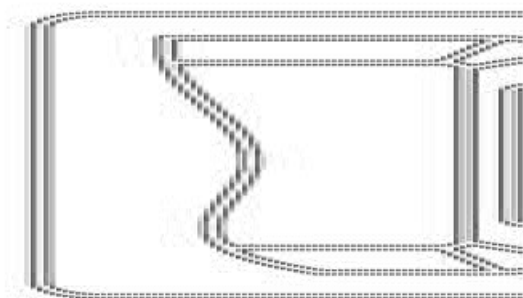


1. Push catch toward slot.
2. With the catch pushed, pull the battery compartment at the same time.
3. Use the Lithium cell, CR-2025 type. (Remove protection film for first time use)

**Please Note:** Batteries must not be disposed of in the household trash. Please dispose used/old batteries in approved battery waste locations.

### Wall-mount your frame


You have only one way to mount your frame on the wall.

Drill a screw on the wall, leave a 10mm gap between the wall and the head of screw. Mount the frame onto the screw by wall mount hole and slide down to lock into place.

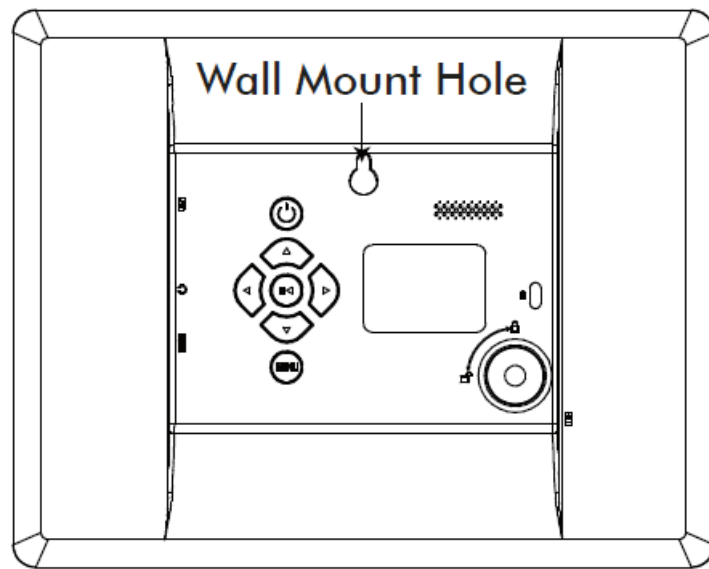

## Quick User Guide

1. Set the digital frame on a flat, dry surface. Remove the protection film from the face of the display.
2. Connect the power supply to the digital frame. then plug it into the power outlet. The display will start and show the initial menu screen.

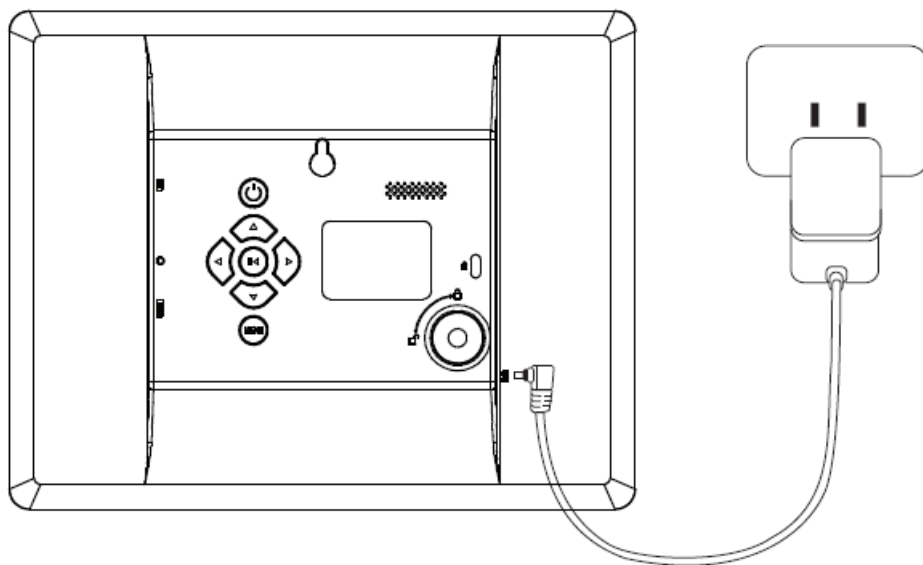


3. Insert an SD/SDHC card and/or USB storage drive (up to max.32GB, Format FAT32) carefully into the back of your digital frame, the frame will automatically access the SD card/USB drive and start a slideshow if the start mode is set to Photo in the menu. Note: the SD card inserts in contacts-up orientation.




- With the digital frame turned on, when both a USB drive and SD card are inserted, the frame switches automatically to the last inserted memory device.
- With the digital frame turned off, when both a USB drive and SD card are inserted, the frame defaults to the USB storage drive when turned on next time.
- In the home menu, press to select starting from either the USB storage drive or SD/ SDHC card, the device icon in gray is the highlighted icon.

**Auto Rotation**—Simply rotate the frame 90 degrees counterclockwise and your photo will automatically rotate. So you can view your portrait photos the right way. Auto rotation will work in photo slideshow mode.

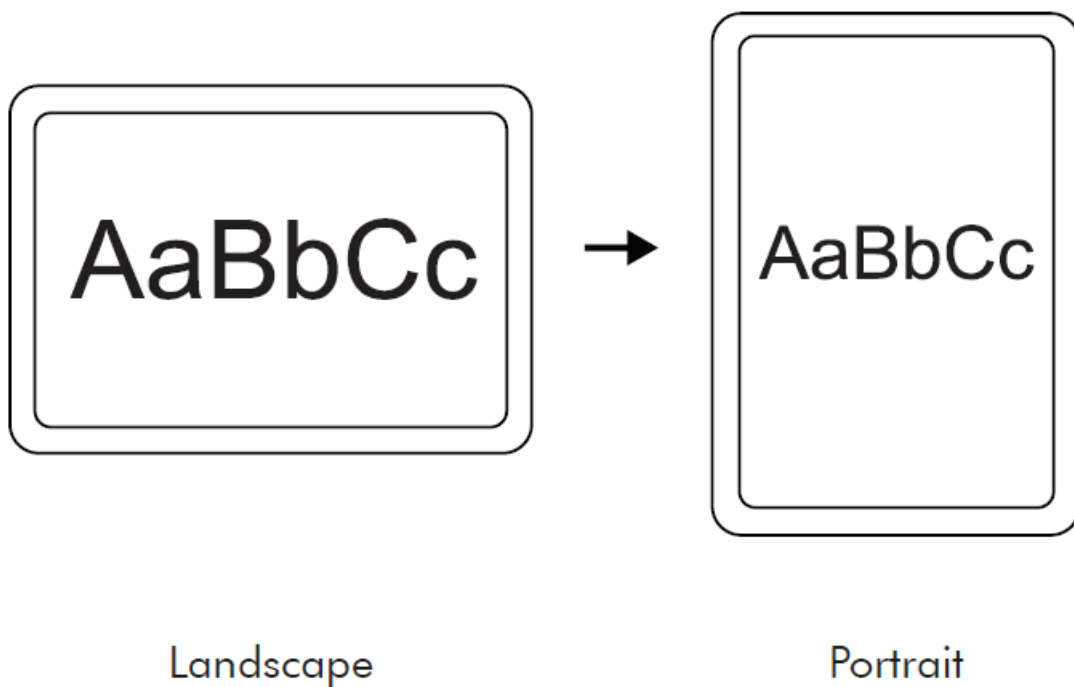

## Getting Start

### Default Screen

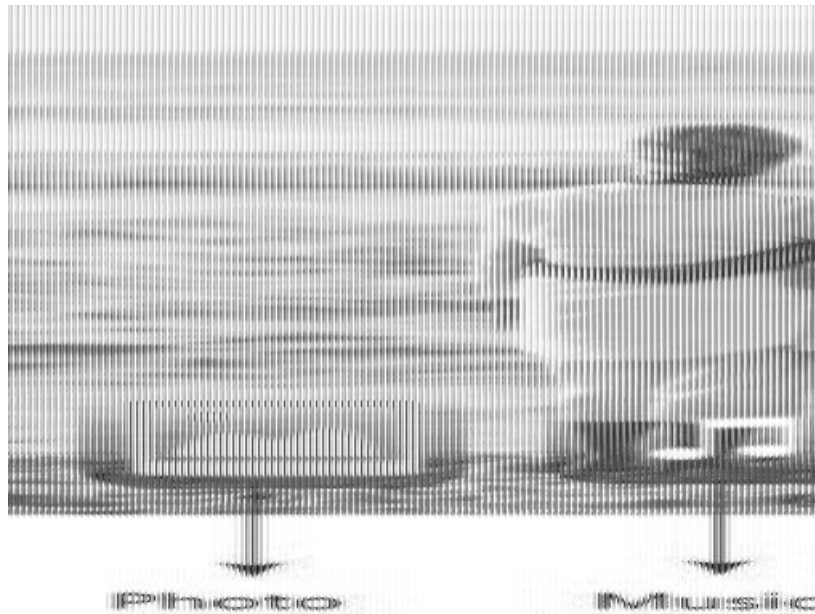


Navigate the main menu using the 4-way navigation pad on the remote control or buttons on the back of the frame

- Photo – Play Photos – All photos-All JPEG photo files will play
- Music – Play music – All MP3 music files will play
- Video – Play videos – All MP4 video files will play
- Clock – Display a clock (You can set the type of clock display in the setting menu)
- Calendar – Display a calendar
- Browser – Search for photos, musics and videos on the inserted memory devices
- Setting – See below 5.2 settings

**About the default Screen:**

There are two options for the default screen: Seaside and Blue. You can select the one you like as the default background. Please refer to the “Settings” menu for more information.

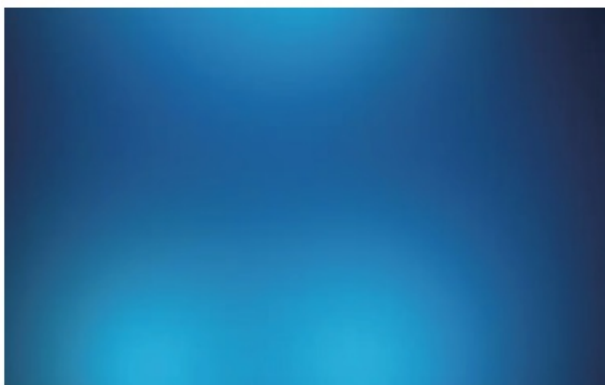


**Blue**



**Seaside**

**Settings**

 Navigate the settings menu using the 4-way navigation pad on the remote control or buttons on the back of the frame.

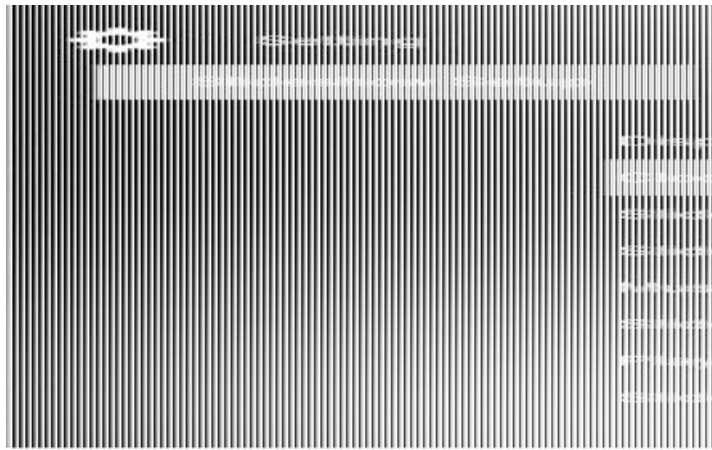

- Press or to select the sub-menu.
- Press or ok to step through sub-menu items.
- Press or to adjust the selected sub-menu item.
- Press to go back to previous menu when sub-menu settings finished

### Slideshow Setup

Item	Option
Display Ratio	Fit to screen
	Full screen
Clock on Slideshow	On
	Off
Slide Interval	Hours: 1 Hour
	Minutes: 1-5-15-30
	Seconds: 3-5-15-30
	Off
	Random
	Fly in
	Chessboard

Slide Effect	Cut
	Erase
	Louver
	Random Line
Music	Off
	On
Slide Mode	Single Window
	Four Windows
Playback Mode	Random
	Sequential
Slide Repeat	Sequential
	Random

## Music & Video Setup

Item	Option
Video Playback Order	Sequential
	All Repeat
	Random
	Random & Repeat
	Single Repeat

Video Display Ratio	Full screen
	Fit to screen
Music Playback Order	All Repeat
	Random
	Random & Repeat
	Single Repeat
	Sequential
Select EQ	Off
	Pop
	Classic
	Soft
	Jazz
	Rock

## Date & Time Setup

Item	Description	Option
Date	Set calendar date	YY-MM-DD
Time	Set clock time	HH:MM
Time Format	Adjust time format	12
		24
Alarm Status	Set alarm on/off	Off
		On
Alarm Time	Set alarm time	HH:MM
Alarm Repeat	Set alarm frequency	Every day
		Work days
		Weekend
		Once
Clock Mode	Analog clock face	Mode One
	Analog clock face	Mode Two
Mode Three	Analog clock face with white background and sweet icons	
Mode Four	Analog clock face with green and blue background	
Mode Five	Digital watch face with black background	
Mode Six	Digital calendar with black background	

## System Setup

Item	Description	Option
Language	Set language	English, France, German, Spanish, Italian
Desk Background	Set desk background photo	Seaside
		Blue
Auto Power On & Off	Set auto power on/off frequency	Once
		Every day
		Work days
		Weekend
		Off
Auto Power On	Set auto power on time	HH:MM
		Off
Auto Power Off	Set auto power off time	HH:MM
		Off
Motion Sensor	Set motion sensor on/off	On
		Off
Sleep Time	Sensor standby after	Minutes 5-15-30-45
		Hour 1-1.5
Start Up Mode	Digital Frame start from	Photo
		Photo & Music
		Music
		Video
		Calendar
		Off
Firmware Version		
Reset Default	Restore to factory settings	

## One Year Warranty

### Full One Year Manufacturer's Warranty

LOVCUBE warrants the product hardware components against defects in materials and workmanship when used in accordance with the company's documentation for a period of one (1) YEAR after the date of original purchase from the company. If a hardware defective arises and a valid claim is received within the Warranty Period, at its

option and to the extent permitted by law, Company will either

1. repair the hardware defect at no charge, using new or refurbished replacement parts
2. exchange the product with a new or manufactured from new or serviceable used parts and is at least functionally equivalent to the original product or
3. refund the purchase price of the product.

We only cover warranty for purchase made within the USA, Canada, UK.


### Warning

There is a risk of hardware damage. Never place the Digital Frame in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided. Failure to do this, and subsequent damage to the frame will void your warranty.

### Obtaining Warranty Service

Please access and review the online help resources referred to in the documentation accompanying this hardware product before requesting warranty service. If the product is still not functioning properly after making use of these resources, please contact our representatives at [support@lovcube.com](mailto:support@lovcube.com). No replacements will be sent out by the manufacturer until the returned item is received.

### Documents / Resources

	<p><a href="#">LOVCUBE L08F Digital Photo Frame</a> [pdf] User Guide L08F, Digital Photo Frame</p>
--	--