

## LRS TX-9560EZ Programming Transmitter



# LRS TX-9560EZ Programming Transmitter Instructions

[Home](#) » [LRS](#) » LRS TX-9560EZ Programming Transmitter Instructions 

### Contents

- [1 LRS TX-9560EZ Programming Transmitter](#)
- [2 Programming Steps](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)



**LRS TX-9560EZ Programming Transmitter**



### **Program LRS CS7 Coaster Pagers with the T-7471 or T-7470 Transmitter**

Have all pages on the charger to start. Only program those that need it. Keep the pages you wish to reprogram at the top of the stack so they are easy to get to. If possible, have all the pagers on other charging stacks so you have 1 charger that is empty and an easy place to put finished pagers.

When a pager is done programming, it responds with a single flash, and the page number is displayed on the screen. Put it back on the charger so it won't receive a program it should not have when you do the next one.

### **Programming Steps**

1. Press the Setup button on the transmitter
2. Type in code 3 1 3 3 7
3. Press F2
4. Press #1 for the program
5. Choose option 1 for the program pager
6. Select 1 for guest

7. Select 1 for coaster
8. Select 1 for non-alpha
9. F1 for Vibe On zeros)
10. Type in the pager # you want the pager to be. (if the pager is 1, just type in 1 – no additional zeros)
11. Press enter
12. Take the pager off the charger
13. Allow initial wake-up to take place
14. When it stops, press the enter key 1 time

The pager should flash 1 time to show it accepted the programming and the number will reflect the pager number you wanted it to be. Go through the prompts to finish or program another pager.

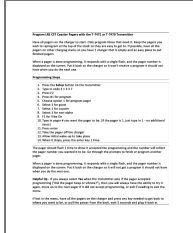
When a pager is done programming, it responds with a single flash, and the page number is displayed on the screen. Put it back on the charger so it will not get a program it should not have when you do the next one.

**Helpful tip** – If you always select Yes when the transmitter asks if the pager accepted programming (“Did the pager beep or vibrate?”), then you will always have the ability to try it again, move on to the next page if it does not accept programming, or exit if needing to exit the menu.

If lost in the menu, have all the pages on the charger and press any key needed to get back to where you want to be, or pull the power from the back, wait 5 seconds and plug it back in.

---

## Documents / Resources

	<p><a href="#">LRS TX-9560EZ Programming Transmitter</a> [pdf] Instructions TX-9560EZ Programming Transmitter, TX-9560EZ, Programming Transmitter, Transmitter</p>
---	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.