



# LSI LASTEM DQA340.2 Soil Moisture And Temperature Sensor Instruction Manual

[Home](#) » [LSI LASTEM](#) » LSI LASTEM DQA340.2 Soil Moisture And Temperature Sensor Instruction Manual 

Contents

1 LSI LASTEM DQA340.2 Soil Moisture And Temperature Sensor

1.1 Specifications:

2 FAQ (Frequently Asked Questions)

2.1 Q: How often should I replace the spare rods and seals?

2.2 Q: Can I use third-party spare rods with this probe?

3 Documents / Resources

3.1 References

4 Related Posts

LSI LASTEM DQA340.2 Soil Moisture And Temperature Sensor

INSTRUCTION MANUAL

Mounting spare rods DQA340.2

1. Prepare the probe, seals and spare rods to be replaced. The probe must be cleaned and the rods and seals removed.



2. Insert the seals into the bore holes.



3. Push the seals to the base of the bore holes where the threads begin.



4. Screw the rods into the probe body.



### Specifications:

- Model: DQA340.2
- Manufacturer: [Manufacturer Name]
- Compatibility: [Compatible with specific device/model]
- Material: [Specify material used]

---

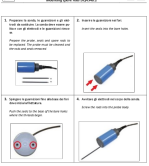
## FAQ (Frequently Asked Questions)

**Q: How often should I replace the spare rods and seals?**

**A:** It is recommended to replace the spare rods and seals according to the manufacturer's guidelines or if you notice any signs of wear or damage.

**Q: Can I use third-party spare rods with this probe?**

## Documents / Resources

	<a href="#">LSI LASTEM DQA340.2 Soil Moisture And Temperature Sensor</a> [pdf] Instruction Manual DQA340.2 Soil Moisture And Temperature Sensor, DQA340.2, Soil Moisture And Temperature Sensor, Moisture And Temperature Sensor, Temperature Sensor, Sensor
---	--

## References

- [User Manual](#)