




LSI LASTEM DQA601.2 Storm Front Distance Sensor User Manual

[Home](#) » [LSI LASTEM](#) » LSI LASTEM DQA601.2 Storm Front Distance Sensor User Manual 

CONNECTOR CABLE CONNECTIONS (1)
USB type A

Cable
L=10 m

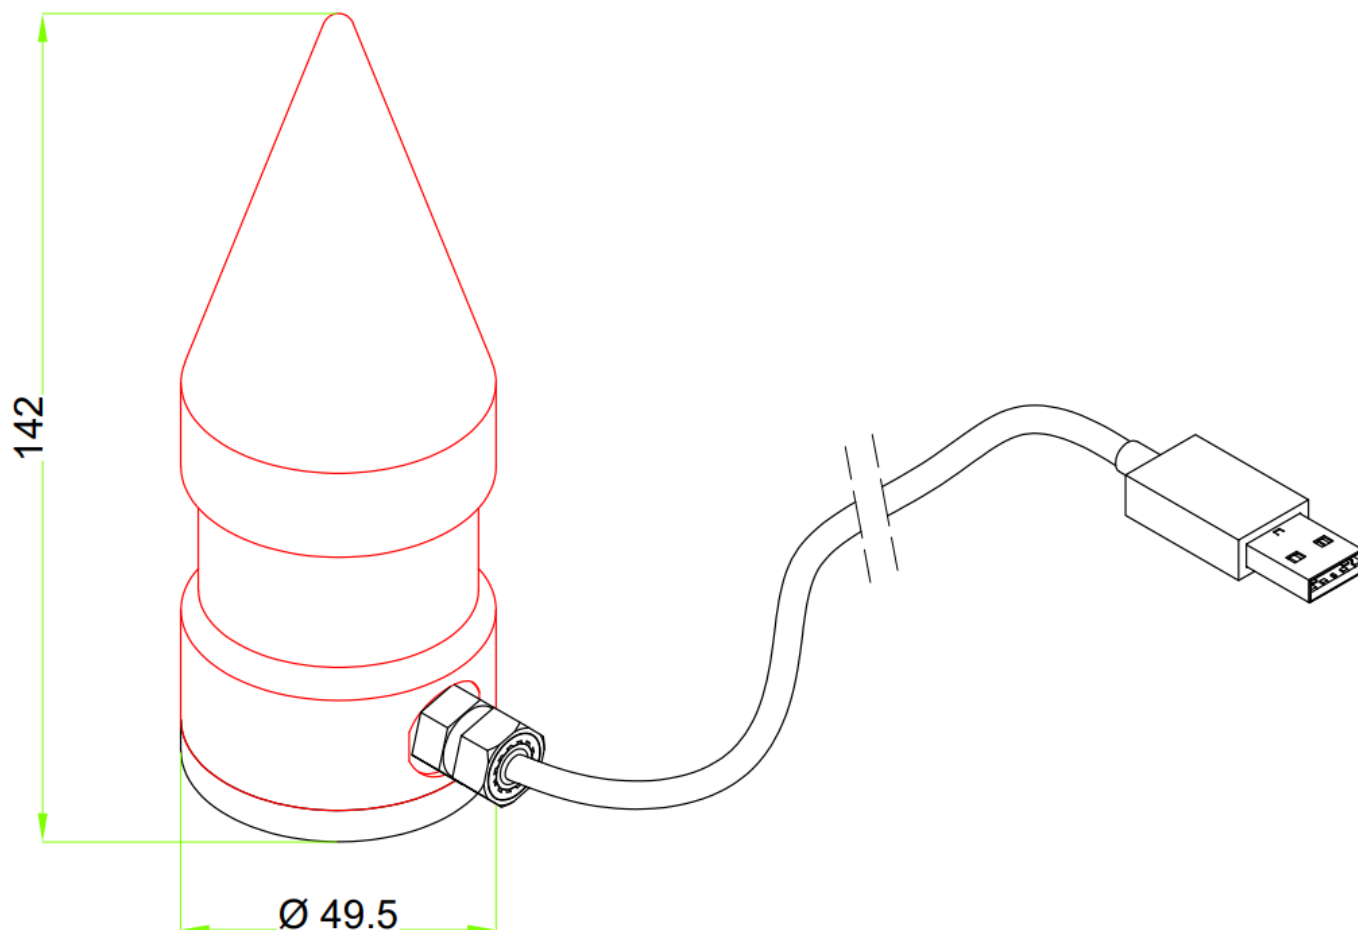

Revision index	Data	Change made
a	23/05/19	First revision
b	09/11/21	adj. title block and drawing layout
c	—	—
d	—	—
e	—	—
f	—	—

A4	EDITED:	CHECKED:	VERIFIED:	APPROVED:
	UT	R&S	RA	RT
ORIGINAL DATE:	22/05/19	22/05/19	22/05/19	22/05/19
This communication contains confidential information intended only for its addressee(s). Please don't print if not necessary				

LINEAR DIMENSIONS WITHOUT INDICATION OF TOLERANCE ALLOWED LIMIT DEVIATIONS

Size groups:	Tolerances mm
1...18	±0.1
>18...80	±0.15
>80...250	±0.25
>250	±0.35

ProFab:	---
ProCal:	---
ProCol:	---
	


	Description: Sensor/Front distance/USB/5V	Material: —	SCALE FACTOR 
	n° dis.: Rev.: DISACC210155 —	Product code: DQA601.2	

All information and the user manual can be downloaded from website WWW.LSI-LASTEM.COM

Contents

- 1 Documents / Resources
- 2 Related Posts

Documents / Resources

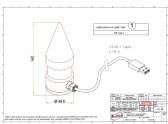	LSI LASTEM DQA601.2 Storm Front Distance Sensor [pdf] User Manual DQA601.2 Storm Front Distance Sensor, DQA601.2, Storm Front Distance Sensor, Distance Sensor
---	---