



# LTECH CHLSC16 Rgbw LED Controller User Manual

[Home](#) » [LTECH](#) » LTECH CHLSC16 Rgbw LED Controller User Manual 

# LTECH

 **RF WIRELESS**  
CHLSC16 Rgbw LED Controller User Manual

## Contents

- 1 CHLSC16 Rgbw LED Controller
- 2 Parameter:
- 3 System Diagram:
- 4 Product Size:
- 5 The Learning ID Method of Remote Control:
- 6 Operating Instruction for Receiver
- 7 Operating Instruction for Remote Control :
- 8 Wiring Diagram:
- 9 Documents / Resources
  - 9.1 References
- 10 Related Posts

**CHLSC16 Rgbw LED Controller**



M series LED controller is compatible with 8 kinds remotes of different function (patent technology) . which means using one receiver could experience single color/CT dimming, RGB/RGBW adjustment to meet customers' different lighting requirements. With the RF remote, speed/brightness adjustment. customise color and lighting changing modes selection could all be achieved

## Parameter:

 
### Remote (RGBW) :

Model:	M4/M8
Working Voltage:	3Vdc (battery CR2032)
Working Frequency:	433.92MHz
Remote Distance:	30m
Working Temp.:	-30 ~55°C °C
Weight(N.W.):	42g


### CV Receiver (RGBW):

Model:	M4-5A
Input Voltage:	12~24Vdc
Current Load:	5A×4CH Max 20A
Max Output Power:	(0...60W~120W) × 4CH
Protection:	Short circuit / Over-load
Working Temp.:	-30 ~55℃ °C
Weight(N.W.):	125g


### System Diagram:

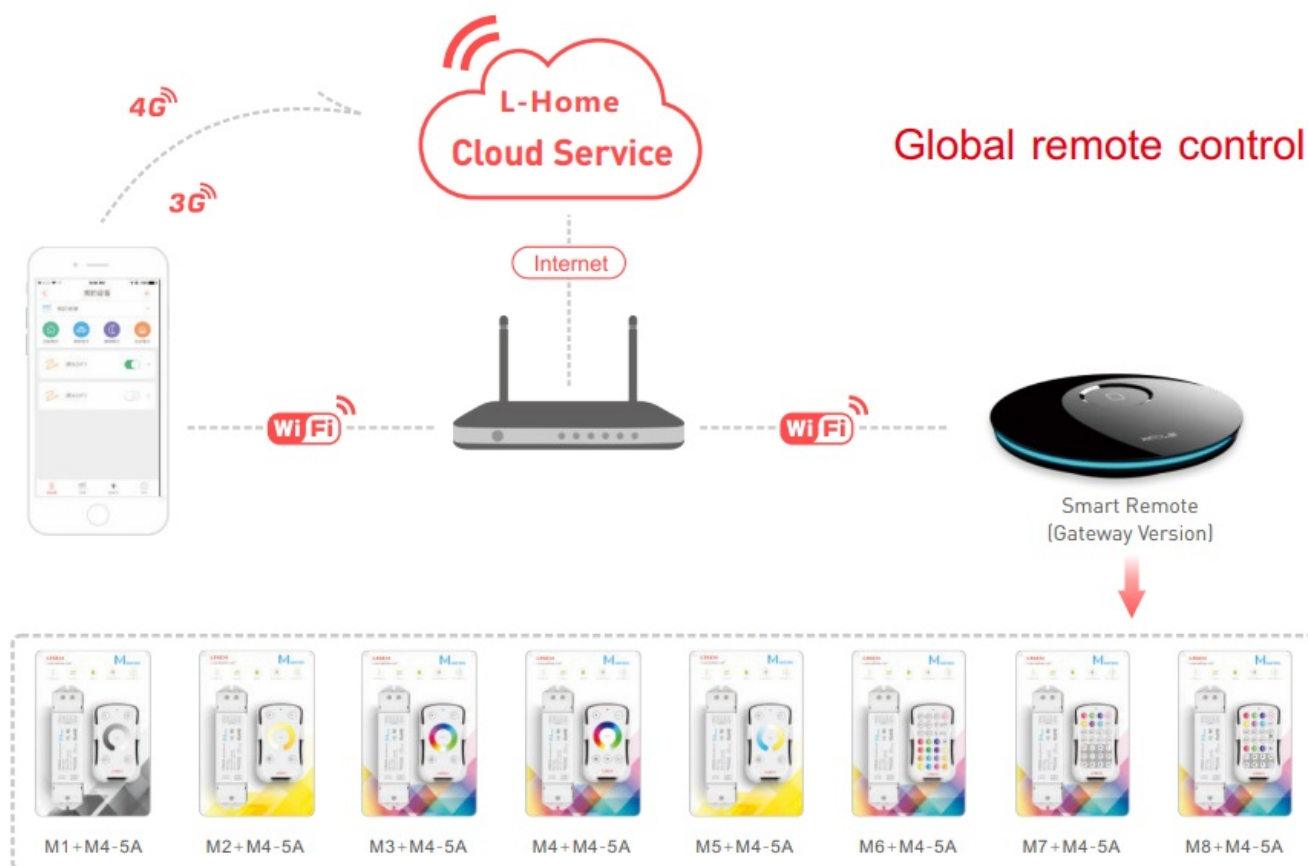


### Product Size:

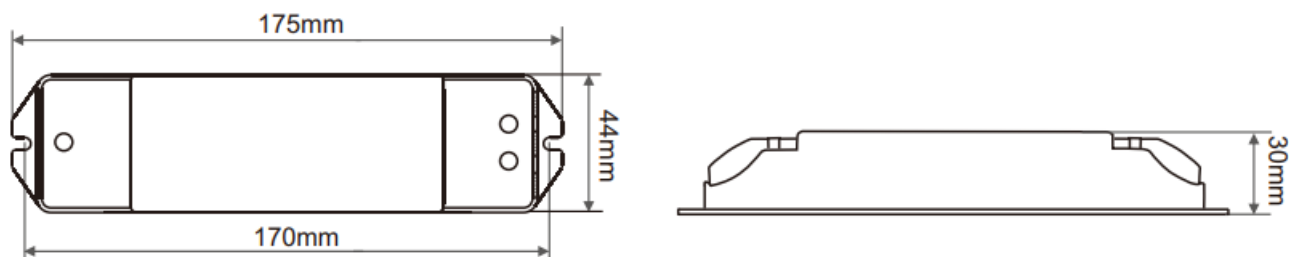 

Receiver

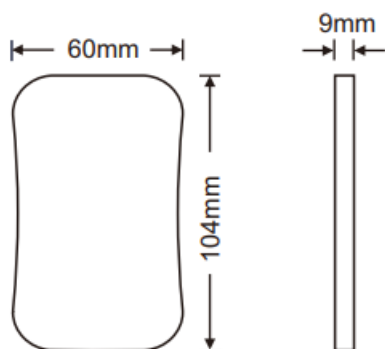 

Remote

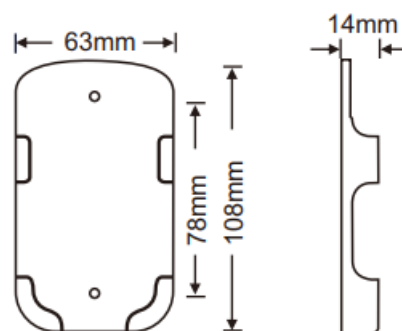 

Remote-holder

## The Learning ID Method of Remote Control:

Remote control has been matched to the receiver before leave factory, if deleted accidentally , you can learn ID as follow .


### Learning ID:

Short press ID learning button on the M4-5A receiver, the running light is on, then press any key on the M4/M8 remote control, the running light flashes several times, activated.



**Cancel ID:** Long press ID learning button on the M4-5A receiver for 5 seconds .

**Attn:** one receiver can be matched with max 10 same or different kinds remote.
 
## Operating Instruction for Receiver

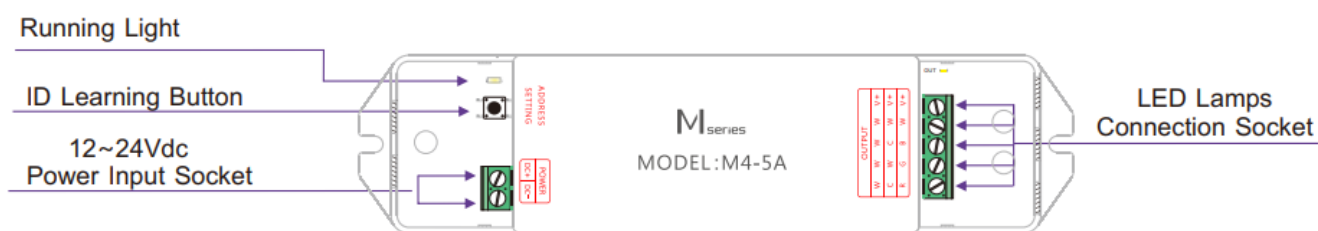

## Operating Instruction for Remote Control :

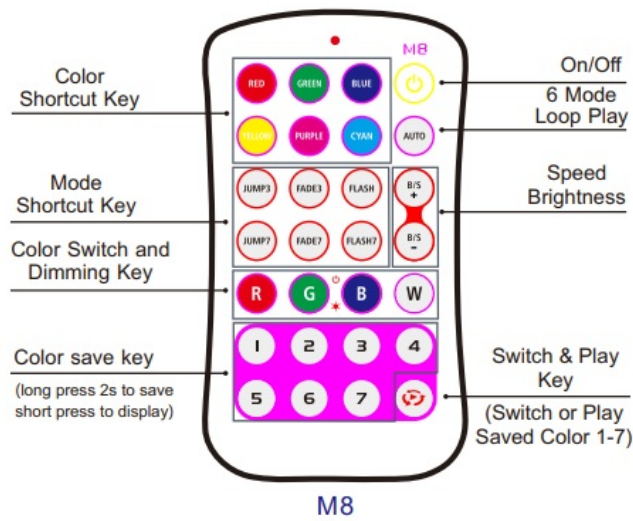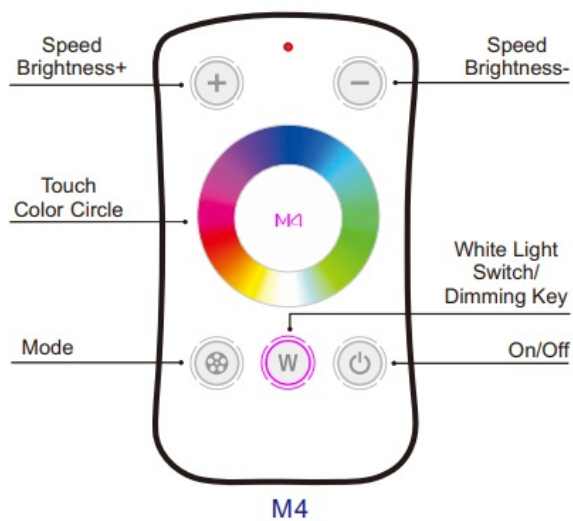  


**M4 Changing Mode Table**

No.	Mode	Instrutcion
1	Static Red	Brightness Adjustable
2	Static Green	Brightness Adjustable
3	Static Blue	Brightness Adjustable
4	Static Yellow	Brightness Adjustable
5	Static Purple	Brightness Adjustable
6	Static Cyan	Brightness Adjustable
7	Static White	Brightness Adjustable
8	RGB Skipping	Speed/Brightness Adjustable
9	7 Colors Skipping	Speed/Brightness Adjustable
10	RGB Color Smooth	Speed/Brightness Adjustable
11	Full-color Smooth	Speed/Brightness Adjustable
12	Static Black	White light can be turn/off and adjusted


**Wiring Diagram:**



 E.g. 1: Connected 12V lamp, loads 0~240W (5A×4CH×12V).

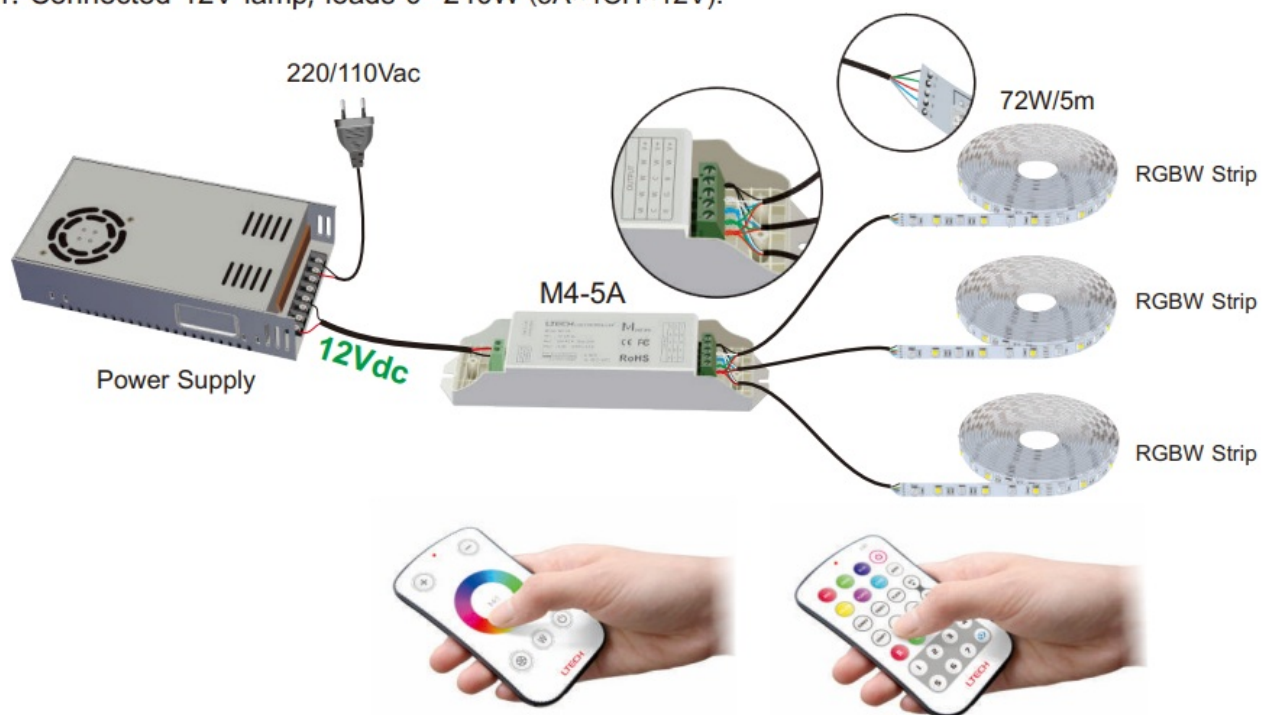

 
E.g. 2: Connected 24V lamp, loads 0~480W ( 5A×4CH×24V ).

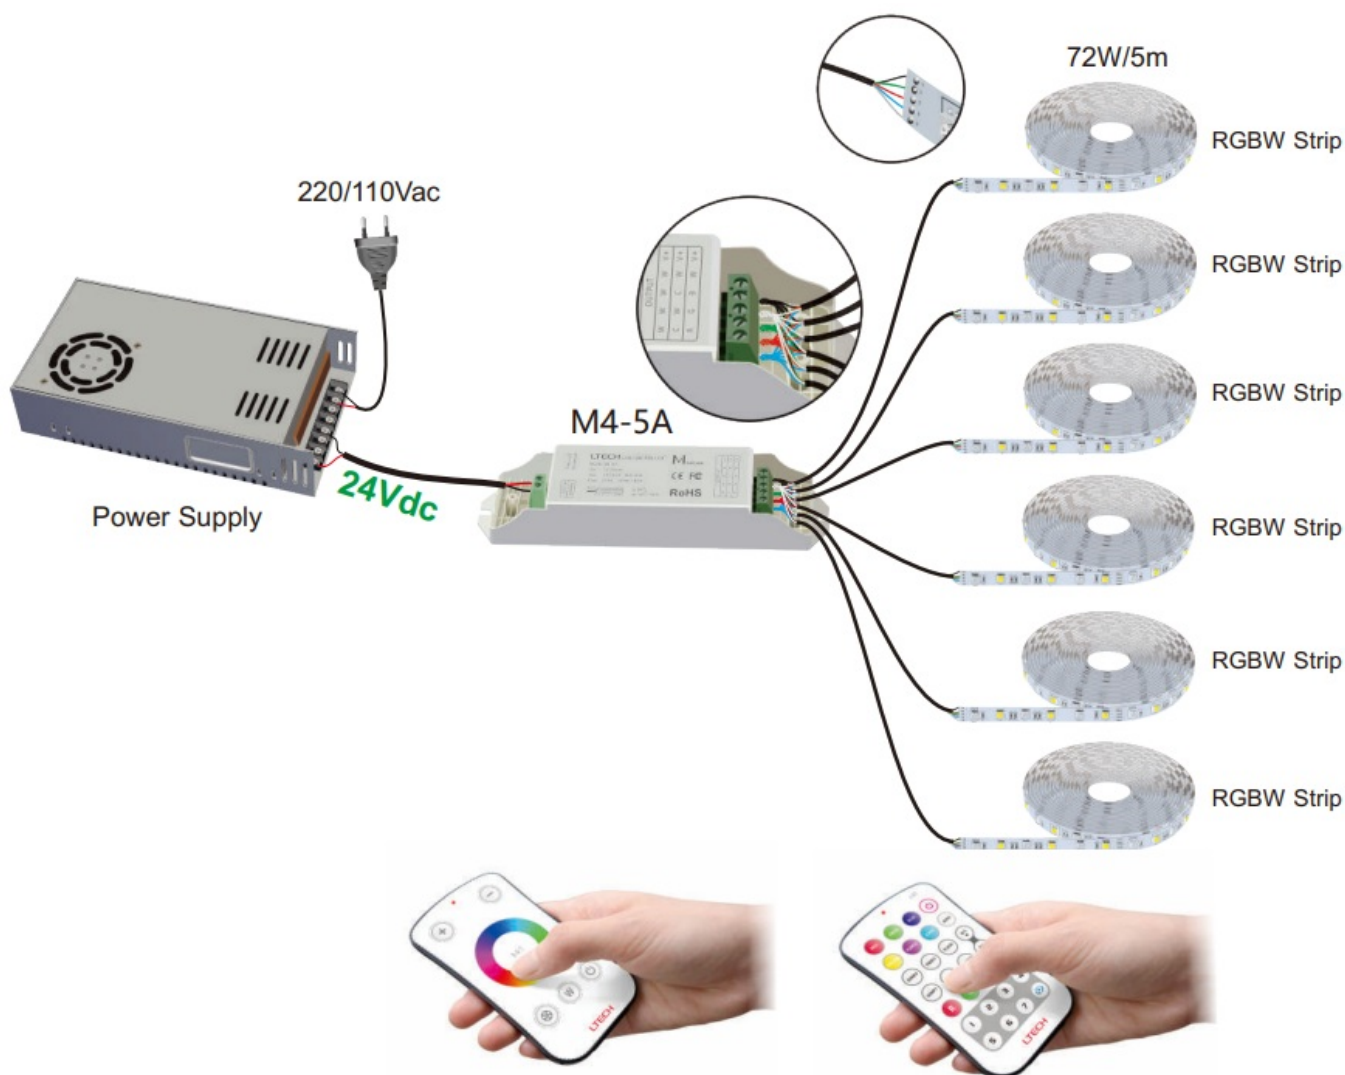

---

## Documents / Resources

	<p><a href="#">LTECH CHLSC16 Rgbw LED Controller</a> [pdf] User Manual CHLSC16 Rgbw LED Controller, CHLSC16, Rgbw LED Controller, LED Controller, Controller</p>
---	--

## References

- [LED Controller | LED Dimmable Driver | LED Intelligent Lighting | Intelligent Home -LTECH](#)
- [User Manual](#)

Manuals+.