



Luceco SOLAR GUARDIAN FLOODLIGHT WITH PIR SENSOR Installation Guide

[Home](#) » [LUCECO](#) » Luceco SOLAR GUARDIAN FLOODLIGHT WITH PIR SENSOR Installation Guide 

Contents

- [1 Luceco SOLAR GUARDIAN FLOODLIGHT WITH PIR SENSOR](#)
- [2 SOLAR GUARDIAN FLOODLIGHT WITH PIR SENSOR](#)
 - [2.1 ACCESSORIES:](#)
- [3 Drilling holes for Wall Bracket](#)
- [4 SOLAR GUARDIAN FLOODLIGHT WITH PIR SENSOR](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)


LUCECO 

Luceco SOLAR GUARDIAN FLOODLIGHT WITH PIR SENSOR





SOLAR GUARDIAN FLOODLIGHT WITH PIR SENSOR

ACCESSORIES:

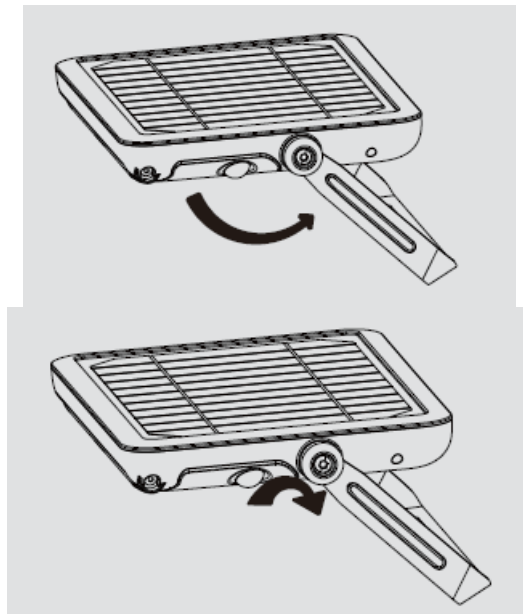

Drilling holes for Wall Bracket

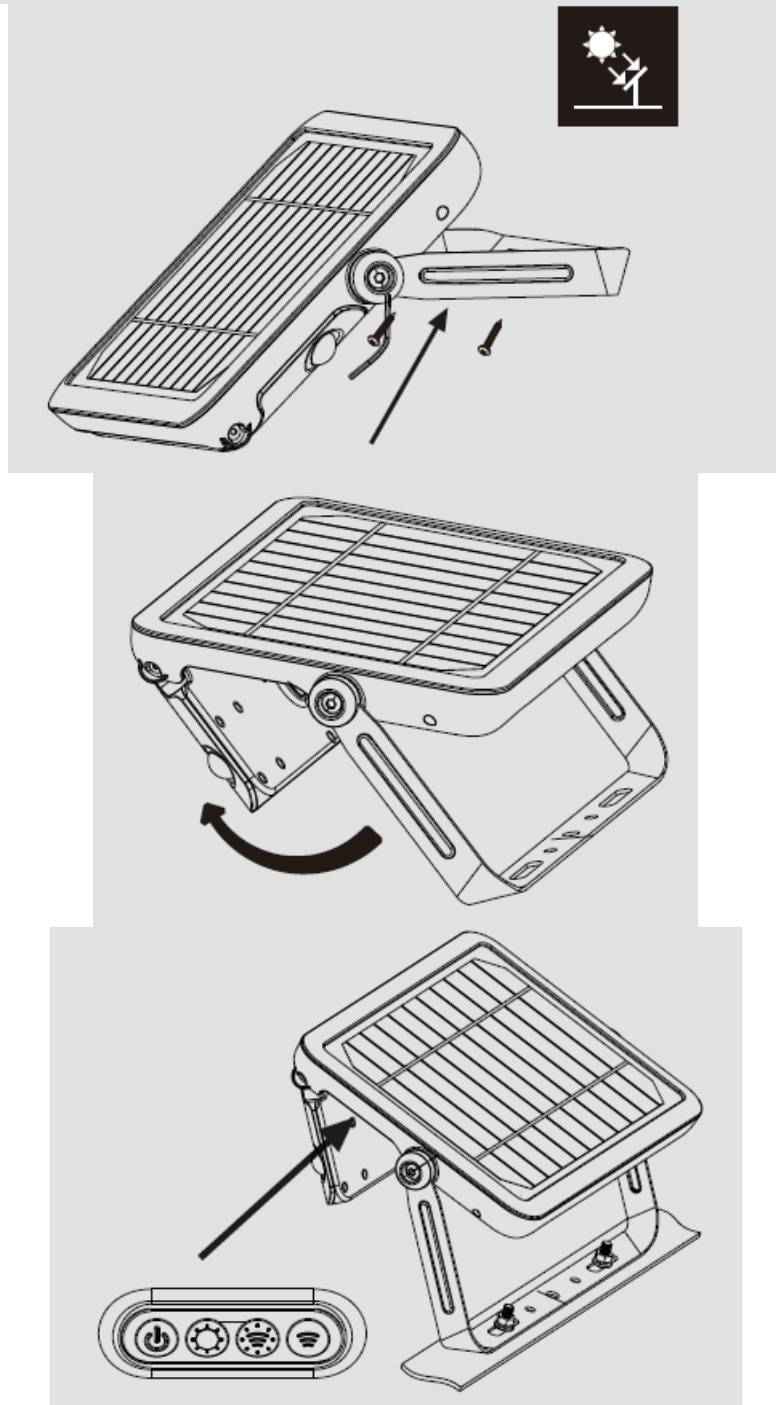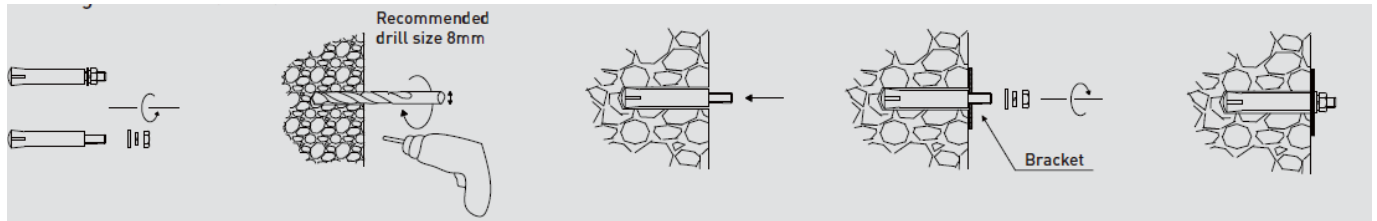

SOLAR GUARDIAN FLOODLIGHT WITH PIR SENSOR

WORKING MODE SELECTION:

- On/Off

Dusk till Dawn

Automatically turns on at the dusk and remains 20% brightness.

Security

Automatically turns on to full brightness (1080lm) when motion is detected in the range <8mtrs and then turns to 3% brightness in 20 seconds of no motion.

Presence

Automatically turns on to full brightness (1080lm) when motion is detected in the range < 8mtrs and then turns off in 30 seconds of no motion.

Documents / Resources



[Luceco SOLAR GUARDIAN FLOODLIGHT WITH PIR SENSOR](#) [pdf] Installation Guide
SOLAR GUARDIAN FLOODLIGHT WITH PIR SENSOR, SOLAR GUARDIAN FLOODLIGHT

References

-  [Luceco | LED Lighting](#)
-  [Luceco](#)

[Manuals+](#).