



Lumens OIP-N Encoder Decoder User Manual

[Home](#) » [Lumens](#) » Lumens OIP-N Encoder Decoder User Manual 

Lumens[®] Routing Switcher User Manual



Version 0.3.1

Contents

- [1 Chapter 1 System Requirements](#)
- [2 Chapter 2 How to Connect](#)
- [3 Chapter 3 Operation Interface](#)
- [4 Chapter 4 Troubleshooting](#)
- [5 Copyright Information](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Chapter 1 System Requirements

1.1 Operating System Requirements

- Windows 10 (after ver. 1709)
- Windows 11

1.2 System Hardware Requirements

Item	Requirements
CPU	Intel® Core™ i3 or later, or equivalent AMD CPU
GPU	Integrated GPU(s) or Discrete Graphic(s)
Memory	8 GB of RAM
Free Disk Space	1 GB free disk space for installation
Ethernet	100 Mbps network card

Chapter 2 How to Connect


Make sure the computer, OIP-N Encoder/Decoder, Recording System and VC cameras are connected in the same network segment.



Chapter 3 Operation Interface


3.1 Login Screen

The image shows the login interface of the 'Routing Switcher' application. The window title is 'Routing Switcher' with a Lumens logo. The interface features the Lumens logo at the top. Below it, there are five numbered steps: 1. 'User Name' input field with a person icon; 2. 'Password' input field with a lock icon and a toggle for visibility; 3. 'Remember Me' checkbox and a 'Forgot Password?' link; 4. 'Language' dropdown menu currently set to 'English'; 5. 'Log in' button. The interface is clean and modern with a light blue and white color scheme.



No	Item	Function Descriptions
1	Username / Password	<p>Please enter user account/password (default: admin/admin)</p> <p>Note For initial login, you need to enter a new account, password and email address to create account information</p> 
2	Remember password	Save username and password. When you log in next time, there is no need to re-enter them
3	Forgot Password	Enter the email address you entered when registered to reset your password
4	Language	Language of the software – English is available
5	Login	Log in to the administrator screen on the website


3.2 Configuration

 3.2.1 Source

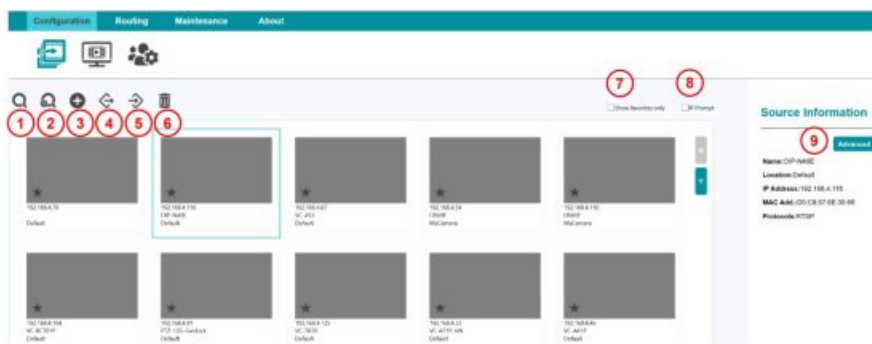


No	Item	Function Descriptions
1	Scan	<p>Search for devices in the LAN; RTSP/NDI streaming supported</p> <p>By default, the normal mode can search for RTSP. If you need to search for NDI, please go to the Discovery Settings page to configure it</p>

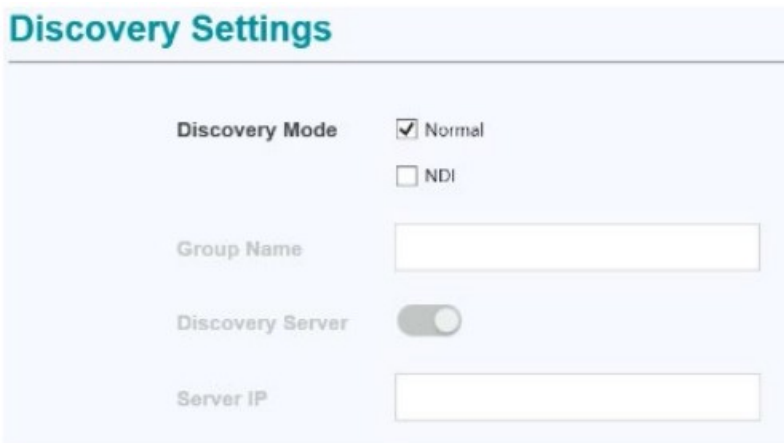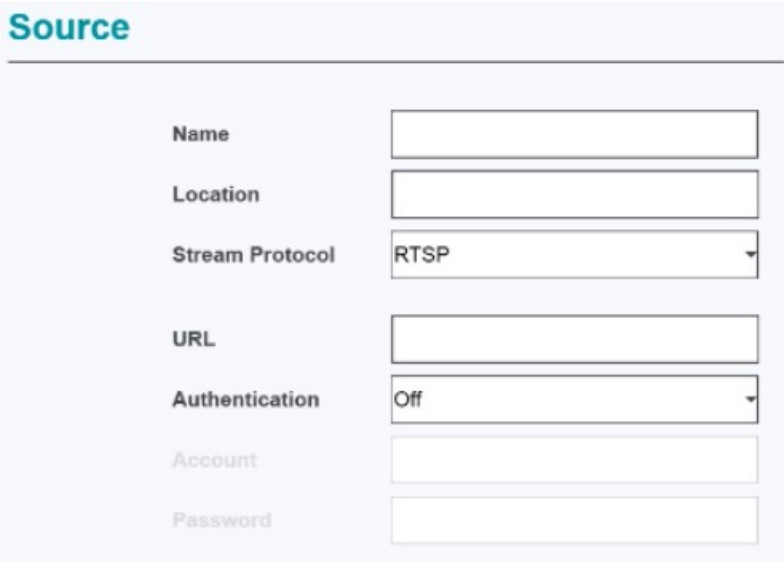
2	Discovery Settings	<p>Search for the streaming in the LAN (multiple selections supported)</p>  <p>Select NDI to configure the following settings:</p> <ul style="list-style-type: none"> ■ Group Name: Enter the group location <p>Note</p> <ul style="list-style-type: none"> ▷ The string can contain commas (,) to distinguish different groups ▷ The maximum string length is 127 characters ■ Discovery Server: Enable/Disable Discovery Server ■ Server IP: Enter the IP address
3	Add	<p>Manually add the signal source</p>  <ul style="list-style-type: none"> ■ Name: Device Name ■ Location: Device Location ■ Stream Protocol: signal source RTSP/SRT (Caller)/HLS/MPEG-TS over UDP ■ URL: The streaming address ■ Authentication: By enabling, you can set the account/password
4	Export	Export configuration data, which can be imported into other computers
5	Import	Import configuration data, which can be imported from other computers
6	Delete	Delete the selected streaming, with support for deleting multiple selections at once
7	Show favorites only	<p>Only the favorites will be shown</p> <p>Click the asterisk (★) in the lower left corner of the preview screen to add the device to your favorites</p>

8	IP Prompt	Show the last two digits of the IP address
9	Source Information	<p>Clicking the preview screen will show the source information</p> <p>Click Advanced to open the window for advanced function setting</p> <p>Note The displayed items may vary depending on the model of the source</p>  <ul style="list-style-type: none"> ■ User Name: Username ■ Password: Password ■ Stream Audio From (Stream Audio Source) <ul style="list-style-type: none"> ▷ Encode Sample Rate: Set encode sample rate ▷ Audio Volume: Adjust Audio Volume ■ Audio in Type: Audio in Type (Line In/MIC In) <ul style="list-style-type: none"> ▷ Encode Sample Rate: Encode sample rate (48 KHz) ▷ Audio Volume: Adjust audio volume ■ Audio Out Source <ul style="list-style-type: none"> ▷ Audio Volume: Adjust audio volume ▷ Audio Delay Time: Set the audio signal delay time (0 ~ 500 ms) ■ Factory Reset: Reset all configurations to factory default settings

 
3.2.2 Display

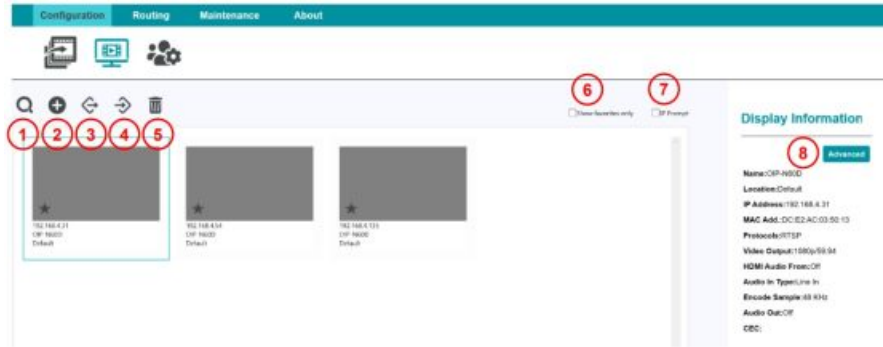

No	Item	Function Descriptions
1	Scan	Search for devices in the LAN
2	Add	Manually add the display source
3	Export	Export configuration data, which can be imported into other computers
4	Import	Import configuration data, which can be imported from other computers
5	Delete	Delete the selected streaming, with support for deleting multiple selections at once
6	Show favorites only	Only the favorites will be shown Click the asterisk (★) in the lower left corner of the preview screen to add the device to your favorites
7	IP Prompt	Show the last two digits of the IP address

8	Display Information	<p>Clicking the preview screen will show the device information.</p> <p>Click Advanced to open the window for advanced function setting.</p> <p>Note The displayed items may vary depending on the model of the source</p>  <ul style="list-style-type: none"> ■ User Name: Username ■ Password: Password ■ Video Output: Output Resolution ■ CEC: Enable/Disable the CEC function ■ HDMI Audio From: Set the HDMI audio source ▷ Audio Volume: Adjust audio volume ▷ Audio Delay Time: Set the audio signal delay time (0 ~ -500 ms) ■ Audio in Type: Audio in Type (Line In/MIC In) ▷ Encode Sample Rate: Set Encode sample rate ▷ Audio Volume: Adjust audio volume ■ Audio Out: Audio output source ▷ Audio Volume: Adjust audio volume ▷ Audio Delay Time: Set the audio signal delay time (0 ~ -500 ms) ■ Factory Reset: Reset all configurations to factory default settings
---	---------------------	---

 3.2.3 User

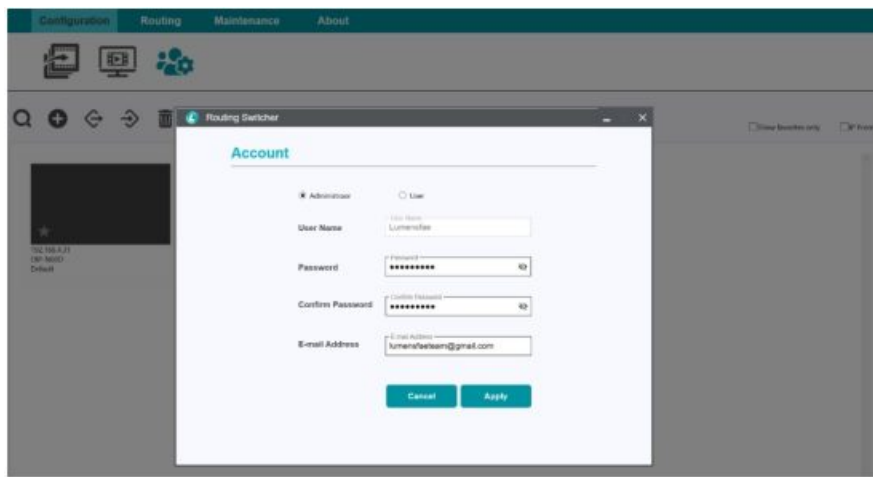

Function Descriptions

Display information of the administrator/user account

- Account: Supporting 6 ~ 30 characters
- Password: Supporting 8 ~ 32 characters
- User Permissions:

Function Items	Admin	User
Configuration	V	X
Routing	V	V
Maintenance	V	V


3.3 Routing

3.3.1 Video




No	Item	Function Descriptions
1	Signal source list	Show the source list and the display list Select a signal source and drag it to the display list
2	Show favorites only	Only the favorites will be shown Click the asterisk (★) in the lower left corner of the preview screen to add the device to your favorites
3	IP Prompt	Show the last two digits of the IP address

 3.3.2 USB

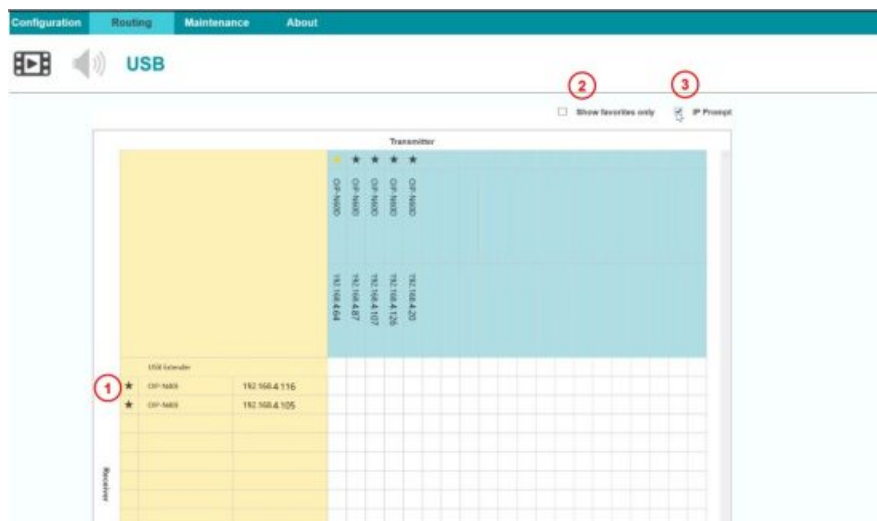


No	Item	Function Descriptions
1	USB Extender	To enable/disable the OIP-N60D USB Extender mode ● means On; a blank means Off
2	Show favorites only	Only the favorites will be shown Click the asterisk (★) in the lower left corner of the preview screen to add the device to your favorites
3	IP Prompt	Show the last two digits of the IP address

 3.4 Maintenance

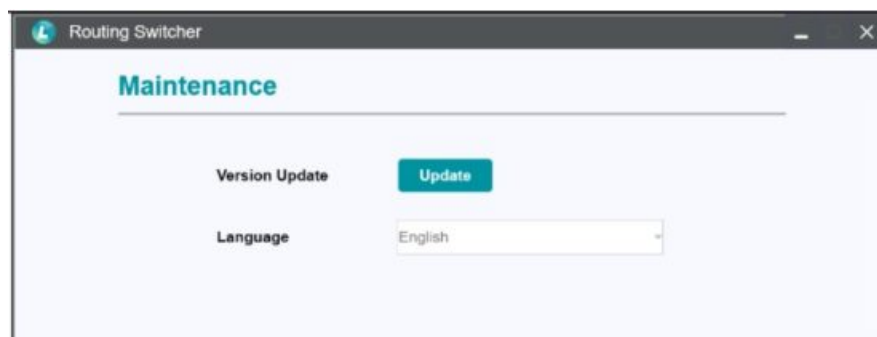

No	Item	Function Descriptions
1	Version Update	Click [Update] to check the version and update it
2	Language	Language of the software – English is available

 3.5 About

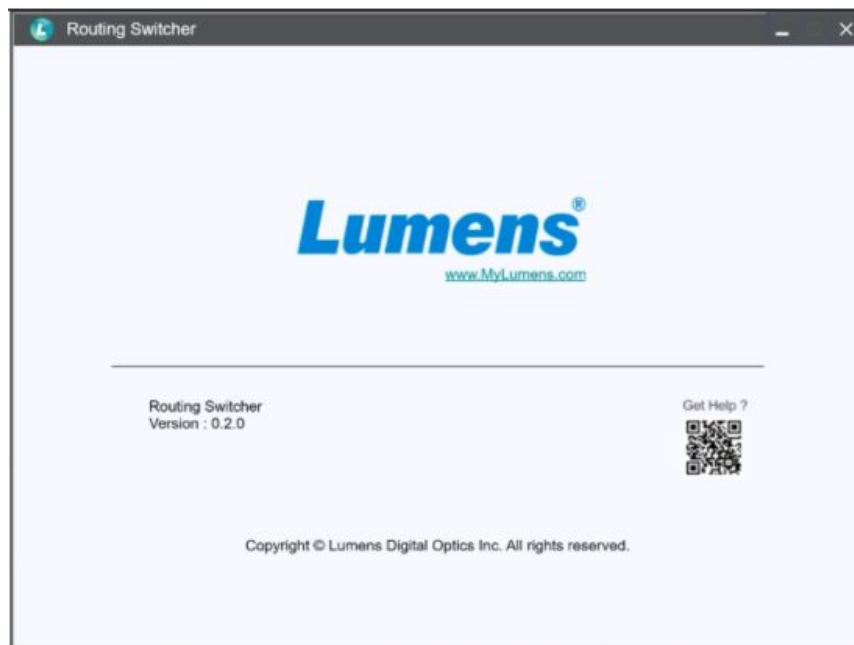

Function Descriptions

Display software version information. For technical support, please scan the QRcode at the bottom right.

Chapter 4 Troubleshooting

This chapter describes problems you may encounter while using Routing Switcher. If you have questions, please refer to related chapters and follow all the suggested solutions. If the problem still occurs, please contact your distributor or the service center.

No.	Problems	Solutions
1	Unable to search devices	Please make sure that the computer and the device are connected in the same network segment. (Refer to Chapter 2 How to Connect)
2	The operating steps in the manual are not consistent with the software operation	<p>The software operation may be different from the description in the manual due to functional improvement. Please make sure you've updated your software to the latest version.</p> <p>■ For the latest version, please go to the Lumens official website > Service Support > Download Area. https://www.MyLumens.com/support</p>

Copyright Information

Copyrights © Lumens Digital Optics Inc. All rights reserved.

Lumens is a trademark that is currently being registered by Lumens Digital Optics Inc.


Copying, reproducing or transmitting this file is not allowed if a license is not provided by Lumens Digital Optics Inc. unless copying this file is for the purpose of backup after purchasing this product.

In order to keep improving the product, the information in this file is subject to change without prior notice.

To fully explain or describe how this product should be used, this manual may refer to names of other products or companies without any intention of infringement.

Disclaimer of warranties: Lumens Digital Optics Inc. is neither responsible for any possible technological, editorial errors or omissions, nor responsible for any incidental or related damages arising from providing this file, using, or operating this product.

Documents / Resources

	Lumens OIP-N Encoder Decoder [pdf] User Manual OIP-N Encoder Decoder, Encoder Decoder, Decoder
---	---

References

- [Download | Lumens](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.