

**Lumens PS751 Desktop Document Camera**



# Lumens PS751 Desktop Document Camera User Guide

[Home](#) » [Lumens](#) » Lumens PS751 Desktop Document Camera User Guide 

## Contents

- [1 Lumens PS751 Desktop Document Camera](#)
- [2 Getting Started](#)
- [3 Installation & Connection](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)

# **Lumens**<sup>TM</sup>

## Lumens PS751 Desktop Document Camera




**Important**


- Please activate your warranty at [www.MyLumens.com/reg](http://www.MyLumens.com/reg)
- Please visit our website [www.MyLumens.com/goto.htm](http://www.MyLumens.com/goto.htm) to download the latest version of the Software, Multilingual User Manual and Quick Start Guide.

## User Condition

- For the installation instructions, please refer to the 2. Installation & connection on the rear side.

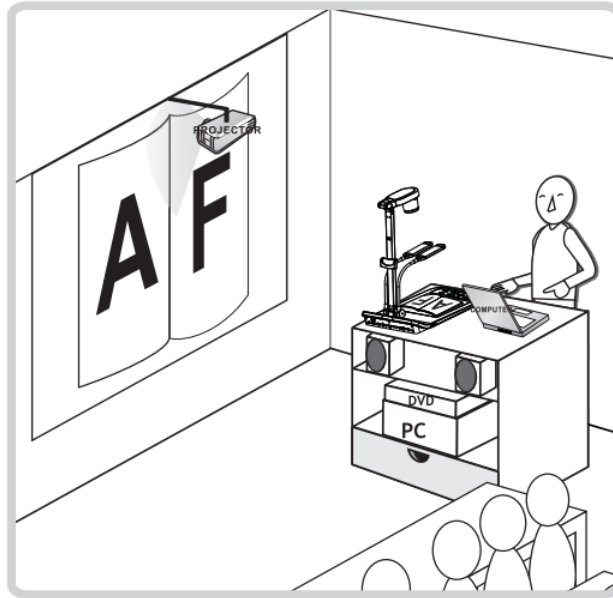

## Getting Started

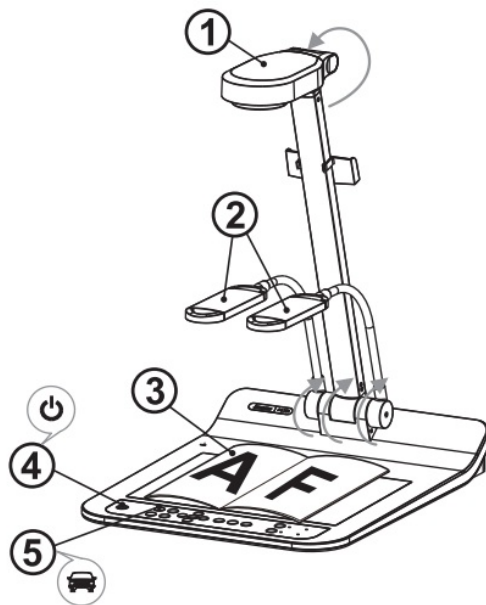

- Please confirm the local voltage and frequency, for example, the default 60Hz is applicable in the US, Taiwan, Japan, etc., and 50Hz in Europe and other areas. Please set up the DIP SWITCH as in the figure on the right





4 please see PS751 User's Manual Attachment 1 for the frequency used.

1. Pull up the camera and the camera arm. The camera should aim at the center of the presenter.

2. Pull up the lamp arm and adjust it to the appropriate position.
  3. Place an object to be displayed under the camera. A Turn the power on.
  4. Press the [AUTO TUNE ] button to optimize the image. You are ready to teach / present.
- According to your request, you can adjust the camera head slightly to aim at the centre of the documents when the anchor of the lens is reached.

1. Pull up the camera and the camera arm. The camera should aim at the center of the presenter.
2. Pull up the lamp arm and adjust it to the appropriate position.
3. Place an object to be displayed under the camera.



4. Turn the power on. 

5. Press the [ AUTO TUNE ]  button to optimize the image. You are ready to teach / present.


According to your request, you can adjust the camera head slightly to aim at the centre of the documents when the anchor of the lens is reached.

## Installation & Connection




- Connect to a Projector or Monitor
- Connect to a Computer and Use Lumens' Software or Connect to an Interactive Whiteboard (IWB).
- Connect a Projector, Computer and Monitor simultaneously

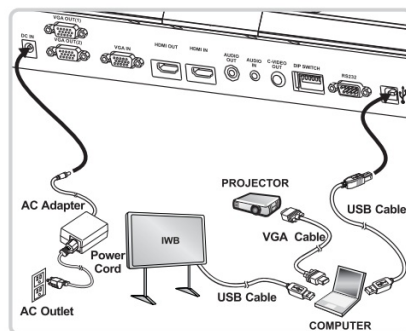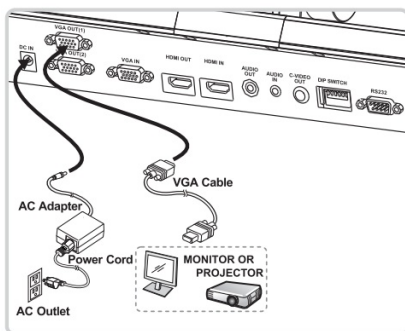

\* Driver and software can be downloaded from Lumens website.

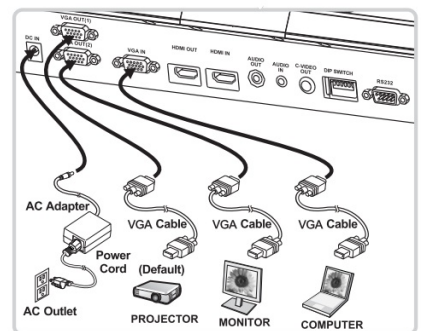

- Connect to a TV
- Connect to an HDTV
- Connect to a Computer or DVD

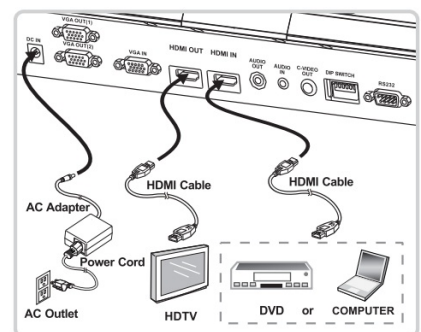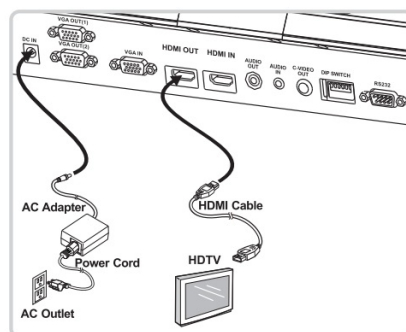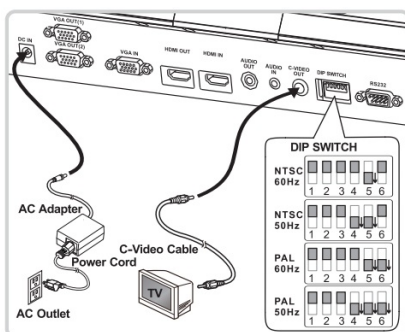


- NTSC: USA, CANADA, MEXICO, PANAMA, CHILE, JAPAN, TAIWAN, KOREA AND PHILIPPINES.
- PAL: Country/region not listed above.
- Please confirm the local voltage and frequency, for example, the default 60z applicable in the US, Taiwan, Japan, etc., and 50Hz in Europe and other areas. Please see PS751 User's Manual Attachment 1 for details.

- After the unit is restarted, the new DIP switch configuration is effective. Once C-Video is on, VGA is not supported.

---

## Documents / Resources
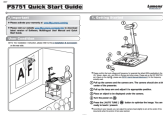
|   |   |
|---|---|
|  | <a href="#">Lumens PS751 Desktop Document Camera</a> [pdf] User Guide<br>PS751 Desktop Document Camera, PS751, Desktop Document Camera, Document Camera, Camera |
|---|---|

## References

-  [Manual-Hub.com - Free PDF manuals!](#)
- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.