

Lumens VS-KB21 IP Camera Controller Installation Guide

Home » Lumens » Lumens VS-KB21 IP Camera Controller Installation Guide 1




Contents

- 1 Lumens VS-KB21 IP Camera Controller
- 2 Product IO Overview
- 3 Menu Main Button Operation Instructions
- 4 Camera Setting
- **5 How to Connect IP**
- 6 RS-232/RS-422 Connection Instruction
- 7 Documents / Resources
 - 7.1 References



Lumens VS-KB21 IP Camera Controller



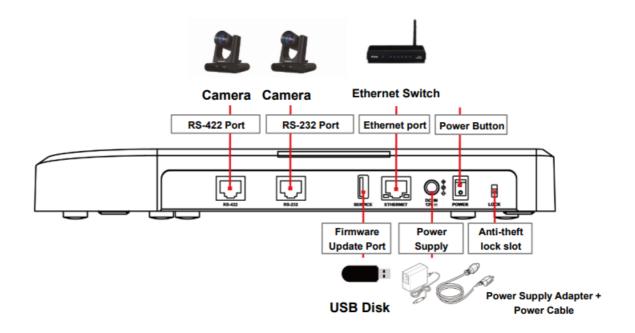

NOTE

- Ethernet port supports PoE (IEEE 802.3af) power supply
- RS-232/ RS-422 port do not support POE. Please do not connect with POE Switch

Menu Main Button Operation Instructions

When the menu is activated, the Focus button is the main control button.

- Left/Right rotation: Adjust parameters and navigate the menu
- Press: Perform "Confirm" action



Initial setting

- 1. Use the DC 12V power cord provided with the accessory or power it with a PoE (IEEE 802.3af) compatible network switch
- 2. Use the network cable (CAT5e or CAT6) to connect the IP port on the back of the keyboard to the local area network
- 3. If using a power cord for the power supply, please press the power button to turn on the control keyboard

Camera Setting

IP Control

Confirm that the camera and the control keyboard are on the same network segment, such as 192.168.100.xxx

RS-232/RS-422 Control


Confirm that the camera control port/protocol/baud rate/VISCA address and other parameter settings match the control keyboard

Depending on the camera, the following methods are supported to adjust the parameters

- Setting Menu: [System]
- Webpage: (According to different webpage versions, there are two possible paths for settings.) [Settings] >
 [Maintenance] > [System Services] > [Control Port/Protocol/Baud Rate] [System] > [Control] >
 [Baud Rate]
- Camera bottom Dip Switch settings

How to Connect IP


- 1. Connect the keyboard and camera to the network switch
 - If not connected to a network switch, the default IP for the control keyboard is 192.168.100.100. Please set the camera to the same network segment

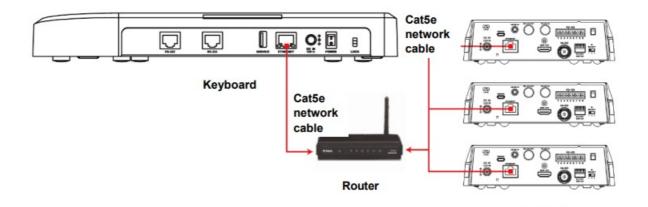


- 2. Add the camera to the device list
 - 1. Automatic search camera Press [SEARCH] > Select search mode > Select camera > Save camera to list

Camera

VISCA Over IP

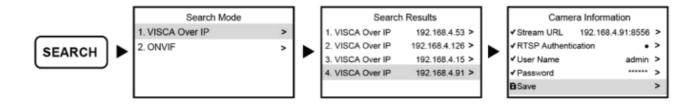


ONVIF

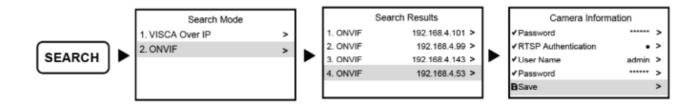


NDI (only applicable to VS-KB21N)



Manually add camera Press [SETTING] > [Device Management] > Set Control Protocol/IP Address > Save to List

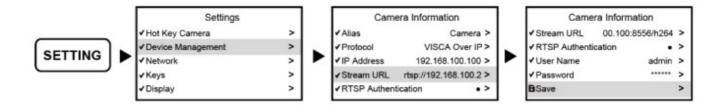

Confirm CAM ID in the [CAM LIST]

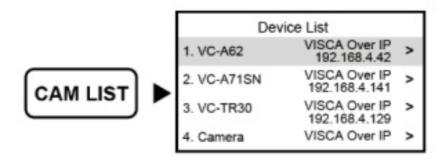


1 CAM

Press the number and then [CAM] to call the camera. e.g


Preview streaming video

IP connection supports previewing camera RTSP streaming. Confirm screen display preview icon > press [PVW] > display camera RTSP streaming image


• Press the [PVW] button again to exit the streaming video screen

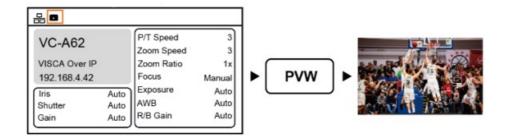

RS-232/RS-422 Connection Instruction

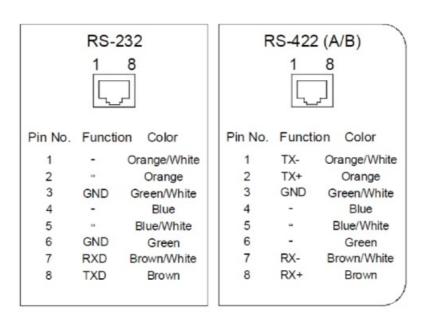



- Please refer to the pin definitions of RS-232/RS-422 for connecting the camera and control keyboard. RS-232
 connection can be used with Lumens optional accessory VISCA cable extender (VC-AC07), combined with a
 network cable, no need to wire it yourself to use with control keyboard
- 2. Set camera Press [SETTING] > [Hot Key Camera] > select camera > set VISCA/IP address/baud rate and other information to match the camera

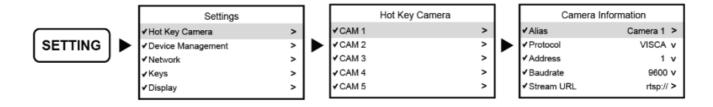

- 3. Call the camera Setup complete, select the [Hot Key Camera] (e.g. 1) to call the camera
- 4. If the camera is daisy-chained, please refer to the pin definition of camera to complete the connection of multiple cameras.

RS-232

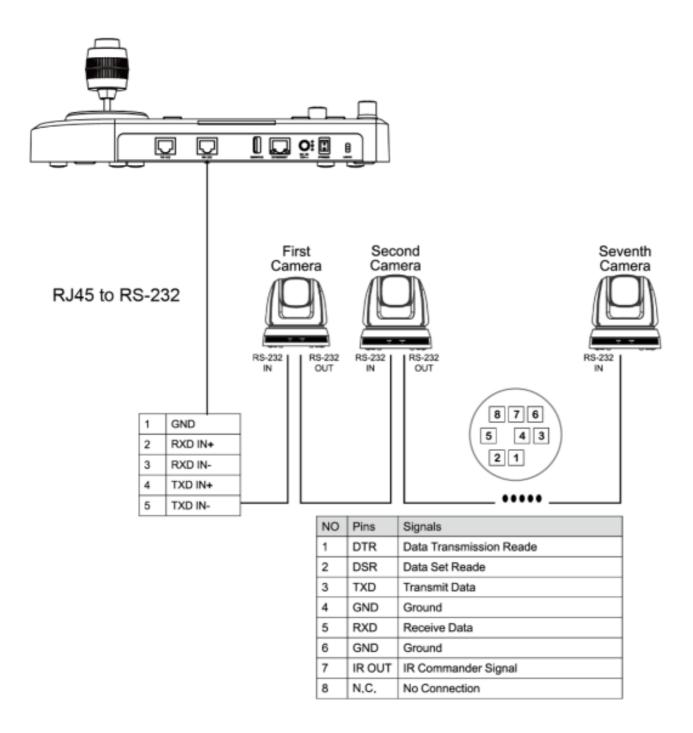

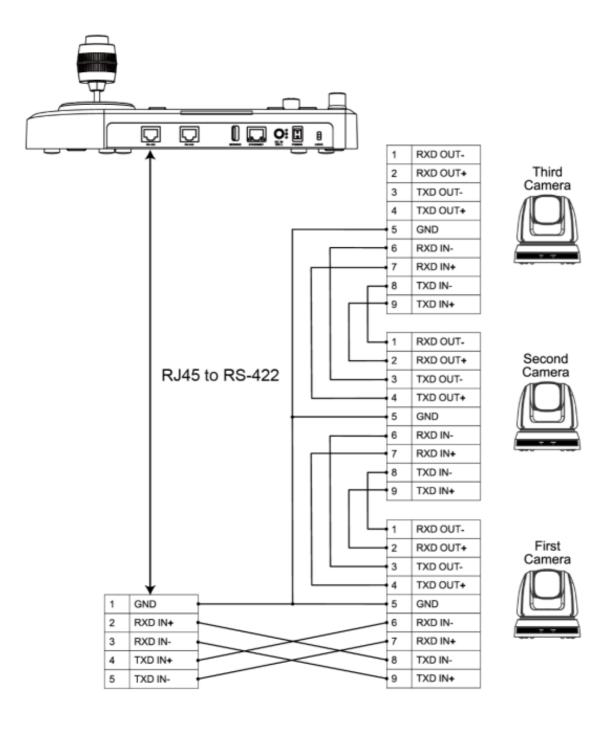

• For questions about the installation, please scan the QR Code. A support person will be assigned to assist you.



• www.MyLumens.com

Documents / Resources



Lumens VS-KB21 IP Camera Controller [pdf] Installation Guide

VS-KB21, VS-KB21 IP Camera Controller, IP Camera Controller, Camera Controller, Controller, Controller

References

- <u>Lumens Pro AV Technology | Lumens</u>
- <u>Lumens Pro AV Technology | Lumens</u>
- User Manual

Manuals+, Privacy Policy