



Luminans JP-ST64FWB WiFi E27 LED Bulb Drop form Instruction Manual

[Home](#) » [Luminans](#) » Luminans JP-ST64FWB WiFi E27 LED Bulb Drop form Instruction Manual 

Contents

- [1 Luminans JP-ST64FWB WiFi E27 LED Bulb Drop form](#)
- [2 Descripon](#)
- [3 Usage and Connection](#)
- [4 Use with Voice Assistants](#)
- [5 Technical Specification](#)
- [6 FAQ](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Luminans

Luminans JP-ST64FWB WiFi E27 LED Bulb Drop form



Descripon

 
Sigge can be controlled through an App in your mobile or tablet. In the App you can set up your device and create scenarios and schedules for your lighting.

Usage and Connection


1. Download and install the app “TuyaSmart” from the Apple App Store or Google Play on your smart device.
Scan the QR code below for a direct link to the App.
2. Launch the “TuyaSmart” app.



3. Create a new account or log in to your exisng account.
4. Make sure Bluetooth is turned on in your smart device, as it’s necessary for the connection.
5. Screw in the lamp in a E27 socket, and turn on the power. If the light does not flash: Turn the power on and off, on – off – on – off – on.
6. When the light flashes, Sigge will appear in the app. If Sigge does not show up, press “+” in the upper right corner.

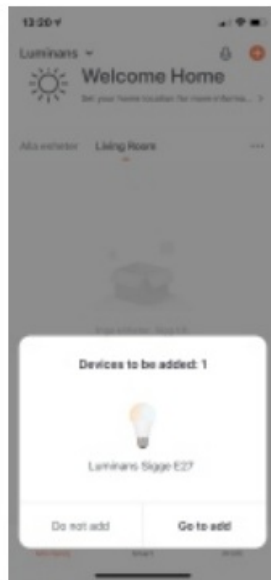

 7. Add Sigge by clicking on “+”.

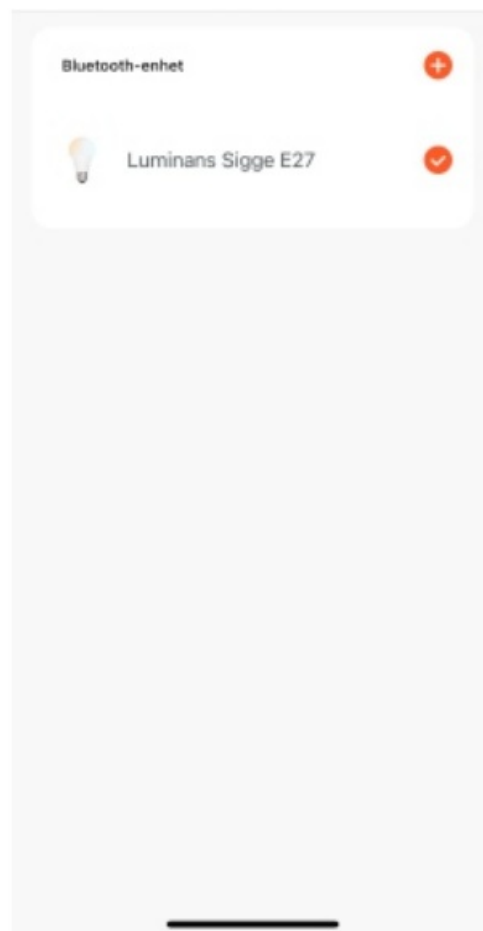

8. Confirm Wi-Fi network and password.

13:20



Avbryt

All Devices

Bluetooth-enhet



Ange Wi-Fi-lösenord

Den här appen stöder bara 2,4 GHz Wi-Fi-nätverk.



2.4GHz



5GHz



Avbryt

Bekräfta



9. Name the unit, please observe that this will be the same name used when addressing the device from your voice assistants.

13:21



Klart

Added.



Luminans Sigge E27



 
Tillägg av enheten lyckades.

Living Room


NOTE: Do not use Sigge together with an external dimmer, Sigge can only be dimmed via App in a mobile or a tablet.

Use with Voice Assistants


1. Select a device to connect to voice assistant.

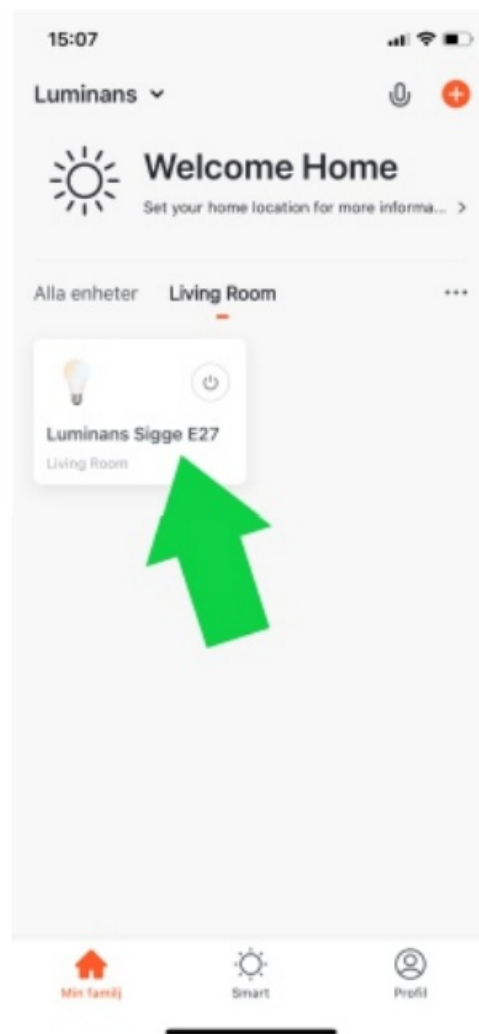

 
2. Click the pen to see the device information.

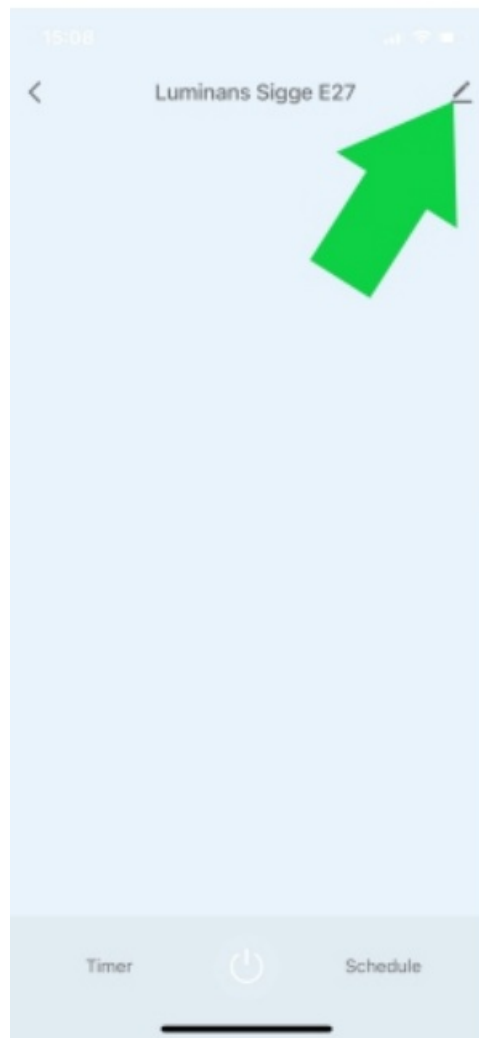

 3. Select the voice assistant (s) you want to connect.

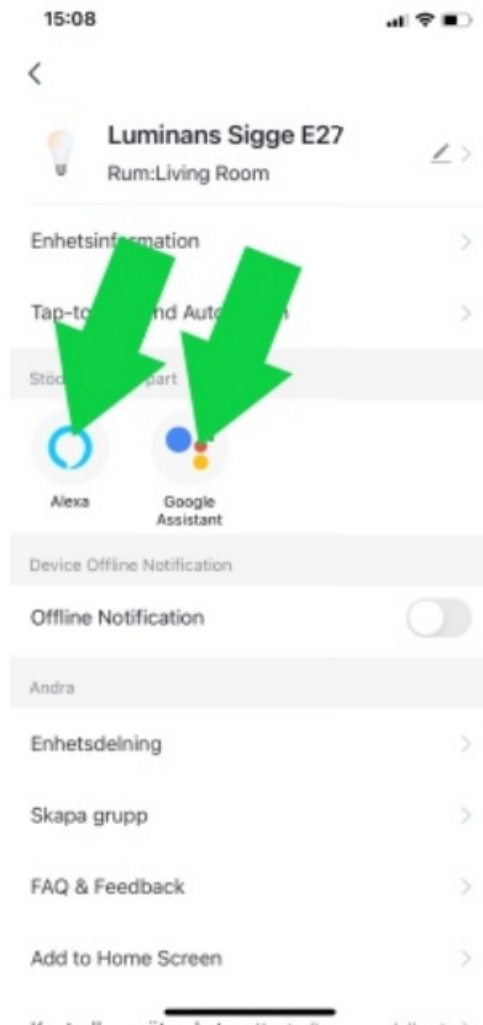

 4. Connect the lighting to your voice assistant by logging in to the associated account.

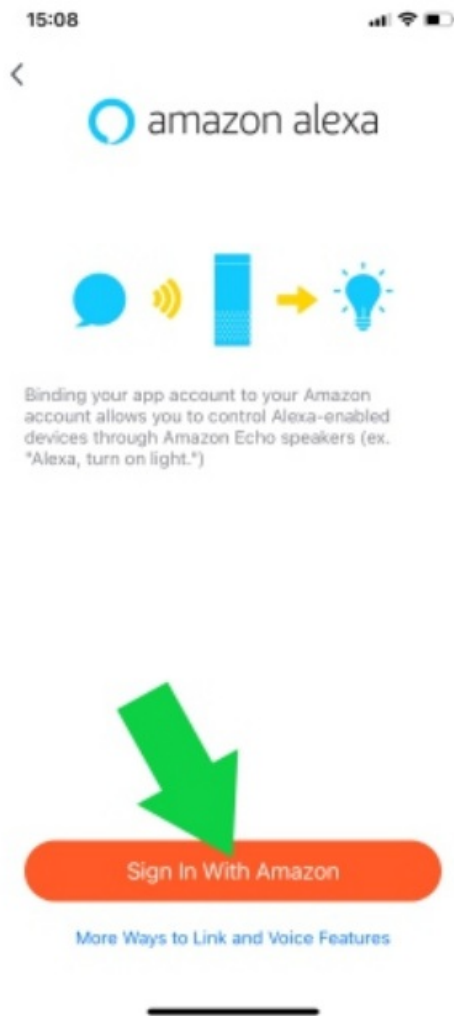

CAUTION

- To reduce the risk of electric shock this product should only be opened by an authorized person.
- Unplug the power cord from the wall outlet, if any problems arise.
- Read the operating instructions carefully before use. Keep the instructions for use for future needs.
- Use the device only for its intended purpose.
- Do not use the device if any part is damaged or incorrect. If the device is damaged or incorrectly, it must be replaced immediately.
- The device is for indoor use only. Do not use the device outdoors.
- Do not expose the product to water or moisture.
- Do not touch the device with wet hands.
- Make sure the base of the bulb matches the lamp holder.

Technical Specification

- **Model Name:** JP-ST64FWB
- **Power / Lumen Output:** 7W / 800 lm
- **Color Temperature:** 2700K – 6500K
- **Mains:** 220-240 VAC / 50Hz
- **Radio Wi-Fi/BLE:** 2.405 – 2.483GHz <20dBm
- **Operating temperature:** -10°C II +40°C

- **Radio range (max):** 100m outdoor, 20m indoor
- **IP range:** IP20
- **Guarantee:** 1year

Radio Standard

- ETSI EN 300 328 V2.2.2 (2019-07)

EMC Standard

- EN 301489-1 V2.1.1 (2017-02),
- EN 301489-17 V3.1.1 (2017-02),
- EN 55015:2013 +A1:2015,
- EN 61547:2009

Safety Standard (LVD)

- IEC 60669-2-1:2002/AMD1:2008/AMD2:2015,
- IEC 60669-1:1998/AMD1:1999/AMD2:2006
- EN 60669-2-1:2004 +A1:2009 +A12:2010,
- EN 60669-1:2018, EN 62311:2008

RoHS Standard

- 2011/65/EU, (EU) 2015/863

Radio Equipment (RED)

- Complies with 2014/53/EU Directive

FAQ

- **Q1: What do you do if Sigge does not connect to your Wi-Fi?**
 - **a.** Check that Sigge is properly connected and has power.
 - **b.** Make sure Bluetooth is enabled on your mobile / tablet.
 - **c.** Make sure that Sigge and mobile / tablet are connected to the same network.
 - **d.** Are the devices connected to the internet?
 - **e.** Check that the password for your Wi-Fi is entered correctly.
 - **f.** Check that any firewall is not blocking traffic.
- **Q2: What happens if my Wi-Fi connection is lost?**
 - Sigge must be connected to Wi-Fi to be controlled via the App.
- **Q3: How to change Wi-Fi network or password for Wi-Fi?**
 - Repeat the pairing process from step 5.
- **Q4: How do you reset Sigge?**

- Switch the power to the luminaire on/off 3 times in quick succession (OFF-ON-OFF-ON-OFF-ON), then wait 1-3 seconds until Miguel starts flashing

Documents / Resources



[Luminans JP-ST64FWB WiFi E27 LED Bulb Drop form](#) [pdf] Instruction Manual
JP-ST64FWB, WiFi E27 LED Bulb Drop form, JP-ST64FWB WiFi E27 LED Bulb Drop form, E27
LED Bulb Drop form, LED Bulb Drop form, Bulb Drop form

References

- 🌱 [Luminans LED lighting without compromise - Luminans](#)