

2A3N8LUMIOTENO lumioteno Instruction Manual

Home » Lumio » 2A3N8LUMIOTENO lumioteno Instruction Manual



Contents

- 1 2A3N8LUMIOTENO **lumioteno**
- 2 Technical specifications
- 3 Instructions
- 4 Tips
- 5 Maintenance and care
- **6 FCC regulatory conformance**
- 7 RF Exposure
- 8 Documents / Resources
- 9 Related Posts



2A3N8LUMIOTENO lumioteno



Technical specifications

• Dimensions: 5 (13cm) diameter x 2 4" (7cm) height

• Weight: Approx. 1.6 lbs (725 g)

· Shell material: Cast resin and natural sand

Inner body material: High-grade acoustics fabric

• Bluetooth: Version 5.0

Speaker configuration: 1X 45mm full-range driver and I passive radiator

Amplifier: 20W class-D amplifier
Frequency range: 40-20,000 Hz

True Stereo Pairing (TWS): Available between two leno

· Microphone: Noise-cancelling microphone for great clarity

• Power: 5W (0.1W for standby)

• Battery type: Rechargeable lithium-ion

· Battery capacity: 4000 mAAh

• Speaker battery life: Up to 8 hours at 50% volume

· Light battery life: Up to 4 hours at 100% brightness

Charging: 5V/2A via USB-C charger (included)

· Charge time: 5.5 hours

Battery indicator: White (while charging)/Green (fully charged)

· Light source/brightness: High-output LED/250 lumen

· Light temperature: 2700k (soft warm white)


• Brightness levels: 25/50/75/100%

 Recommended room size: 5-20 m; 50-200 ft?, small social gatherings, in the office and mid-sized rooms around the home

For further product information and warranty, visit hellolumio.com/pages/my-teno.

Instructions

Your Teno is controlled via touch. Separate two halves slightly to turn on light. Fully separate to turn on speaker.

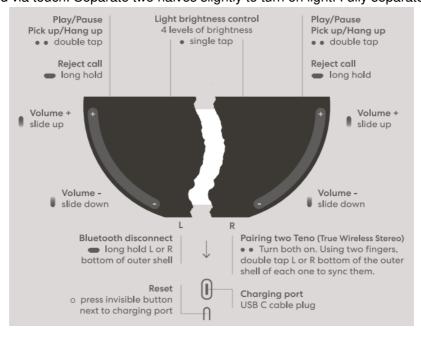

Tips

Sound indicators

Chime: Speaker on/off

Bird chirping: Bluetooth connected to your device

Wings fluttering: Bluetooth disconnected

Water drops: Low battery

Light

Tap the center top surface to activate the dimmer. There are four levels of brightness to choose from.

Volume

Slide two fingers up and down along the curve of the bowl to adjust volume.

Speaker

Tap the top surface closer to the edge to receive or end a call.

Reset

Closing and re-opening Teno will resolve most issues. If that doesn't work, hard re-set the system by pressing the reset button.

Bluetooth disconnect

If you don't see "Teno" on your phone, ensure that Teno is not connected to another device. Disconnect first. If connection problems continue, try closing and re-opening Teno.

Maintenance and care

For fabric, wipe dust off the surfaces using a dry, soft cloth. Do not use liquid or aerosol cleaners. To remove stains or dirt, we recommend using melamine sponge cleaner (also known as a magic eraser) or a soft, damp cloth and a solution of water and mild detergent, such as washing-up liquid. For the outer shell, gently wipe the shell using a soft, dry cloth. Use a brush with soft bristles for dust removal in grooves or crack areas. Do not spray water or cleaner directly onto the surface.

Scan me

Point your camera at this QR code for a Teno instructional video.



FCC regulatory conformance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause Iharmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF Exposure

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Documents / Resources

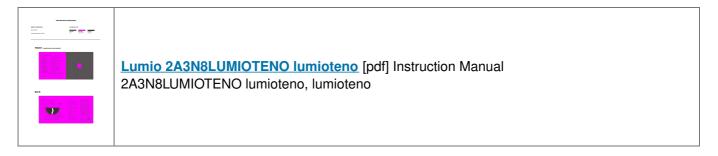

Manuals+.