

LumiTEK

**LumiTEK
LMT0008
Remote
Control Terror
Tower**



LumiTEK LMT0008 Remote Control Terror Tower Instruction Manual

[Home](#) » [LumiTEK](#) » LumiTEK LMT0008 Remote Control Terror Tower Instruction Manual 

Contents

- [1 LumiTEK LMT0008 Remote Control Terror Tower](#)
- [2 HOW TO EXTEND/RETRACT THE LEGS](#)
- [3 HOW TO CORRECT WHEEL ALIGNMENT](#)
- [4 HOW TO MAINTAIN YOUR RC CAR](#)
- [5 TROUBLE-SHOOTING GUIDE](#)
- [6 LIMITED 30 DAY WARRANTY](#)
- [7 IMPORTANT SAFETY INFORMATION](#)
- [8 IMPORTANT BATTERY INFORMATION](#)
- [9 FCC](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

 
LumiTEK

LumiTEK LMT0008 Remote Control Terror Tower




HOW TO EXTEND/RETRACT THE LEGS

Each leg face displays three buttons that can be pressed to unlock the current position and either extend or retract the leg. The current position will define which button must be pressed to move to the next position. There are three possible positions for each leg.

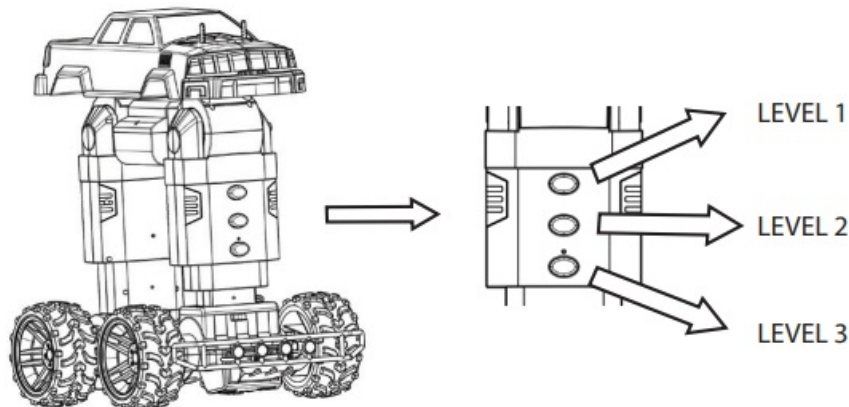


When the truck legs are fully retracted, the LEVEL 1 button must be pressed and while being pressed, use your other hand to extend the first level until you hear a click sound. You can now release the button. To extend the next level, you need to press the LEVEL 2 button and perform the same operation. Once the leg is fully extended, the reverse operation can be performed, first starting with LEVEL 3 to retract to the middle level and then by pressing LEVEL 2 to come back to fully retracted mode.

 The positions below are just a few examples of what is possible with your LUMITEK RC™ TERROR TOWER. Try every possible combination to have more fun with your monster truck and even share on social media to impress your friends!

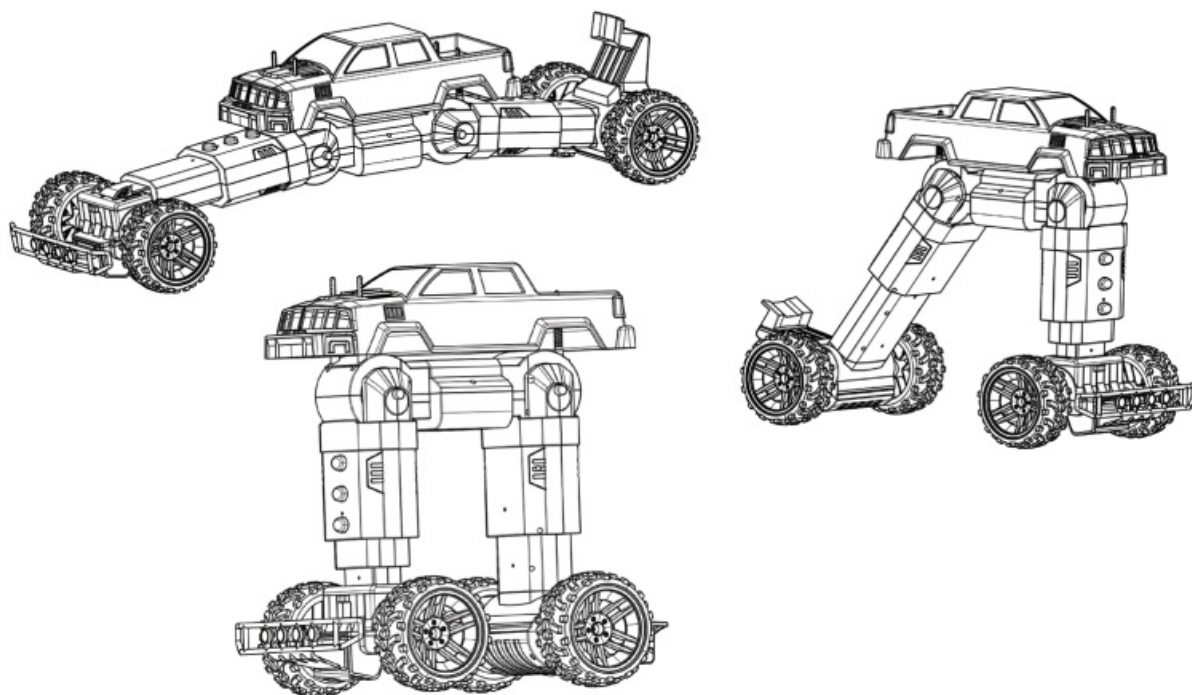

HOW TO CORRECT WHEEL ALIGNMENT

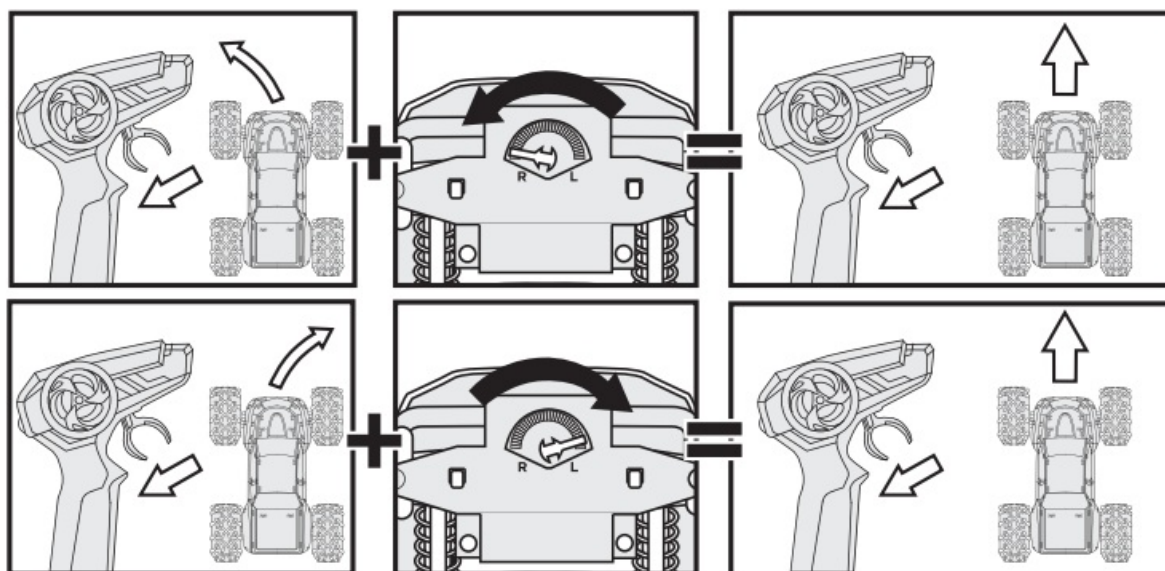 

Under your LUMITEK RC™ TERROR TOWER is located a pin that you can turn in order to adjust the wheel alignment if you find out that your truck does not drive straight when not turning the wheel. Check the diagrams above to find out how to adjust on the right or on the left.

HOW TO MAINTAIN YOUR RC CAR



It is important to take care of your LUMITEK RC™ TERROR TOWER. Although it generally requires low maintenance, a few recommendations can be followed to keep using your truck for a long time. Please check each illustration above to better understand what to and what not to do with your RC truck.

TROUBLE-SHOOTING GUIDE

PROBLEM	ACTION
Vehicle does not run	Make sure battery pack in the car is fully charged and the controller has new batteries and installed following proper (+) & (-) battery placement.
	Make sure you followed instructions in section "HOW TO CONNECT THE CONTROLLER" in order to pair correctly the vehicle and the remote controller.
	Avoid high-frequency interference occurring near to high-voltage lines, transformers and some types of building.
	Make sure that no part is damaged. If any, please contact us at customerservice@wecooltoys.com
Battery does not charge	Make sure you followed instructions in section "HOW TO CHARGE". If still not working, please contact us at customerservice@wecooltoys.com
Vehicle runs intermittently	Replace batteries in the joystick remote control and charge the car's battery pack. Weak batteries will severely limit the normal transmitting range of your controller.
The light piping does not work	Make sure battery pack in the car is fully charged and the controller has new batteries and installed following proper (+) & (-) battery placement.
	Disconnect the current light piping and replace it with the extra one. In case it still does not work, please contact us at customerservice@wecooltoys.com
Vehicle does not run straight	Correct the wheel alignment by following instructions in section "HOW TO CORRECT WHEEL ALIGNMENT".

vice@wecooltoys.com

LIMITED 30 DAY WARRANTY

CAUTION: Changes or modifications to this product not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

WeCool Toys Inc. warrants to the original consumer purchaser, that this product is thoroughly tested and inspected before shipment and is guaranteed to be free of factory defects in materials and workmanship for thirty

(30) days, unless specified in alternate warranties, from the date of purchase. In the event of such a defect within the warranty period, WeCool Toys., at our sole option, will repair or replace the product or provide you with another product of equal value. The warranty is valid if and only if the product has been operated by the instructions. This warranty does not cover worn or defective batteries, damage resulting from neglect, unauthorized modification, accident, misuse, abuse, any action or omission which constitutes a deviation from the instructions or from the use of accessories or parts not manufactured by WeCool Toys Inc. If the product is returned without a dated sales receipt the product is excluded from coverage under this warranty. WeCool Toys Inc's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole option, and in no event shall we be responsible for accidental, consequential, or contingent damages, except in those states that do not allow this exclusion or limitation, or refunds. This warranty is exclusive, and is made instead of any express or implied warranty. This warranty is valid only for products sold in the U.S.A. WeCool Toys Inc... reserves the right to improve the design of any product without assuming any obligation to modify any product previously manufactured. If you have a problem, please contact our Customer Care Center.

IMPORTANT SAFETY INFORMATION

- Keep hands, hair and loose clothing away from the wheels when power switch is turned ON. – Turn off controller and vehicle when not in use. – Remove battery(s) from controller when not in use. – Parental guidance is recommended. – New alkaline batteries are recommended for use in controller to obtain maximum performance. – Users should keep strict accordance with the instruction manual while operating the product. – Your controller/charger is tailor-made for the Lithium rechargeable battery used in your vehicle. Do not use it to charge any battery other than that in the vehicle.
- Parental guidance is recommended when installing or replacing batteries. Under the environment with electrostatic discharge. The toy may malfunction and require user to reset the toy.

IMPORTANT BATTERY INFORMATION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if designed to be removed).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries should always be replaced by an adult.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery (ies) safely.

Contains a rechargeable and removable Lithium-Ion battery pack.

PRODUCT BATTERY REMOVAL INSTRUCTIONS

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or type of batteries (i.e alkaline/standard/rechargeable). Using rechargeable batteries is not recommended due to possible reduced performance. Replaceable-rechargeable batteries are to be removed from the toy before being charged. DO NOT recharge non-rechargeable batteries. DO NOT short-

circuit the supply terminals.



Contains Lithium-ion battery pack. Battery pack must be recycled or disposed of properly. If at any time in the future you should need to dispose of this product please note that Waste Electrical Products should NOT be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive).

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This toy produces flashes that may trigger epilepsy in sensitised individuals.

 
WARNING: CHOKING HAZARD – Small parts.



Not suitable for children under 3 years old.



Documents / Resources

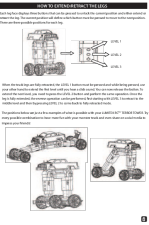

[LumiTEK LMT0008 Remote Control Terror Tower](#) [pdf] Instruction Manual
LMT0008 Remote Control Terror Tower, LMT0008, Remote Control Terror Tower, Control Terror Tower, Terror Tower, Tower

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.