



## LUMME LU-1845 Food Processor User Manual

[Home](#) » [LUMME](#) » LUMME LU-1845 Food Processor User Manual 

# LUMME


LU-1845  
Food Processor  
User manual



## Contents

- 1 Description
- 2 BEFORE THE FIRST USE
- 3 INSTRUCTION FOR USE
- 4 PREPARING THE INGREDIENTS
- 5 CLEANING AND MAINTENANCE
- 6 Documents / Resources
  - 6.1 References
- 7 Related Posts

## Description

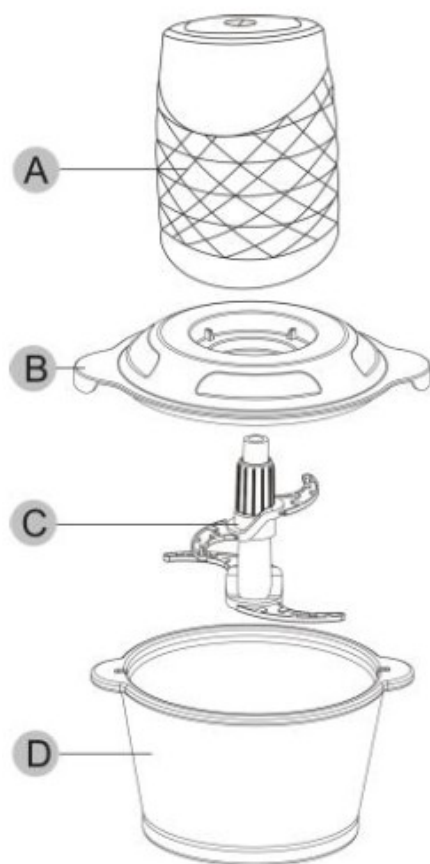

A Motor unit B Lid of the cup	C Chopper blade D Chopper cup
----------------------------------	----------------------------------

Real set of the appliance could be different from listed in the User manual. Check once buy.

## CAUTION

- Read this manual carefully before using the appliance and save it for future reference.
- Before the first use, check the device specifications and the power supply in your network.
- It is not intended for industrial use.
- For indoor use only. Use only for domestic purposes according to the instruction manual.
- Keep the power cord away from sharp edges and hot surfaces.

- Do not pull the cord. Always take the socket. Do not reel the cord around the device housing.
- Never attempt to frame and repair the appliance by yourself. If you meet problems, please contact the nearest customer service center.
- Using accessories or replacement parts that are not recommended or sold by the manufacturer may cause damage to the appliance.
- Always unplug the appliance and let it cool down before cleaning and removing parts. Keep unplugged when not in use.
- To avoid electric shock and fire, do not immerse in water or other liquids. If this occurs, immediately unplug it and contact service center for inspection.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Be cautious when using blade
- Every time after use, make sure the appliance is turned off, the blades stopped completely. Only then open the lid.
- Do not overload the appliance. The appliance is designed for processing relatively small quantities of food and maximum quantities given in the table should not be exceeded.
- Never blend hot liquids!
- Maximum time of continuous operation – no more than 1 minute with an interval for at least 5 minutes.

## **BEFORE THE FIRST USE**

- Please unpack your appliance and remove all packing materials
- As with all appliances for the preparation of foodstuffs, it is advisable to clean those parts, which come into contact with food before using for the first time.
- Do not immerse motor unit into water.

## **INSTRUCTION FOR USE**

### **CHOPPING**

- Place the container on a flat steady surface.
- Place the cutting blade on the drive spindle and put them into the container.
- Load the food items for chopping into the container.  
Note: Never fill the container over the Max mark on scale.
- Place the container lid on top of the container, then place the motor unit.
- Insert the plug into power supply.
- Press the On/ Off button to start chopping. The appliance will run as long as the button is kept pressed.

**CAUTION:** For most kinds of food, it is advisable to press the On/Off button momentarily a few times in succession and then to continue operating until the required degree of fineness has been achieved. Do not overload the appliance by putting in too much food and do not operate continuously for more than one minute.

## **PREPARING THE INGREDIENTS**

To avoid damage of blade, do not process, crush or grid hard items such as frozen food, ice, cereals, rice, spices and coffee.

Type of food	Preparation	Max amount at one time	Time approximate
Meat	Remove skin, bones and sinew, cut into 1 cm pieces	150 g	15 sec.
Fish	Remove bones and skin, cut into 2 cm cubes	150 g	15 sec.
Onions	Peel and cut into 2-3 cm pieces	150 g	15 short bursts
Garlic	Peel	125 g	10 short bursts
Apple (raw)	Peel, remove cores and cut into 2 cm pieces	150 g	10-15 sec.
Carrots	Peel and cut into 2 cm pieces	150 g	10-15 sec.
Cabbage	Remove the core and cut into 2 cm pieces	100 g	10 sec.
Peanuts	Remove the shell	100 g	20 sec.
Bread	Cut into 2 cm pieces	40 g	10 sec.

## CLEANING AND MAINTENANCE

- Unplug the appliance from the power supply.
- Clean the container after each use.
- Wipe the motor outside with a damp cloth.
- Do not use aggressive and abrasive agents.
- After washing polish all pieces with dry cloth.

**CAUTION:** The blades are sharp and therefore dangerous. Handle with caution.

## STORAGE

- Before storing, dry thoroughly the container, container lid, cutting blade.
- Store the appliance in a cool, dry place.

## WARRANTY DOES NOT COVER SUPPLIES (filters, ceramic and non-stick coating, rubber seals, etc.)

Production date is available in the serial number located on the identification sticker on the gift box and/or on sticker on the device. The serial number consists of 13 characters, the 4th and 5th characters indicate the month, the 6th and 7th indicate the year of device production.

Producer may change the complete set, appearance, country of manufacture, warranty and technical characteristics of the model without notice. Please check when purchasing device.


### Producer:

Cosmos Far View International Limited  
Room 701, 16 apt, Lane 165, Rainbow North Street , Ningbo, China

**Made in China**



## Documents / Resources

 <p>LUMME LU-1845 FOOD PROCESSOR USER MANUAL</p>	<p><a href="#">LUMME LU-1845 Food Processor</a> [pdf] User Manual LU-1845 Food Processor, LU-1845, Food Processor, Processor</p>
---	--

## References

-  [Интернет-магазин Lumme](#)